



LASERJET PROFESSIONAL M1130/M1210

MFP SERIES

Software Technical Reference



Additional product information:

www.hp.com/support/ljm1130series
www.hp.com/support/ljm1210series



HP LaserJet Professional M1130/M1210 MFP Series Printers

Software Technical Reference

Copyright and license

©2010 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 1, 3/2010

Trademark Credits

Adobe®, Acrobat® and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Microsoft®, Windows® and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Windows Vista™ is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

UNIX® is a registered of The Open Group.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.

Table of contents

1 Purpose and scope	1
Introduction	2
Product comparison	3
Product features	4
Product views	6
Front view	6
M1130 Series	6
M1210 Series	7
Back view	8
M1130 Series	8
M1210 Series	9
Serial number and model number location	10
Control-panel layout	11
M1130 Series	11
M1210 Series	12
Printing-system software	13
Operating-system support	13
Supported operating systems for Windows	13
Supported printer drivers for Windows	14
Supported utilities for Windows	14
HP Embedded Web Server (M1210 Series only)	14
HP Toolbox	14
Supported operating systems for Macintosh	15
Supported printer drivers for Macintosh	15
Supported utilities for Macintosh	15
HP LaserJet Utility	15
Embedded Web Server	16
Availability and localization	16
Software component availability for Windows and Macintosh	16
Printing-system software on the Web	17
In-box printing-system software CD	17
Printing-system software CD	17
CD Versions	18
Documentation	23

Printing-system software CD	24
Main CD browser screen	24
User Documentation	25
HP LaserJet Help Navigation	25
User Guide	33
More Information	34

2 Software description 37

Windows printing-system software	38
Supported operating systems for Windows	38
Windows system requirements	38
Macintosh system requirements	39
Printer driver	39
Select the correct printer driver for Windows	39
Priority for print settings	39
Change printer-driver settings for Windows	40
Printing system and installer	41
Printing-system software CD for Windows systems	41
Installer features	42
Driver version numbers for Windows operating systems	42
HP Driver Diagnostic Printer Check Tool	44
Embedded Web Server M1210 Series only	45
HP ToolboxFX	46
HP ToolboxFX overview	46
Starting HP ToolboxFX	46
Structure	46
Opening screen	47
System requirements	47
HP ToolboxFX folders	47
Device Status	48
Help folder	48
User Guide	49
Readme	49
Fax folder	49
Fax Tasks pane	50
Fax Phone Book pane	50
Fax Send Log pane	52
Fax Receive Log pane	53
Fax Data Properties pane	55
Other Links	55
Product Support	55
Shop for Supplies	55
Product Registration	55

3	Install Windows printing-system components	57
	Supported operating systems for Windows	58
	Windows operating system requirements	58
	Install overview	58
	Software installation types for Windows	58
	Installation options	59
	Microsoft Windows general installation overview	60
	HP LaserJet Professional M1130/M1210 MFP Series printing-system software for Windows systems	60
	USB installation	60
	CD installation	60
	Install the print driver using the Microsoft Add Printer Wizard	61
	Use an existing port for a direct connection	63
	Create a new TCP/IP port for a direct connection	68
	Print server connection	71
	Detailed MS Windows installation instructions	75
	Install the Host-based driver using HP Smart Install	75
	Install the print driver for USB and wired network connected products	75
	EWS Smart Install (M1210 Series only)	77
	Install the Host-based driver from the CD	81
	Install the print driver from the CD for USB connected products	81
	Install the print driver from the CD for wired network connected products	88
	Install the HP LaserJet Professional M1130/M1210 MFP Series XPS driver	96
	New driver install	96
	Existing driver install	104
	Use the Back, Next, Finish, and Cancel buttons	112
	Set a default printer	113
	Uninstall software	114
	Uninstall the Host based driver	114
	Use the HP Uninstall utility (recommended)	114
	Use Windows Add or Remove Programs feature	114
	Uninstall the XPS driver	115
4	HP host based print driver for Windows	117
	Introduction	117
	Gain access to print drivers	118
	Printing Preferences driver tabs	118
	Properties driver tabs	119
	Help system	120
	“What's this?” Help	120
	Incompatible Print Settings messages	120
	Advanced tab features	121
	Print Tasks Quick Sets	121

Copies	122
Copies	122
Printer Features	122
Document preview image	122
Paper/Quality tab features	124
Print Tasks Quick Sets	124
Paper Options	125
Size is	125
Custom Paper Size	126
Name	126
Size	127
Units	127
Custom width and height control limits	127
Use the short media extender tool	127
Use Different Paper/Covers	127
Source is	128
Type Is	129
Document preview image	129
Print Quality	130
Print Quality drop-down menu	130
EconoMode check box	130
Effects tab features	131
Print Tasks Quick Sets	131
Resizing Options	132
Actual size	132
Print document on	132
Scale to fit	132
% of normal size	133
Document preview image	133
Watermarks	134
Watermark Details	135
Current Watermarks	135
Watermark Message	136
Message Angle	136
Font Attributes	136
Default watermark settings	137
Finishing tab features	138
Print Tasks Quick Sets	138
Document Options	139
Print on both sides manually	139
Flip pages up	140
Booklet Printing	141
Book and booklet printing	141
Pages per sheet	141

Print page borders	141
Page order	142
Document preview image	142
Orientation	142
Services tab features	144
Internet Services	144
Print Information Pages	145
Device Settings	146
Duplex Mode	147
Jam Recovery	147
Status Messages	147
Cleaning Page	148
Print Density	148
Auto-Off Console	148
5 Macintosh software and utilities	149
Supported operating systems for Macintosh	150
Macintosh system requirements	150
Hardware requirements	150
Macintosh printing-system software	150
HP LaserJet Professional M1130/M1210 MFP Series PPD	150
HP LaserJet Professional M1130/M1210 MFP Series PDE	151
HP USB EWS Gateway	151
HP LaserJet Utility	151
Supported printer drivers for Macintosh	151
Priority for print settings for Macintosh	151
Change printer-driver settings for Macintosh	152
Software for Macintosh computers	152
HP LaserJet Utility	152
Open the HP LaserJet Utility	152
Embedded Web Server	152
Availability	152
Printing-system software on the Web	153
In-box printing-system software CD	153
Macintosh partition	153
Macintosh install and uninstall instructions	154
Install the Macintosh printing-system software	154
General installation for Macintosh operating systems	154
Detailed Mac OS X installation	154
Setup instructions	164
Setting up a printer with Mac OS X V10.4, V10.5, and V10.6	165
Troubleshooting the product setup	165
Remove the printing-system software from Macintosh operating systems	166

6 Engineering Details 167

 Introduction 167

 Firmware update 168

 Determining the current level of firmware 168

 Download the Firmware Update Utility from the HP Web site 168

 Run the Firmware Update Utility 169

 Media attributes 170

 Driver-supported paper sizes 170

 Driver-supported paper types 171

 Custom paper sizes 172

Index 173

List of tables

Table 1-1	HP LaserJet Utility features	16
Table 1-2	Software component availability	16
Table 1-3	Supported printing-system components (AR-ET)	19
Table 1-4	Supported printing-system components (FI-LT)	20
Table 1-5	Supported printing-system components (LV-SL)	21
Table 1-6	Supported printing-system components (SR-ZHT)	21
Table 1-7	Status-light legend	28
Table 1-8	Control-panel light patterns	28
Table 4-1	Host based driver custom paper sizes	127
Table 4-2	Font Attribute settings for new and preset watermarks	137
Table 4-3	Page orientation	140
Table 6-1	Supported paper and print media sizes	170
Table 6-2	Supported envelopes and postcards	170
Table 6-3	Host-based print driver custom paper sizes	172

List of figures

Figure 1-1	Printing-system software CD – main browser screen	24
Figure 1-2	View User Guide screen	25
Figure 1-3	More Information screen	34
Figure 2-1	Installation software CD Browser	41
Figure 2-2	HP ToolboxFX Status folder – Device Status pane	48
Figure 2-3	HP ToolboxFX Help folder – Troubleshooting pane (1 of 2)	49
Figure 2-4	HP ToolboxFX Fax folder	50
Figure 2-5	HP Toolbox FX Fax folder – Fax Tasks pane	50
Figure 2-6	HP Toolbox FX Fax folder – Fax Phone Book pane	51
Figure 2-7	HP Toolbox FX Fax folder – Fax Send Log pane	53
Figure 2-8	HP Toolbox FX Fax folder – Fax Receive Log pane	54
Figure 2-9	HP ToolboxFX Fax folder – Fax Data Properties pane	55
Figure 3-1	CD Browser – Main screen	61
Figure 3-2	Add Printer Wizard – Local or Network Printer screen	62
Figure 3-3	Add Printer Wizard — Select a Printer Port screen	63
Figure 3-4	Add Printer Wizard — Install Printer Software screen	64
Figure 3-5	Add Printer Wizard — Install from Disk screen	64
Figure 3-6	Add Printer Wizard — Install Printer Software, screen 2	65
Figure 3-7	Add Printer Wizard — Name Your Printer screen	66
Figure 3-8	Add Printer Wizard — Printer Sharing screen	67
Figure 3-9	Add Printer Wizard — Print Test Page screen	67
Figure 3-10	Select a Printer Port screen	68
Figure 3-11	Add Advanced TCP/IP Printer Port screen	69
Figure 3-12	Add Port screen	70
Figure 3-13	Add Printer Wizard — Local or Network Printer screen	71
Figure 3-14	Add Printer Wizard — Specify A Printer screen	72
Figure 3-15	Add Printer Wizard — Find Printers screen	73
Figure 3-16	Add Printer Wizard — Default Printer screen	73
Figure 3-17	Add Printer Wizard — Browse for Printer screen	74
Figure 3-18	Welcome to HP Smart Install screen	75
Figure 3-19	Printer Connections screen	76
Figure 3-20	Congratulations! Software installation complete	77
Figure 3-21	Software Installation — Initial screen	82
Figure 3-22	Choose Easy Install or Advanced Install screen	83

Figure 3-23	Select Printer screen	84
Figure 3-24	Configure to print using USB screen (part 1)	85
Figure 3-25	Configure to print using USB screen (part 2)	86
Figure 3-26	Software installation complete screen (part 1)	87
Figure 3-27	Software installation complete screen (part 2)	88
Figure 3-28	Software Installation — Initial screen	89
Figure 3-29	Choose Easy Install or Advanced Install screen	90
Figure 3-30	Select Printer screen	91
Figure 3-31	Identify Printer screen	92
Figure 3-32	Printers Found screen.	93
Figure 3-33	Confirm Settings screen	94
Figure 3-34	Software installation complete screen (part 1)	95
Figure 3-35	Software installation complete screen (part 2)	96
Figure 3-36	Welcome to the HP Smart Install Utility screen	97
Figure 3-37	HP Smart Install Printer Configuration screen	98
Figure 3-38	HP Smart Install currently Enabled screen	98
Figure 3-39	HP Smart Install currently Disabled screen	99
Figure 3-40	Welcome to the Found New Hardware Wizard screen	100
Figure 3-41	Locate File dialog window	103
Figure 3-42	Add Printer Wizard	105
Figure 3-43	Local or Network Port screen	106
Figure 3-44	Select a Printer Port screen	107
Figure 3-45	Install Printer Software screen	108
Figure 3-46	109
Figure 3-47	Use Existing Driver screen	110
Figure 3-48	Name Your Printer screen	111
Figure 3-49	Completing the Add Printer Wizard screen	112
Figure 3-50	Installation Cancelled dialog box	112
Figure 3-51	Uninstall	115
Figure 4-1	An Incompatible Print Settings message	120
Figure 4-2	The default appearance of the Advanced tab	121
Figure 4-3	Paper/Quality tab	124
Figure 4-4	Paper Options group box	125
Figure 4-5	Custom Paper Size dialog box	126
Figure 4-6	Effects tab	131
Figure 4-7	Preview images – Legal on Letter; Scale to Fit off (left) and on (right)	133
Figure 4-8	Watermark Details dialog box	135
Figure 4-9	Finishing tab	138
Figure 4-10	Print on Both Sides Instructions dialog box	140
Figure 4-11	Page-order preview images	142
Figure 4-12	Services tab	144
Figure 4-13	Device Settings tab - M1212nf model shown	146
Figure 5-1	Introduction screen	155
Figure 5-2	Software License Agreement screen	156

Figure 5-3	Agree/Disagree screen	156
Figure 5-4	Product Select screen	157
Figure 5-5	Select a Destination screen	158
Figure 5-6	Select a Destination screen	159
Figure 5-7	Standard Install on “Mac HardDrive” screen	160
Figure 5-8	HP Setup Assistant screen	160
Figure 5-9	HP Setup Assistant screen	161
Figure 5-10	HP Firmware Upgrade Utility — Introduction screen	161
Figure 5-11	HP Firmware Upgrade Utility — Select Device screen	162
Figure 5-12	HP Firmware Upgrade Utility — Finish-Up screen	163
Figure 5-13	HP Director main screen	163
Figure 5-14	HP Director scan settings	164
Figure 6-1	Firmware Update Utility. List of available printers shown screen.	169
Figure 6-2	Firmware update successful screen.	169

1 Purpose and scope

Introduction

This software technical reference (STR) provides information about and troubleshooting tips for the printing-system software for the product.

This STR is prepared in an electronic format to serve as a quick-reference tool for Customer Care Center (CCC) agents, support engineers, system administrators, management information systems (MIS) personnel, and end users, as appropriate.



NOTE: This STR describes drivers that are available from the product firmware and shipped on the printing-system software CD that comes with the product. This STR does *not* describe drivers that will become available on the Web.

The following information is included in this STR:

- Descriptions of drivers, operating systems, and system environments
- Procedures for installing and uninstalling the printing-system software components

For information about the location of information within chapters, see the table of contents. An index is also provided in this STR.

Additional detailed information about the printing-system software is published in an addendum to this STR. The following information is available in the addendum:

- Lists of installed files
- System-modification information, such as files added or modified

Product comparison

The product is available in the following configurations.



M1130 Series



M1210 Series

- | M1130 Series | M1210 Series |
|--|---|
| <ul style="list-style-type: none">• Prints letter-size pages at speeds up to 19 pages per minute (ppm) and A4-size pages at speeds up to 18 ppm.• The input tray holds up to 150 sheets of print media or up to 10 envelopes.• The output bin holds up to 100 sheets• 2-digit LED control-panel display• Manual two-sided (duplex) printing and copying.• Copy from the flatbed scanner• Full-color scanning• Hi-Speed USB 2.0 port.• 8-MB random-access memory (RAM). | <ul style="list-style-type: none">• Prints letter-size pages at speeds up to 19 pages per minute (ppm) and A4-size pages at speeds up to 18 ppm.• The input tray holds up to 150 sheets of print media or up to 10 envelopes.• The output bin holds up to 100 sheets• LCD control-panel display• Copy from the flatbed scanner or from the document feeder• Full-color scanning• Hi-Speed USB 2.0 port.• Integrated networking for connecting to a 10/100Base-TX network.• V.34 fax modem and 500 Slerex pages.• Two RJ-11 fax/phone cable ports.• 64-MB random-access memory (RAM).• 35-page document feeder. |

Product features


Print	<ul style="list-style-type: none"> • Prints letter-size pages at speeds up to 19 ppm and A4-size pages at speeds up to 18 ppm. • Prints at 400x600x2 dots per inch (dpi) with FastRes 600 (default). Supports FastRes 1200 at 600x600x2 dpi for high-quality printing of text and graphics. • Includes adjustable settings to optimize print quality.
Copy	<ul style="list-style-type: none"> • Scans at 300 pixels per inch (ppi) and prints with FastRes 600. • Easily change the number of copies, adjust the lightness or darkness, or reduce or enlarge the size of copies from the control panel. • ID Copy feature copies both sides of identification cards, or other small-size documents, onto the same side of one sheet of paper. M1210 Series only.
Scan	<ul style="list-style-type: none"> • Provides up to 1200 pixels per inch (ppi) full-color scanning from the flatbed scanner. • Provides up to 300 ppi full-color scanning from the document feeder. • Scan from TWAIN-compliant or Windows Imaging Application (WIA)-compliant software. • Scan from a computer by using HP LaserJet Scan software for Windows or by using HP Director software for Mac.
Fax (M1210 Series only)	<ul style="list-style-type: none"> • Full-functionality fax capabilities with a V.34 fax; includes a phone book and delayed-fax features. • Stores up to 500 pages in memory. • Recovers faxes from memory for up to four days following a power failure.
Supported operating systems	<ul style="list-style-type: none"> • Windows 7 (32-bit and 64-bit) • Windows Vista (32-bit and 64-bit) • Windows XP (32-bit and 64-bit) • Mac OS X 10.4, 10.5, 10.6 • Windows Server 2003 (32-bit and 64-bit) • Windows Server 2008 (32-bit and 64-bit)
HP Smart Install	Allows easy installation of the product printing software from the product firmware via a USB or network connection.
Memory	<ul style="list-style-type: none"> • M1130 Series: Includes 8-megabyte (MB) random-access memory (RAM). • M1210 Series: Includes 64-MB RAM.
Paper handling	<ul style="list-style-type: none"> • The input tray holds up to 150 sheets of paper or 10 envelopes. • The document feeder holds up to 35 sheets of paper. • The output bin holds up to 100 sheets of paper.
Printer driver features	<ul style="list-style-type: none"> • Print multiple pages on one sheet. • Print booklets. • Scale to fit different paper sizes. • Print cover pages on different paper.

Interface connections	<ul style="list-style-type: none"> • Hi-Speed USB 2.0 port. • RJ-45 network port. (M1210 Series only) • Two RJ-11 fax/phone cable ports. (M1210 Series only)
Economical printing	<ul style="list-style-type: none"> • N-up printing (printing more than one page on a sheet) and the manual two sided printing features save paper. • EconoMode printer driver feature saves toner. • Auto-Off mode allows the product to automatically reduce its power consumption after a user-specified time period. The product returns to the ready state when a button is pressed or a print job is received.
Archive printing	Archive printing feature for printing pages that you plan to store for a long time.
Supplies	<ul style="list-style-type: none"> • Authentication for genuine HP print cartridges. • Easy ordering for replacement supplies. • Supplies status page shows estimated toner level in the print cartridge. Not available for non-HP supplies.
Self-help	Quick-reference pages available from www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series .
Accessibility	<ul style="list-style-type: none"> • All doors and covers can be opened by using one hand.
Security	<ul style="list-style-type: none"> • Receptacle for a cable-type security lock.

Product views


Front view

M1130 Series

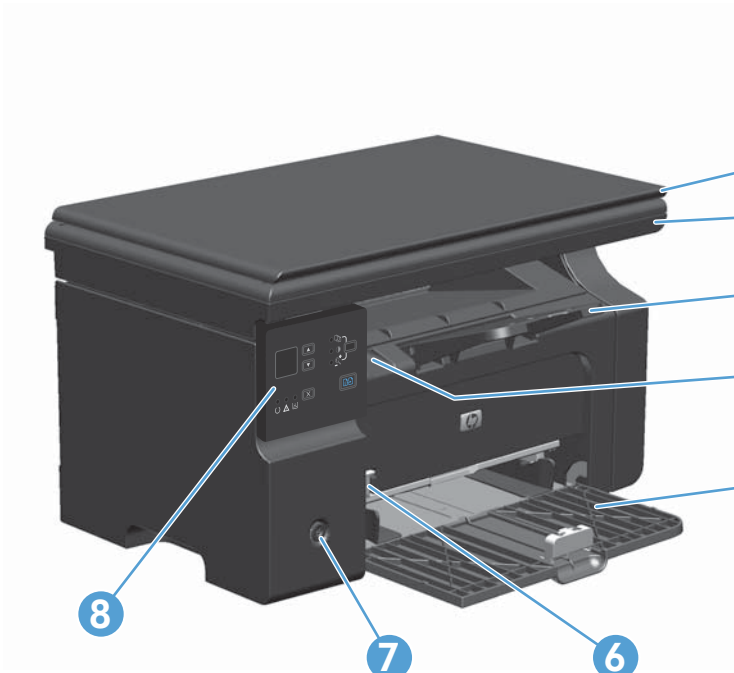

1	Scanner lid
2	Scanner assembly
3	Output bin with extension for long paper
4	Print-cartridge door lift-tab
5	Input tray
6	Short media extender tool
7	Power button
8	Control panel


M1210 Series

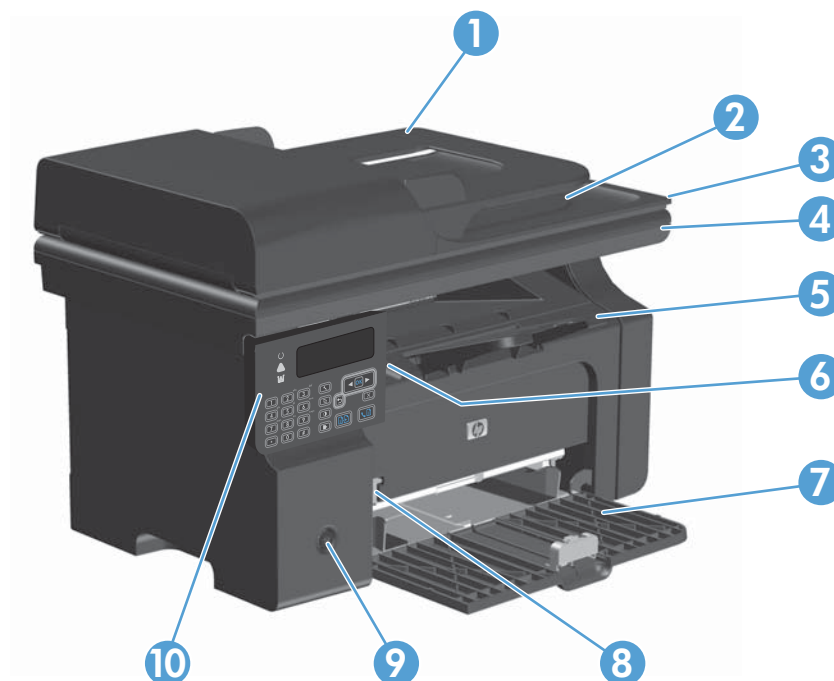

1	Document feeder
2	Document feeder output bin
3	Scanner lid
4	Scanner assembly
5	Output bin with extension for long paper
6	Print-cartridge door lift-tab
7	Input tray
8	Short media extender tool
9	Power button
10	Control panel


Back view

M1130 Series

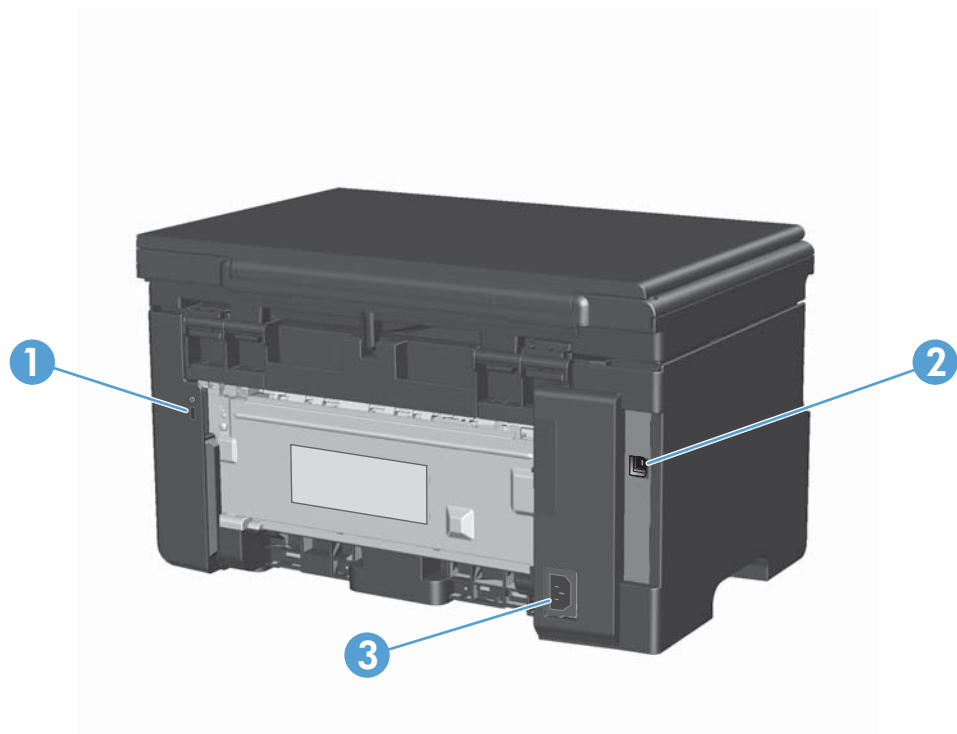

1	Slot for a cable-type security lock
2	Hi-Speed USB 2.0 port
3	Power connection


M1210 Series

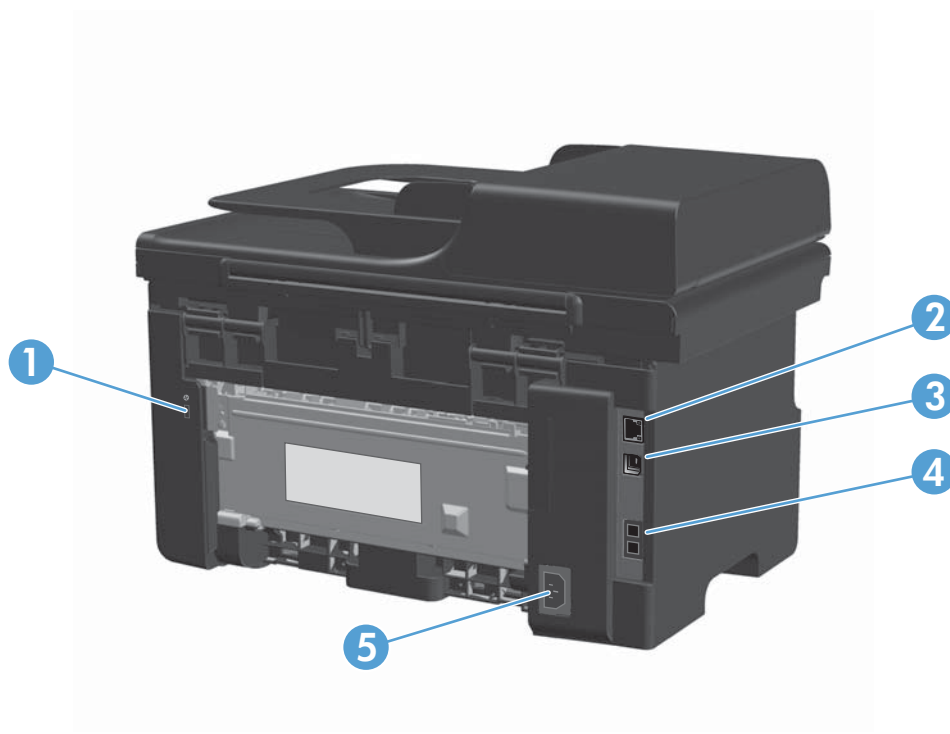

1	Slot for a cable-type security lock
2	RJ-45 network port
3	Hi-Speed USB 2.0 port
4	RJ-11 fax ports; the upper port is for a phone line, the lower port is for a telephone handset.
5	Power connection


Serial number and model number location

The serial number and product model number label is at the back of the product.

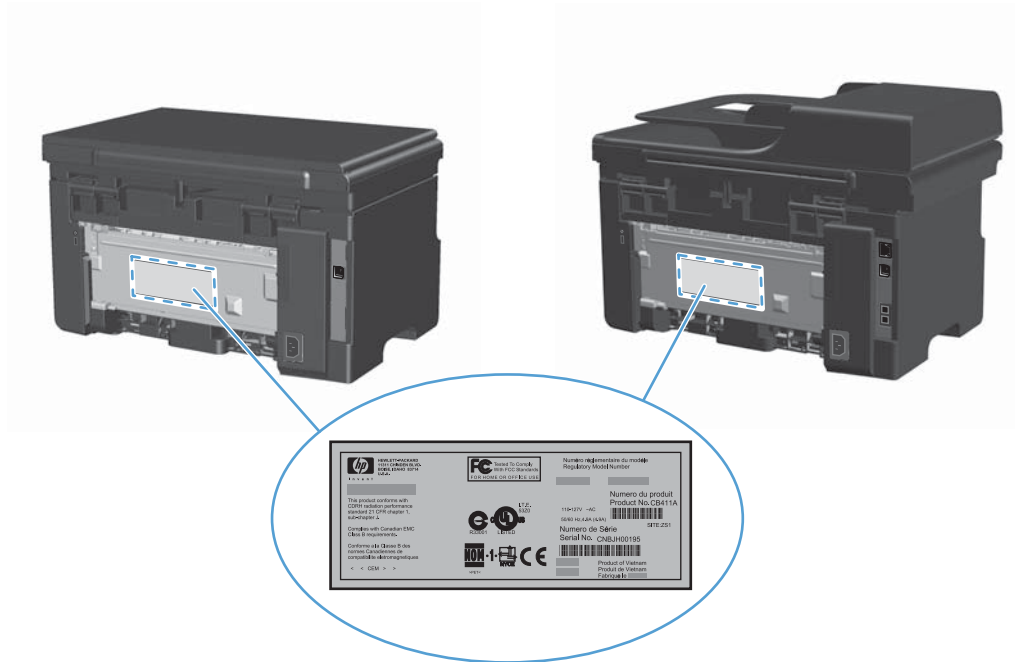


Control-panel layout

M1130 Series

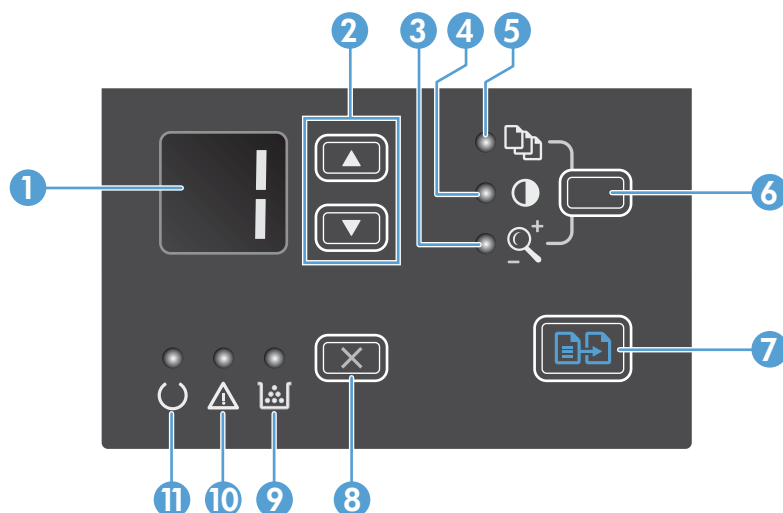

1		LED display screen: Displays the number of copies, the level of darkness for copies, and the percentage of copy-size reduction or enlargement. It also shows error codes that alert you of problems that require attention.
2	▲ ▼	Up and down arrows: Increases or decreases the number of copies, the level of darkness for copies, or the percentage of copy-size reduction or enlargement. <ul style="list-style-type: none"> Press the buttons for less than one second to increase or decrease copy settings by one increment. Press the buttons for one second or longer to increase or decrease the level of darkness to the maximum or minimum value. Press the buttons for one second or longer to increase or decrease the number of copies or the percentage of copy-size reduction or enlargement by 10 increments.
3	🔍+	Reduce/Enlarge copy light: Indicates the copy-size reduction or enlargement feature is active.
4	🌑	Darker/Lighter copy light: Indicates the copy-darkness feature is active.
5	📄	Number Of Copies light: Indicates the number-of-copies feature is active.
6	⏮	Setup button: Scrolls between the copy settings for number of copies, darkness, and copy size for each job. The default option is the number of copies. To change the default settings for all jobs, scroll to the setting and then press and hold the button for 3 seconds. When the light is blinking, adjust the setting. Press this button again to save the setting.
7	📄➡	Start Copy button: Starts a copy job.
8	✕	Cancel button: Cancels the current job, or clears the last setting you made. When the product is in the Ready state, press this button to reset the copy settings to the default values.
9	🖨	Toner-level status light: Indicates the level of toner in the print cartridge is low.
10	⚠	Attention light: Indicates a problem with the product.
11	🕒	Ready light: Indicates the product is ready or is processing a job.

M1210 Series

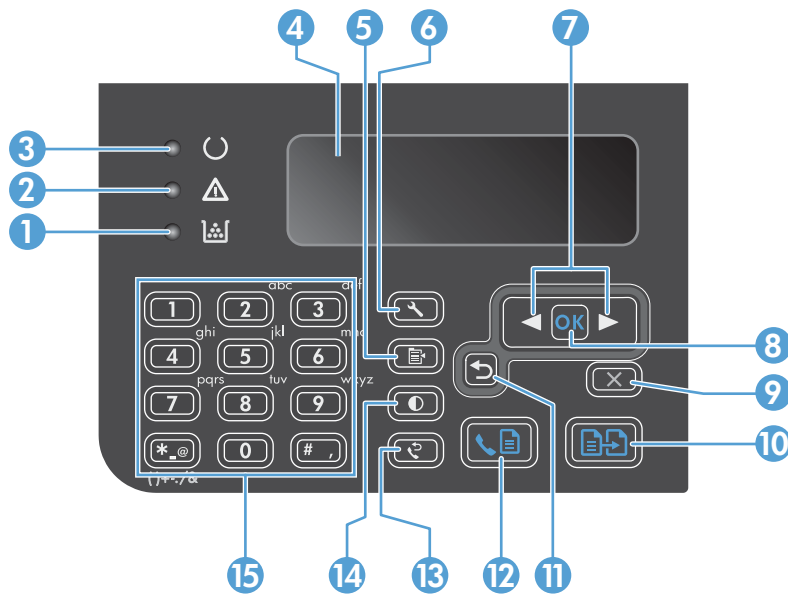

1		Toner-level status light: Indicates the level of toner in the print cartridge is low.
2		Attention light: Indicates a problem with the product. View the LCD display for a message.
3		Ready light: Indicates the product is ready or is processing a job.
4		LCD display screen: Displays status information, menus, and messages.
5		Copy Settings button: Opens the Copy Settings menu.
6		Setup button: Opens the menus.
7		Left and right arrows: Enter and navigate through the menus. Decrease or increase the current value on the screen. Move the screen cursor backward or forward one space.
8		OK button: Acknowledges a setting or confirms an action to proceed.
9		Cancel button: Cancels the current job, or clears the last setting you made. When the product is in the Ready state, press this button to reset the copy settings to the default values.
10		Start Copy button: Starts a copy job.
11		Back arrow: Returns to the previous level in the menus.
12		Send Fax button: Starts a fax job.
13		Redial button: Recalls the last digits used for the previous fax job.
14		Darker/Lighter copy button: Adjusts the darkness setting for the current copy job.
15		Numeric keypad: Use the keypad to enter fax numbers or to enter data.

Printing-system software

- [Operating-system support](#)
- [Availability and localization](#)

Operating-system support

Windows operating systems provide full-featured support for the product. Operating systems that are not described in this STR provide varying levels of functionality.

Throughout this document, Windows XP is used to denote Windows XP Home Edition and Windows XP Professional, unless noted otherwise.

Information relating to networking functions is specific to products that have network capabilities.

The printing-system software has *not* been tested with and is *not* supported in the following operating systems:

- Windows 3.1x
- Windows 95
- Windows 98
- Windows 2000
- Windows Millennium Edition (Me)
- Windows NT® 4.0
- IA-64-bit operating systems

Printer drivers for these operating systems are not included in the product firmware, on the printing-system software CD, and are not available on the Web. Other printer drivers might work with the product, but some print-driver features and functions might not be available.

For more information about the product, go to the following Web sites:

www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series

- [Supported operating systems for Windows](#)
- [Supported printer drivers for Windows](#)
- [Supported utilities for Windows](#)
- [Supported operating systems for Macintosh](#)
- [Supported printer drivers for Macintosh](#)
- [Supported utilities for Macintosh](#)

Supported operating systems for Windows

The product supports the following Windows operating systems:


- Windows XP (32-bit and 64-bit)
- Windows Server 2003 (32-bit and 64-bit)

- Windows Vista (32-bit and 64-bit)
- Windows Server 2008 (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)


Supported printer drivers for Windows

- HP LaserJet Professional M1130/M1210 MFP Series Host-based print driver
- HP LaserJet Professional M1130/M1210 MFP Series XPS print driver

The printer drivers include online Help that has instructions for common printing tasks and also describes the buttons, check boxes, and drop-down lists that are in the printer driver.

 **NOTE:** The host-based driver is the only printer driver that is included with this product; it is included in the product firmware and on the printing-system CD.

The XPS driver is available by Web download only at www.hp.com/go/ljm1130series_software or www.hp.com/go/ljm1210series_software

 **NOTE:** For more information about the UPD, see www.hp.com/go/upd.

Supported utilities for Windows

The following utilities for Windows are available for the HP LaserJet Professional M1130/M1210 MFP Series printer.

HP Embedded Web Server (M1210 Series only)

M1210 Series products are equipped with the HP Embedded Web Server (HP EWS), which provides access to information about product and network activities. This information appears in a Web browser, such as Microsoft Internet Explorer, Apple® Safari, or Firefox.

The HP EWS resides on the product. It is not loaded on a network server.

The HP EWS provides an interface to the product that anyone who has a network-connected computer and a standard Web browser can use. No special software is installed or configured, but you must have a supported Web browser on the computer. To gain access to the HP EWS, type the IP address for the product in the address line of the browser.

For a complete explanation of the features and functionality of the HP EWS, see the *HP LaserJet M1130/M1210 Series User Guide*, which is available on the printing system software CD.

HP Toolbox

HP Toolbox software is a program that you can use for the following tasks:

- Check the product status.
- Check the supplies status and use HP SureSupply to shop online for supplies.
- Set up alerts.
- View product usage reports.
- View product documentation.
- Gain access to troubleshooting and maintenance tools.

- Configure fax settings
- View PC fax jobs

You can view HP Toolbox software when the product is directly connected to your computer or when it is connected to a network.

To download HP Toolbox software, use the HP Toolbox link on the printing system software CD that appears at the end of the driver installation sequence. You can also use your Web browser to go directly to www.hp.com/go/easyprintercare. This Web site provides updated information about supported browsers, a list of HP products that support HP Toolbox software, and the *HP LaserJet Professional M1130/M1210 MFP Series User Guide*, which provides more information about using the HP Toolbox software.

Supported operating systems for Macintosh

The product supports the following Macintosh operating systems:

- Mac OS X V10.4, V10.5, and V10.6



NOTE: PPC and Intel® Core Processor Macs are supported.

Supported printer drivers for Macintosh

The HP LaserJet software installer provides PostScript® Printer Description (PPD) files, a CUPS driver, and the HP Printer Utilities for Mac OS X. The HP printer PPD file, in combination with the CUPS driver, provides full printing functionality and access to specific HP printer features.

Supported utilities for Macintosh

The following additional software is available for Macintosh for use with the HP LaserJet Professional M1130/M1210 MFP Series printer.

HP LaserJet Utility

Use the HP LaserJet Utility to set up product features that are not available in the printer driver.

You can use the HP LaserJet Utility when the product is connected with a universal serial bus (USB) cable.

Open the HP LaserJet Utility

- From the **Printer** menu, click **Printer Utility**, or
- From the **Print Queue**, click the **Utility** icon.

HP LaserJet Utility features

The HP Printer Utility consists of pages that you open by clicking in the **Configuration Settings** list. The following table describes the tasks that you can perform from these pages.

Table 1-1 HP LaserJet Utility features


Item	Description
Print information Pages	Allows you to print the following information pages. <ul style="list-style-type: none"> • Cleaning Page • Demo Page • Configuration Page • Supply Status Page • Control-Panel Reference Page
Auto-Off Console	Auto-Off is an energy-saving feature of this product. After a user-specified time period, the product automatically reduces its power consumption (Auto-Off). The product returns to the ready state when a button is pressed or a print job is received. When the product is in Auto-Off mode, all of the control-panel LEDs and the power button backlight LED are off. Although the product lights are off in Auto-Off mode, the product will work normally when it receives a print job.
HTML Config...	Open the EWS for the product (M1210 Series only).

Embedded Web Server

The product is equipped with the HP EWS, which provides access to information about product and network activities.

Availability and localization

Download the printing-system software from the Web, or order it on a CD from HP fulfillment centers.

 **NOTE:** This STR describes drivers that are included in the product firmware and are also shipped with the printing-system software CD. This document does *not* describe any drivers that might be released by support personnel.

- [Software component availability for Windows and Macintosh](#)
- [Printing-system software on the Web](#)
- [In-box printing-system software CD](#)

Software component availability for Windows and Macintosh

The following table lists the availability of printing-system software components for Windows and Macintosh computers.

Table 1-2 Software component availability

Component	Windows	Macintosh
HP Smart Install	x	
Mac Installer		x
Windows Host-based Print Driver	x	
XPS driver	x	

Table 1-2 Software component availability (continued)

Component	Windows	Macintosh
Mac OS X V10.4, V10.5, V10.6 Print Driver		x
Scan to application software	x	x
Usage tracking software	x	x
OCR application software	x	x
WIA and TWAIN driver software	x	x
Print Dialog Extensions		x
User Guide (PDF)		x
User Guide (CHM)	x	
SW Install Notes	x	
Getting Started Guide	x	x
HP LaserJet Help Navigation	x	
CD Browser	x	

Printing-system software on the Web

All software that is contained in the product firmware and on the installation CD is also available on the Web.

Web deployment is the preferred method for obtaining the latest software. The HP Web site offers an option for automatic e-mail notification about new software releases.

The printing-system software is available for download at the following Web sites:

www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series

In-box printing-system software CD

One CD is included in-box with the product. The printing-system software CD contains the following components:

- Software installer
- User guide
- Install notes
- Support information

Each CD has two partitions, one each for Windows and Macintosh computers.

The files in each partition of the printing-system software CD include documentation files and files that are required to install and uninstall the printing-system software components.

Printing-system software CD

The root directory in the Windows partition of the printing-system software CD contains the HpSetup.exe file, the setup.exe file, support files, and language specific directories.

To view the files, insert the printing-system software CD into the CD-ROM drive, right-click **Start**, click **Explore**, and then select the CD-ROM drive.

CD Versions

The printing-system software CD is available in one version and contains the printing-system software in all supported languages as follows:

CD – supported languages

- AR = Arabic
- BG = Bulgarian
- CA = Catalan (Català)
- CS = Czech (Cesky)
- DA = Danish (Dansk)
- DE = German (Deutsch)
- EL = Greek
- EN = English
- ES = Spanish (Español)
- ET = Estonian (Eesti)
- FI = Finnish (Suomi)
- FR = French (Français)
- HE = Hebrew
- HR = Croatian (Hrvatski)
- HU = Hungarian (Magyar)
- ID = Indonesia (Bahasa)
- IT = Italian (Italiano)
- KK = Kazakh
- KO = Korean
- LT = Lithuanian
- LV = Latvian
- NL = Dutch (Nederland)
- NO = Norwegian (Norsk)
- PL = Polish (Polski)
- PT = Brazilian Portuguese (Português)
- RO = Romanian

- RU = Russian (Russ)
- SK = Slovak
- SL = Slovenian
- SR = Serbian
- SV = Swedish (Svenska)
- TH = Thai
- TR = Turkish (Türkçe)
- UK = Ukrainian
- VI = Vietnamese
- ZHCN = Simplified
- ZHTW = Traditional Chinese

Table 1-3 Supported printing-system components (AR-ET)

Component	AR	BG	CA	CS	DA	DE	EL	EN	ES	ET
HP Smart Install	x	x	x	x	x	x	x	x	x	x
Mac Installer						x		x	x	
Windows Host-based Print Driver	x	x	x	x	x	x	x	x	x	x
XPS driver	x	x	x	x	x	x	x	x	x	x
Mac OS X V10.4, V10.5, V10.6 Print Driver						x		x	x	
Scan to application software (Windows)	x	x	x	x	x	x	x	x	x	x
Scan to application software (Mac)						x		x	x	
Usage tracking software	x	x	x	x	x	x	x	x	x	x
OCR application software	x	x	x	x	x	x	x	x	x	x
WIA and TWAIN driver software	x	x	x	x	x	x	x	x	x	x
Print Dialog Extensions	x	x	x	x	x	x	x	x	x	x
User Guide (PDF)						x		x	x	
User Guide (CHM)	x	x	x	x	x		x			x
SW Install Notes (Windows)	x	x	x	x	x	x	x	x	x	x
SW Install Notes (Mac)						x		x	x	

Table 1-3 Supported printing-system components (AR-ET) (continued)

Component	AR	BG	CA	CS	DA	DE	EL	EN	ES	ET
HP Smart Install	x	x	x	x	x	x	x	x	x	x
Getting Started Guide	x	x	x	x	x	x	x	x	x	x
HP LaserJet Help Navigation	x	x	x	x	x	x	x	x	x	x
CD Browser	x	x	x	x	x	x	x	x	x	x

Table 1-4 Supported printing-system components (FI-LT)

Component	FI	FR	HE	HR	HU	ID	IT	KK	KO	LT
HP Smart Install	x	x	x	x	x	x	x	x	x	x
Mac Installer		x					x			
Windows Host-based Print Driver	x	x	x	x	x	x	x	x	x	x
XPS driver	x	x	x	x	x	x	x	x	x	x
Mac OS X V10.4, V10.5, V10.6 Print Driver		x					x			
Scan to application software (Windows)	x	x	x	x	x	x	x	x	x	x
Scan to application software (Mac)		x					x			
Usage tracking software	x	x	x	x	x	x	x	x	x	x
OCR application software	x	x	x	x	x	x	x	x	x	x
WIA and TWAIN driver software	x	x	x	x	x	x	x	x	x	x
Print Dialog Extensions		x					x			
User Guide (PDF)		x					x			
User Guide (CHM)	x		x	x	x	x		x	x	x
SW Install Notes (Windows)	x	x	x	x	x	x	x	x	x	x
SW Install Notes (Mac)		x					x			
Getting Started Guide	x	x	x	x	x	x	x	x	x	x
HP LaserJet Help Navigation	x	x	x	x	x	x	x	x	x	x
CD Browser	x	x	x	x	x	x	x	x	x	x

Table 1-5 Supported printing-system components (LV-SL)

Component	LV	NL	NO	PL	PT	RO	RU	SK	SL
HP Smart Install	x	x	x	x	x	x	x	x	x
Mac Installer		x							
Windows Host-based Print Driver	x	x	x	x	x	x	x	x	x
XPS driver	x	x	x	x	x	x	x	x	x
Mac OS X V10.4, V10.5, V10.6 Print Driver		x							
Scan to application software (Windows)	x	x	x	x	x	x	x	x	x
Scan to application software (Mac)		x							
Usage tracking software	x	x	x	x	x	x	x	x	x
OCR application software	x	x	x	x	x	x	x	x	x
WIA and TWAIN driver software	x	x	x	x	x	x	x	x	x
Print Dialog Extensions		x							
User Guide (PDF)		x							
User Guide (CHM)	x		x	x	x	x	x	x	x
SW Install Notes (Windows)	x	x	x	x	x	x	x	x	x
SW Install Notes (Mac)		x							
Getting Started Guide	x	x	x	x	x	x	x	x	x
HP LaserJet Help Navigation	x		x	x	x	x	x	x	x
CD Browser	x	x	x	x	x	x	x	x	x

Table 1-6 Supported printing-system components (SR-ZHT)

Component	SR	SV	TH	TR	UK	VI	ZHC	ZHT
HP Smart Install	x	x	x	x	x	x	x	x
Mac Installer								
Windows Host-based Print Driver	x	x	x	x	x	x	x	x
XPS driver	x	x	x	x	x	x	x	x

Table 1-6 Supported printing-system components (SR-ZHT) (continued)

Component	SR	SV	TH	TR	UK	VI	ZHC	ZHT
HP Smart Install	x	x	x	x	x	x	x	x
Mac OS X V10.4, V10.5, V10.6 Print Driver								
Scan to application software (Windows)	x	x	x	x	x	x	x	x
Scan to application software (Mac)								
Usage tracking software	x	x	x	x	x	x	x	x
OCR application software	x	x	x	x	x	x	x	x
WIA and TWAIN driver software	x	x	x	x	x	x	x	x
Print Dialog Extensions								
User Guide (PDF)								
User Guide (CHM)	x	x	x	x	x	x	x	x
SW Install Notes (Windows)	x	x	x	x	x	x	x	x
SW Install Notes (Mac)								
Getting Started Guide	x	x	x	x	x	x	x	x
HP LaserJet Help Navigation	x	x	x	x	x	x	x	x
CD Browser	x	x	x	x	x	x	x	x

Documentation

The printing-system software CD that is included with the product contains documentation.

Access to the documents depends on the document type and location as follows:

- Some documents can be opened from the CD Browser.
- Some documents appear on the CD and can *only* be opened by navigating to the folder where they reside.
- Some documents are available on the Web through links in the CD Browser or CD folders.

Documents are available in the following file formats:

- **Portable document format (.PDF)**
- **Hypertext markup (.HTM)**. When you click a documentation link to an .HTM document, a Web browser opens the file on the computer screen.
- **Microsoft Compiled HTML Help (.CHM)**


Printing-system software CD

- [Main CD browser screen](#)
- [User Documentation](#)

Main CD browser screen

To view documentation and use links to HP support on the printing-system software CD, insert the CD into the CD-ROM drive. The main screen of the CD Browser opens. Move the cursor over each option to see a description of the option in the right panel.

Figure 1-1 Printing-system software CD – main browser screen

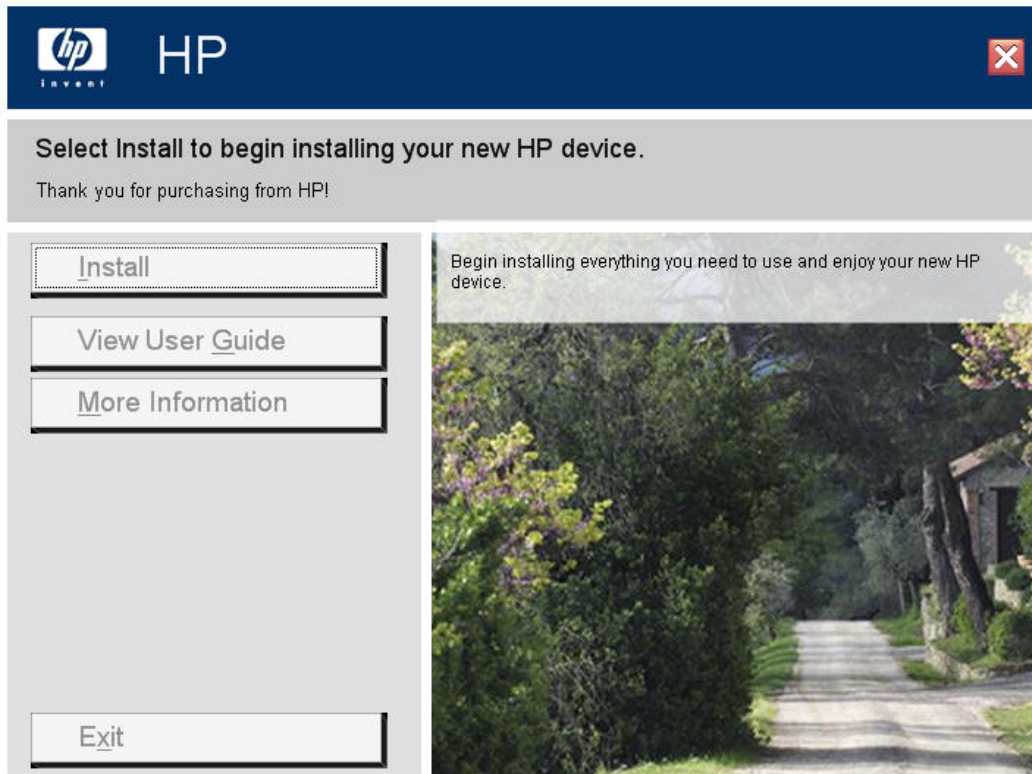

User Documentation

On the main screen of the printing-system software CD Browser, click **View User Guide** to open the **View User Guide** screen. Move the cursor over each option to see a description of the option in the right panel.

Figure 1-2 View User Guide screen



- [HP LaserJet Help Navigation](#)
- [User Guide](#)
- [More Information](#)

HP LaserJet Help Navigation


General instructions

Click either the **M1130 MFP Series** button or the **M1210 MFP Series** button to open the **HP LaserJet Help Navigation** application.

The **HP LaserJet Help Navigation** application provides links to the HP LaserJet Professional M1130/ M1210 MFP Series user guides, shortcuts to frequently used sections of the user guides, links to support and supplies, and animated help for printer light patterns.

Click **Browse User Guide** to gain access to the product user guide.


- If the product software is installed by a direct USB connection and not from the CD, the user guide is not installed locally on your computer as part of the installation. Click the **Open the latest version on the web** link to download and view the user guide from www.hp.com.
- If the product software is installed from the CD, click **Open the user guide on my computer** to open the locally installed version of the user guide. Click the **Open the latest version on the web** link to download and view the user guide from www.hp.com.

 **NOTE:** The product user guide is distributed in .CHM format only for Windows operating system installations and .PDF format only for Mac OS X operating system installations.

HP LaserJet Help Navigation provides the following links to HP support sites.

- Web support — the main support site for your product.
- HP SureSupply — shop for and purchase genuine HP printing supplies
- HP.com — HP's main Web site

HP LaserJet Help Navigation provides the following shortcut links to commonly used sections of the user guide.

 **NOTE:** Since HP LaserJet Help Navigation contains many of the same help options for both M1130 and M1210 series products, all of the options are listed below. The specific product series name is listed after the option if the option appears only for that product in HP LaserJet Help Navigation.

- Product specifications
- Quick reference for control-panel buttons and lights
- Printer light patterns (M1130 series)
- Control-panel messages (M1210 series)
- Replace the print cartridge
- Clear a paper jam (M1130 series)
- Load paper trays (M1210 series)
- Print on heavy paper (M1130 series)
- Get IP address of a printer in network (M1210 series)

Click the **Everyday Jobs** button to gain quick access to the following sections of the user guide.

- Paper and print media (M1130 series)
 - Load paper trays
- Print tasks
 - Cancel a print job
 - Open the printer driver
 - Select a custom page size (M1130 series)
 -

- Print on both sides (manual duplex)
- Print multiple pages per sheet
- Create a booklet (M1130 series)
- Print on special paper (M1130 series)
- Copy tasks (M1130 series)
 - Make multiple copies
 - Reduce or enlarge copies
 - Copy on both sides
 - Make my copy look better
- Scan tasks
 - Scan a document
 - Make my scan look better
- Fax tasks (M1210nf series)
 - Use the phone book
 - Send a fax
 - Schedule a fax to be sent later
 - Print a stored fax
 - Delete faxes from memory

Click the **Manage & Maintain** button to gain quick access to the following sections of the user guide.

- Print information pages
- Replace the print cartridge
- Print a cleaning page
- Clean the scanner glass
- Clean the pickup roller
- Clean the separation pad
- Change energy settings

Click the **Solve a Problem** button to gain quick access to the following sections of the user guide.

- Clear a paper jam
- Interpret light patterns (M1130 series)
- Clear jams from the document feeder (M1210 series)
- Control-panel messages (M1210 series)

- Solve image quality problems
- Solve paper handling problems
- Solve copy quality problems
- Solve scan quality problems
- Solve fax problems (M1210 series)

Control panel light patterns

Control panel light patterns communicate different product states.

Interpret control-panel light patterns (M1130 Series only)

If the product requires attention, an error code appears on the control-panel display.

Table 1-7 Status-light legend




	Symbol for "light off"
	Symbol for "light on"
	Symbol for "light blinking"

Table 1-8 Control-panel light patterns



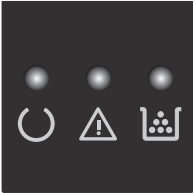
Light status	Error code	State of the product	Action
<p>All lights are off.</p> 		The product is turned off.	Press the power button to turn on the product.
<p>Ready and attention lights blink.</p> 		The status lights cycle during the formatter initialization period or when the product is processing a cleaning page.	No action is required. Wait for the initialization period to end. The product should enter the ready state when the initialization period is finished.
<p>Ready light is on.</p> 		The product is in the ready state.	No action is required. The product is ready to receive a print job.

Table 1-8 Control-panel light patterns (continued)



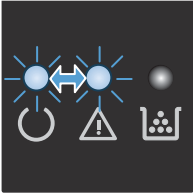

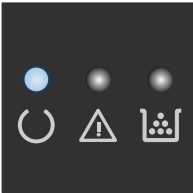

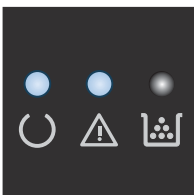

Light status	Error code	State of the product	Action
Ready light is blinking. 		The product is receiving or processing data.	No action is required. The product is receiving or processing a print job.
Ready light is blinking slowly. 		The product is in low power mode.	No action is required.
Attention light is blinking. 	E0	Paper is jammed in the product.	Clear the jam.
	E1	The input tray is empty.	Load the tray.
	E2	A door is open	Verify that the print-cartridge door is fully closed.
	E4	The product memory is full	The job is too complex for the product to print. Simplify the job, or divide it into multiple files.
	E5	The product did not pick up paper from the tray.	You might need to clean or replace the pickup roller.
	H0	The product is in manual-feed mode.	Load the correct paper type and size into the input tray.
The attention and toner lights are blinking. 	E3	The print cartridge is missing or is not installed correctly.	Install the print cartridge.
The toner light is on. 		The print cartridge has reached the end of its estimated useful life. When the supply has reached this condition, the HP Premium Protection warranty for that supply has ended.	You do not need to replace the print cartridge at this time unless print quality is no longer acceptable.

Table 1-8 Control-panel light patterns (continued)

Light status	Error code	State of the product	Action
Attention light is blinking, and ready light is on. 		The product has experienced a continual error from which it will recover on its own.	<p>If the recovery is successful, the product continues to the processing data state and completes the job.</p> <p>If the recovery is unsuccessful, the product continues to the continuable error state. Try removing any media from the media path and turning the product power off, and then on again.</p>
The attention and ready lights are on. 	E6 E7 E8 E9	The product has experienced a fatal error from which it cannot recover.	<ol style="list-style-type: none"> 1. Turn off the product or disconnect the power cord from the product. 2. Wait 30 seconds, and then turn on the product or reconnect the power cord to the product. 3. Wait for the product to initialize. <p>If the error persists, contact HP customer support.</p>

Interpret control-panel messages (M1210 Series only)

Control-panel message types


Alert and warning messages appear temporarily and might require you to acknowledge the message by pressing the **OK** button to resume or by pressing the **Cancel**  button to cancel the job. With certain warnings, the job might not complete or the print quality might be affected. If the alert or warning message is related to printing and the auto-continue feature is on, the product will attempt to resume the printing job after the warning has appeared for 10 seconds without acknowledgement.

Critical error messages can indicate some kind of failure. Turning off and then turning on the power might fix the problem. If a critical error persists, the product might require service.

Control-panel messages

Control panel message	Description	Recommended action
50.X Fuser Error Turn off then on	The product has experienced an internal hardware error.	<ol style="list-style-type: none"> 1. Turn off the power by using the power switch, and then wait at least 30 seconds. 2. If a surge protector is being used, remove it. Plug the product directly into the wall socket. 3. Turn on the power and wait for the product to initialize. <p>If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.</p>

Control panel message	Description	Recommended action
52 Scanner Error Turn off then on	The product has experienced a scanner error.	<p>Turn off the power by using the power switch, wait at least 30 seconds, and then turn on the power and wait for the product to initialize.</p> <p>If a surge protector is being used, remove it. Plug the product directly into the wall socket. Use the power switch to turn the product on.</p> <p>If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.</p>
54.1C Error Turn off then on	The product has experienced an internal hardware error.	<p>Turn off the power by using the power switch, wait at least 30 seconds, and then turn on the power and wait for the product to initialize.</p> <p>If a surge protector is being used, remove it. Plug the product directly into the wall socket. Use the power switch to turn the product on.</p> <p>If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.</p>
Comm. error	The product experienced a communication error while attempting to send or receive a fax.	<p>Verify that the fax phone line is working correctly.</p> <p>Try sending or receiving the fax again.</p> <p>If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.</p>
Device error Press [OK]	The product experienced an internal communication error.	This is a warning message only. Job output might be affected.
Door open	The cover above the print cartridge is open.	Close the cover.
Engine comm. Error	The product has experienced an internal hardware error.	<ol style="list-style-type: none"> 1. Turn off the power by using the power switch, and then wait at least 30 seconds. 2. If a surge protector is being used, remove it. Plug the product directly into the wall socket. 3. Turn on the power and wait for the product to initialize. <p>If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.</p>
Fax recv. error	The product was unable to receive an incoming fax.	<p>Verify that the fax phone line is working correctly.</p> <p>Ask the person who sent the fax to send it again.</p> <p>If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.</p>

Control panel message	Description	Recommended action
Fax Send error	The product was unable to send the fax.	Try sending the fax later, or confirm with the recipient that the receiving fax machine is ready. If the error persists, contact HP. See www.hp.com/support/ljm1210series or the support flyer that came in the product box.
Jam in <location> alternates with Open door and clear jam	The product has detected a jam in the location indicated in the message.	Clear the jam from the area indicated in the message, and then follow the control-panel instructions. Clearing some jams requires you to open the top cover and remove the print cartridge.
Load tray 1 PLAIN <SIZE> alternates with Cleaning Mode	The product is performing a cleaning cycle.	Load the tray with plain paper of the size indicated. Press the OK button to start the cleaning cycle.
Load tray <TYPE>, <SIZE>	The tray is empty.	Load the tray with the correct type and size of paper.
Manual duplex alternates with Load tray1 Press [OK]	The product is processing a manual duplex job.	To print the second side, place the pages face down in the tray with the top edge first.
Manual feed <SIZE>, <TYPE> alternates with Press [OK] for available media	The product is set for the manual feed mode.	Load the tray with the correct size and type of paper, or press the OK button to use the paper that is in the tray.
Memory is low Press [OK]	The product does not have enough memory to process the job.	If the product is processing other jobs, send the job again after those jobs have finished. If the problem continues, turn off the power by using the power switch, and then wait at least 30 seconds. Turn on the power and wait for the product to initialize.
Misprint Press [OK]	The product has experienced an internal hardware error.	Press the OK button to continue. Job output might be affected.
No paper pickup Press [OK]	The product has experienced an internal hardware error.	Press the OK button to continue. Job output might be affected.
Page too complex Press [OK]	The product could not print the current page because of its complexity.	Press the OK button to clear the message. Allow the product to finish the job, or press the Cancel  button to cancel the job.
Printer jam clear paper path	The product has detected a jam in the input tray.	Clear the jam from the area indicated in the message, and then follow the control panel instructions.
Settings cleared	The product has cleared job settings.	Re-enter any appropriate job settings.

User Guide

The *HP LaserJet Professional M1130/M1210 MFP Series User Guide* describes basic product features.

The user guide is available on the CD in .CHM format only for Windows and .PDF format only for Mac OS X.

Open the .CHM version of the guide from the printing-system software CD Browser as follows:

1. On the main screen of the printing-system software CD Browser, click **User Documentation**.
2. Click **User Guide (Interactive)**.

The guide opens as a Windows Help file (.CHM file). This readable, onscreen version of the guide is provided in accordance with the Americans with Disabilities Act (ADA).

Open the .CHM file (Windows) from the printing-system software CD directory as follows:

1. Insert the printing-system software CD into the CD-ROM drive.
2. Navigate to the **Language\<Manuals>** folder.
3. Open the following file:

LJM1130-M1210_use_xxwww.chm

 **NOTE:** For information about which languages are supported, see Tables 8-11 in this chapter.

NOTE: The "xx" in the file name corresponds to the language. For French, the file name is LJM1130-M1210_use_frwww.chm.

Open the .PDF file (Mac) from the printing-system software CD directory as follows:

1. Insert the printing-system software CD into the CD-ROM drive.
2. Double-click the **Documentation** folder.
3. Open either of the following files.

LJM1130-M1210_use_xxwww.pdf

 **NOTE:** For information about which languages are supported, see Tables 8-11 in this chapter.


NOTE: The "XX" in the file name corresponds to the language. For French, the file name is LJM1130-M1210_use_frwww.pdf.

4. When the file is open, click **File**, and then click **Save As...** to save a copy of the file to another location.

More Information

Click **More Information** to view the printing system install notes and to access the product support Web site.

Figure 1-3 More Information screen

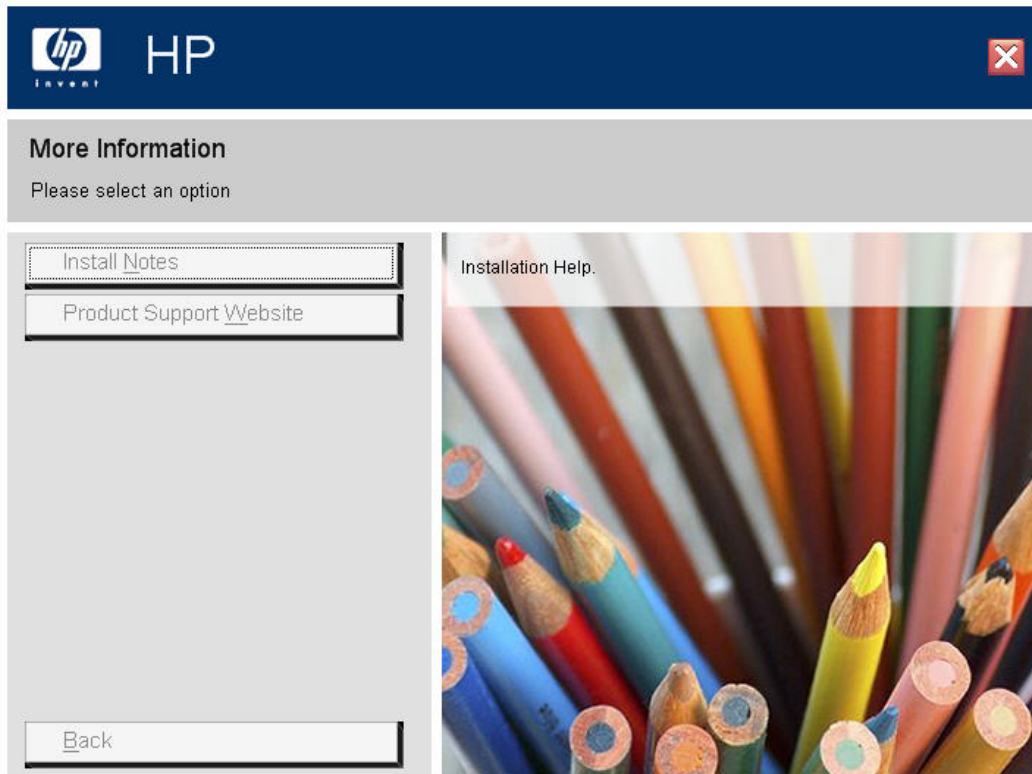

Install Notes

The *HP LaserJet Professional M1130/M1210 MFP Series Printing-System Install Notes* (.HTM) contains important information about device features, instructions for installing the printing-system software, and technical assistance.

Open the install notes from the printing-system software CD Browser as follows:

1. On the main screen of the CD Browser, click **More Information**.
2. Click **Install Notes**.

Open the .HTM file directly:

1. Insert the printing-system software CD into the CD-ROM drive.
2. Navigate to the **<language>\MANUALS** folder.
3. Open the following file:
1130SeriesInstallNotes.htm

Product Support Website

Visit the product support Web site to gain quick access to online support pages, software updates, FAQs, and more.

2 Software description

- [Windows printing-system software](#)
- [HP Driver Diagnostic Printer Check Tool](#)
- [Embedded Web Server M1210 Series only](#)
- [HP ToolboxFX](#)

Windows printing-system software

- [Supported operating systems for Windows](#)
- [Windows system requirements](#)
- [Macintosh system requirements](#)
- [Printer driver](#)
- [Select the correct printer driver for Windows](#)
- [Priority for print settings](#)
- [Change printer-driver settings for Windows](#)
- [Printing system and installer](#)
- [Driver version numbers for Windows operating systems](#)

Supported operating systems for Windows

The product supports the following Windows operating systems:

- Windows XP (32-bit and 64-bit)
- Windows Server 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Windows Server 2008 (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)

Windows system requirements

The HP printing-system software has the following minimum system requirements for Windows 7, Windows Vista, Windows XP, and Windows Server 2003.

- 1 GHz processor
- 1 GB RAM
- 700 MB free hard disk space

All Windows operating systems also have the following requirements:

- A CD-ROM, DVD drive, or Internet connection with which to install the printing-system software
- A dedicated USB 1.1 or USB 2.0 connectivity port, or network connection, to communicate with the product

Macintosh system requirements

The HP printing-system software has the following minimum system requirements for the Mac OS X V10.4, V10.5, and V10.6 operating systems:

- PowerPC G3, G4, G5, or Intel processors
- 1 GB RAM
- 200 MB available hard disk space


 **NOTE:** PPC and Intel Core Processor Macs are supported.

All Macintosh operating systems also have the following requirements:

- A CD-ROM, DVD drive, or Internet connection with which to install the printing-system software
- A dedicated USB 1.1 or USB 2.0 connectivity port, or network connection, to communicate with the product

Printer driver

Printer drivers provide access to product features, such as printing on custom-sized paper, resizing documents, and inserting watermarks.

 **NOTE:** The most recent drivers are available at www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series.

Select the correct printer driver for Windows

Printer drivers provide access to the product features and allow the computer to communicate with the product (by using a printer language). Check the installation notes and readme files on the product CD for additional software and languages.

HP LaserJet Professional M1130/M1210 Printer series Host-based print driver

- The recommended print driver for most Windows applications. The Host-based driver is installed by default and recommended for most users.

HP LaserJet Professional M1130/M1210 Printer series XPS print driver

- Recommended for capturing and printing screen output exactly as it is rendered on the screen.

Priority for print settings

Changes to print settings are prioritized depending on where the changes are made.

 **NOTE:** The names of commands and dialog boxes might vary depending on your software program.

- **Page Setup dialog box:** Click **Page Setup** or a similar command on the **File** menu of the program you are working in to open this dialog box. Settings changed here override settings changed anywhere else.
- **Print dialog box:** Click **Print**, **Print Setup**, or a similar command on the **File** menu of the program you are working in to open this dialog box. Settings changed in the **Print** dialog box have a lower priority and do *not* override changes made in the **Page Setup** dialog box.

- **Printer Properties dialog box (printer driver):** Click **Properties** in the **Print** dialog box to open the printer driver. Settings changed in the **Printer Properties** dialog box do not override settings anywhere else in the printing software.
- **Default printer driver settings:** The default printer driver settings determine the settings used in all print jobs, *unless* settings are changed in the **Page Setup**, **Print** or **Printer Properties** dialog boxes.
- **Printer control-panel settings:** Settings changed at the printer control panel have a lower priority than changes made anywhere else.

Change printer-driver settings for Windows

Change the settings for all print jobs until the software program is closed	Change the default settings for all print jobs	Change the product configuration settings
<ol style="list-style-type: none"> 1. On the File menu in the software program, click Print. 2. Select the driver, and then click Properties or Preferences. <p>The steps can vary; this procedure is most common.</p>	<ol style="list-style-type: none"> 1. Windows Vista and Windows 7: Click Start, click Control Panel, and then in the category for Hardware and Sound click Printer. <p>-or-</p> <p>Windows XP, Windows Server 2003, and Windows Server 2008 (using the default Start menu view): Click Start, and then click Printers and Faxes.</p> <p>-or-</p> <p>Windows XP, Windows Server 2003, and Windows Server 2008 (using the Classic Start menu view): Click Start, click Settings, and then click Printers.</p> <ol style="list-style-type: none"> 2. Right-click the driver icon, and then select Printing Preferences. 	<ol style="list-style-type: none"> 1. Windows Vista and Windows 7: Click Start, click Control Panel, and then in the category for Hardware and Sound click Printer. <p>-or-</p> <p>Windows XP, Windows Server 2003, and Windows Server 2008 (using the default Start menu view): Click Start, and then click Printers and Faxes.</p> <p>-or-</p> <p>Windows XP, Windows Server 2003, and Windows Server 2008 (using the Classic Start menu view): Click Start, click Settings, and then click Printers.</p> <ol style="list-style-type: none"> 2. Right-click the driver icon, and then select Properties. 3. Click the Device Settings tab.

Printing system and installer

The printing-system files and installers come in both the product firmware and on CD. The recommended installation method for the printing-system files is via a direct USB connection between the product and computer using HP Smart Install.


- [Printing-system software CD for Windows systems](#)
- [Installer features](#)

Printing-system software CD for Windows systems

The HP LaserJet Professional M1130/M1210 MFP Series products come with a printing-system CD. The printing-system CD includes product drivers and related components but is not required for the installation of drivers. The recommended driver installation is via direct USB connection to the product.

In supported Windows operating systems, insert the printing-system CD in the CD-ROM drive to open an interactive CD Browser. Use the CD Browser to install the drivers and related components and to gain access to online user documentation, a customization utility, and optional HP software.


Figure 2-1 Installation software CD Browser

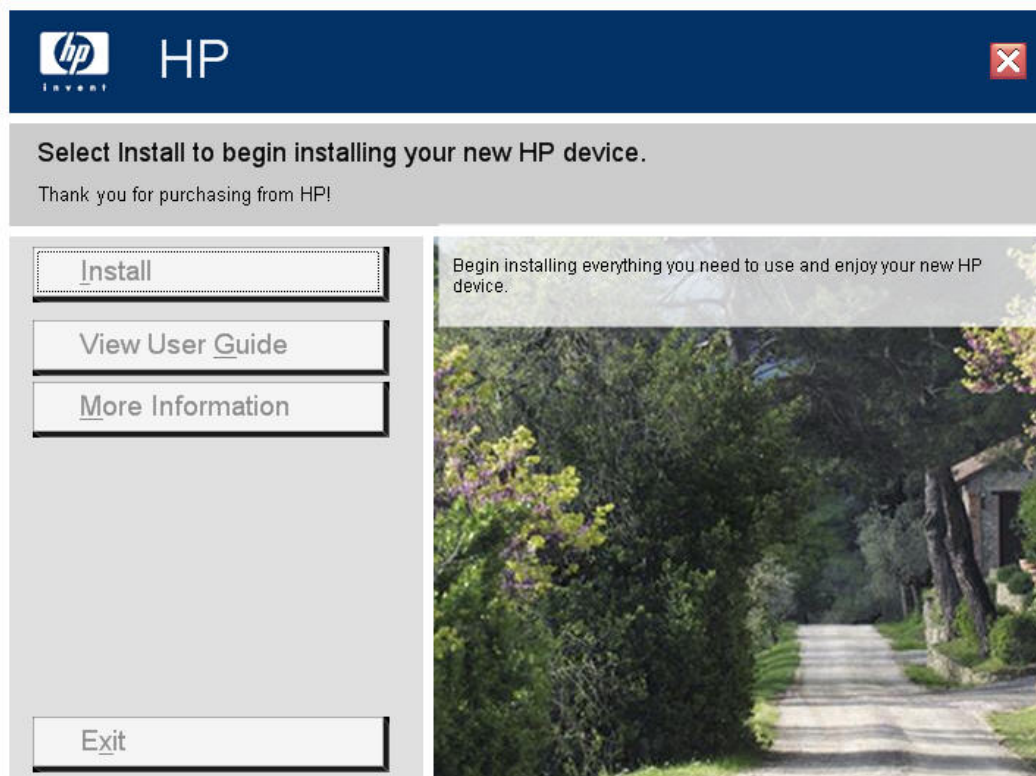

If the screen does not appear when you insert the printing-system CD into the CD-ROM drive, follow these steps to open the CD Browser:

1. Click **Start**.
2. Click **Run**.
3. Click **Browse...** and navigate to the root directory of the software CD.
4. Double-click the SETUP.EXE file to start the installer.

The main screen of the CD Browser contains installation and documentation options in the left panel. Move the cursor over each option to see a description of the option in the right panel.


 **NOTE:** The options available for each product might differ from those in the figure.

Install. Opens the HP Smart Installer. The HP Smart Installer installs the HP LaserJet Professional M1130/M1210 Printer series Host-based print driver, the recommended driver. To install additional drivers,

View User Guide. Provides access to the HP laser Jet M1130_M1210 user guide.

More Information. This option provides access to the Install Notes, and to the Product Support Website.

Click **Back** to return to the main CD Browser screen.

 **NOTE:** To view documentation in .PDF format, Adobe® Acrobat® Reader must be installed on the computer. Adobe Acrobat Reader is available at the following Web site:

<http://www.adobe.com>

Installer features

HP Smart Install is designed to provide a simple and consistent installation method for the printing-system software in supported Windows operating systems.


HP Smart Install offers the following features:

- An interactive software interface.
- Network connection is integrated so that you can install drivers and connect to a networked product in a single process.
- The selection dialog box sets the operating-system language as the default language. You can use the installer to select any of the languages on the Admin CD.

All of the printing-system components are installed by using the HP Smart Install installer. The installer automatically detects the language of choice and the operating system.

Driver version numbers for Windows operating systems

Access to driver version numbers varies, depending on the operating system in which the printing system is installed.

 **NOTE:** For a list of product drivers, updated HP printing-system software, and product-support information, go to:

www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series

In supported Windows operating systems, follow these steps to find driver-version information:

1. Click **Start**, and then do one of the following:

Windows XP: Click **Control Panel**, and then double-click the **Printers and Other Hardware** icon.

-or-

Windows Server 2003 and Windows XP Professional: Select **Settings**, and then select **Printers and Faxes**.

-or-

Windows Vista: Click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

-or-

Windows Server 2008: Click **Start**, click **Control Panel**, and then open the **Printers** folder.

-or-

In Windows 7, click the **Start** button, click **Control Panel**, and then click **Devices and Printers**.

2. Right-click the product driver icon.
3. Click **Properties**.
4. Click the **About** tab.

HP Driver Diagnostic Printer Check Tool

Use the HP Driver Diagnostic Printer Check Tool, a Web-based diagnostic software program, to determine whether the correct and most current printer driver for the product is in use. Use the following steps to gain access to the HP Driver Diagnostic Printer Check Tool:

1. Open a Web browser.
2. Go to the following Web site:

www.hp.com/go/drivercheck

When the HP Driver Diagnostic Printer Check Tool runs, the products that are currently installed on the computer appear in a list. The tool gathers information about the products, drivers, and system setup in order to diagnose the software driver configuration and check the printer driver.

When the HP Driver Diagnostic Printer Check Tool is open, select the HP product that you want to check. The tool verifies whether the latest printer driver is being used, provides feedback if an incorrect printer driver is being used, and indicates whether an updated printer-driver version is available. Click the latest printer-driver version to download and install it.

The data that the HP Driver Diagnostic Printer Check Tool gathers is stored anonymously so that HP can analyze and continuously improve its diagnostic tools. No private data is gathered from the computer.

Embedded Web Server M1210 Series only

The M1210 Series is equipped with the HP Embedded Web Server (HP EWS), which provides access to information about product and network activities. This information appears in a Web browser, such as Microsoft Internet Explorer, Apple Safari, or Firefox.

The HP EWS resides on the product. It is not loaded on a network server.

The HP EWS provides an interface to the product that anyone who has a network-connected computer and a standard Web browser can use. No special software is installed or configured, but you must have a supported Web browser on the computer. To gain access to the HP EWS, type the IP address for the product in the address line of the browser.

For a complete explanation of the features and functionality of the HP EWS, see the *HP LaserJet M1130/M1210 Series User Guide*, which is available on the Admin CD.

HP ToolboxFX

This section provides information about the following topics:

- [HP ToolboxFX overview](#)
- [System requirements](#)
- [HP ToolboxFX folders](#)
- [Other Links](#)

HP ToolboxFX overview

HP ToolboxFX allows users to communicate with and manage the product. HP ToolboxFX provides the following capabilities:

- A view of the current status of the product
- A view of the current status of the product consumables
- Device Alert functionality, notifying the end user when particular events or conditions occur at the product
- Access to troubleshooting information
- Access to some product settings, as an alternative to accessing them through the product control panel

Starting HP ToolboxFX

Start HP ToolboxFX by using any of the following methods:

- Double-click the **HP ToolboxFX** icon in the Windows system tray.
- Click **Start**, click **Programs**, click **HP**, click **HP LaserJet Professional M1130/M1210 MFP Series**, and then click **HP ToolboxFX**.
- Right-click the **HP ToolboxFX** icon in the Windows system tray, and then click **Open HP ToolboxFX**.

Structure

HP ToolboxFX consists of a single framework divided into several sections.

- **Heading banner.** Each pane that appears in HP ToolboxFX has a heading banner at the top that includes the HP logo.
- **Devices pane.** The **Devices** pane is visible on the left-hand side of the HP ToolboxFX window. The **Devices** pane shows the HP products that are available to the host computer system, and folders for the types of information available about each product.
- **Main content area.** Click any of the products or folders listed in the **Devices Pane** to see information about that product in the main content area of the HP ToolboxFX window.

- **Toolbar.** A toolbar appears at the top of the main content area. This toolbar contains controls for printing, refreshing the page, ordering supplies, and getting help.
- **Other Links pane.** The **Other Links** pane is visible in the lower-left corner of the HP ToolboxFX window. The **Other Links** pane contains links to the HP Instant Support, Product Support, and Product Registration pages on the HP Web site.

Opening screen

The opening screen that appears in the HP ToolboxFX section depends on the installed configuration of HP ToolboxFX. If HP ToolboxFX is installed for a single HP LaserJet product, the Device Status page for that HP LaserJet product appears when the toolbox is opened. To go to the Device Status page for a product, double-click the product. If multiple products that are supported by HP ToolboxFX are installed, they will appear in the left pane.

System requirements

HP ToolboxFX is currently supported on the following operating systems:

- Windows XP (32-bit and 64-bit)
- Windows Server 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Windows Server 2008 (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)

HP ToolboxFX also requires Microsoft .NET Framework 2.0 on the client computer, which happens automatically during installation of the product solutions software (if HP ToolboxFX is not already installed).

HP ToolboxFX folders


The HP ToolboxFX folders section describes the following:


- [Device Status](#)
- [Help folder](#)
- [Fax folder](#)

Device Status

The **Device Status** pane shows product status messages from the product.

Figure 2-2 HP ToolboxFX **Status** folder – **Device Status** pane

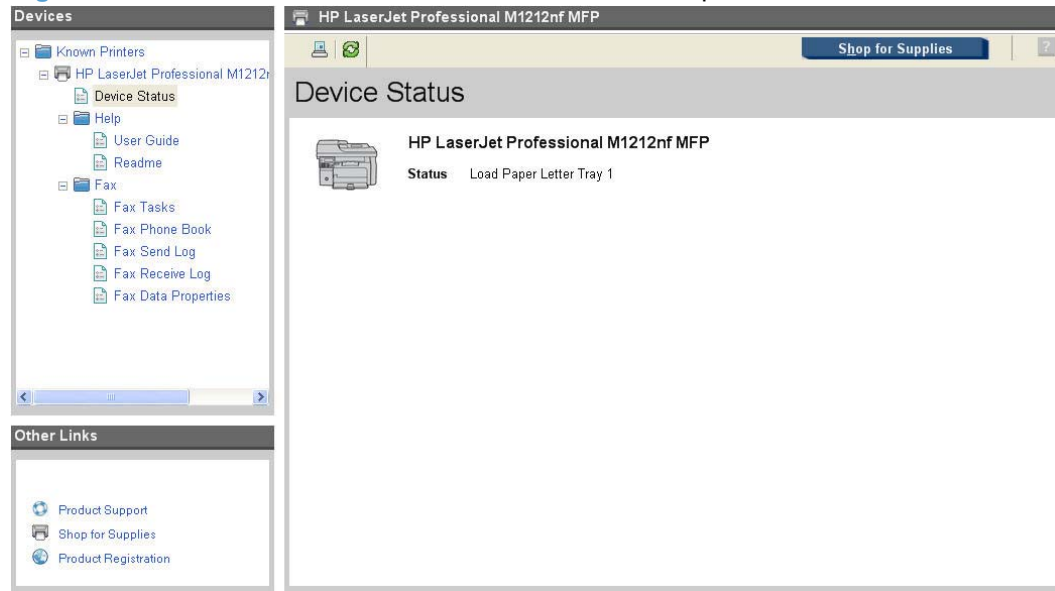

 **NOTE:** This product includes a Supplies Status section and a Supplies Information section on the **Device Status** screen. These sections provide information about the estimated toner level, the approximate pages remaining based on the estimated toner level, and the HP part number for easy reference when ordering new consumables.

Help folder

The **Help** folder contains the following panes:


- [User Guide](#)
- [Readme](#)

User Guide

The following options are available in the **User Guide** pane:

- **Interactive Version.** Click the **Interactive User Guide** button to open the HP LaserJet Help Navigation application.
- **Printer-Friendly Version.** Click the **Printer-Friendly User Guide** button to open a version of the user guide optimized for printing.

Figure 2-3 HP ToolboxFX **Help** folder – **Troubleshooting** pane (1 of 2)

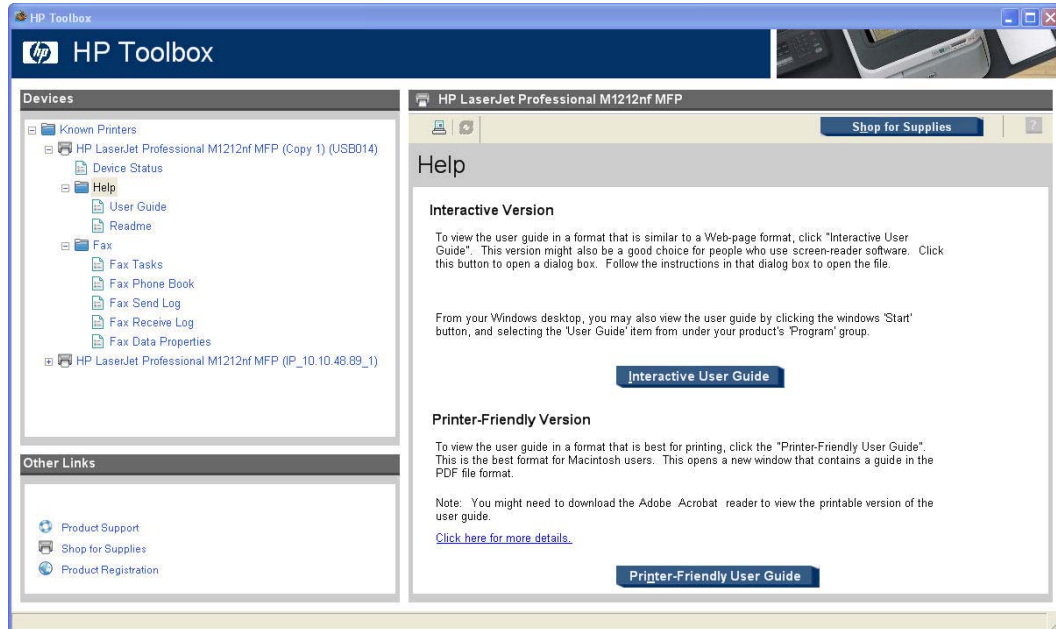

Readme

Click the **Readme** folder to open the product Readme file in HP Toolbox.

Fax folder


You can use the panes in the **Fax** folder to perform fax tasks from your computer.

The **Fax** folder contains the following panes:

- [Fax Tasks pane](#)
- [Fax Phone Book pane](#)
- [Fax Send Log pane](#)
- [Fax Receive Log pane](#)

- [Fax Data Properties pane](#)

Figure 2-4 HP ToolboxFX Fax folder

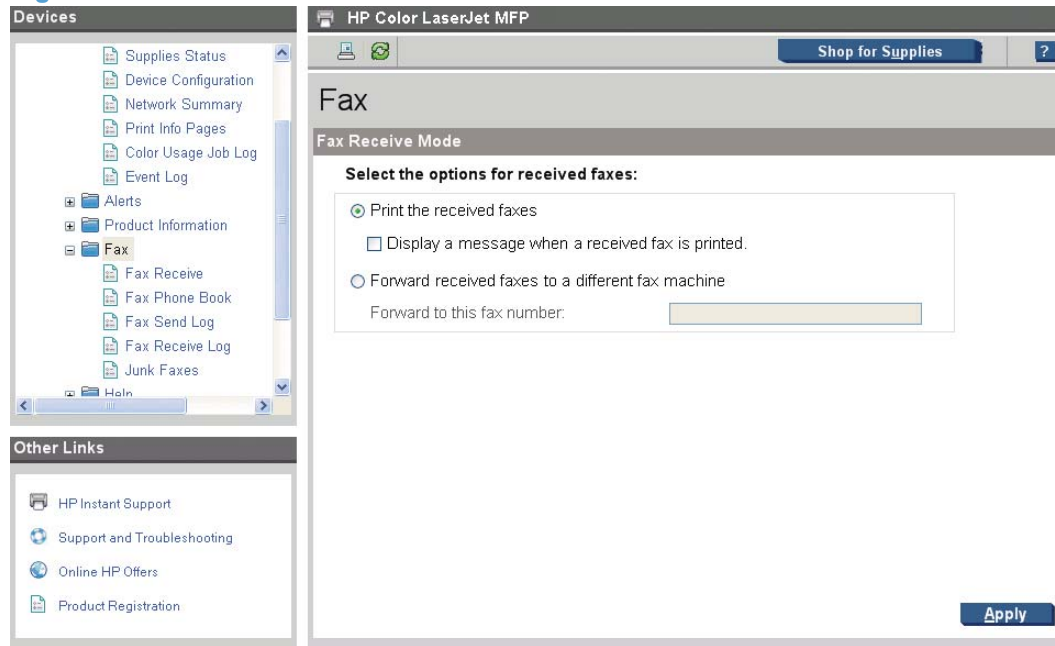

Fax Tasks pane

Use the **Faxe Tasks** pane to set options for received faxes.


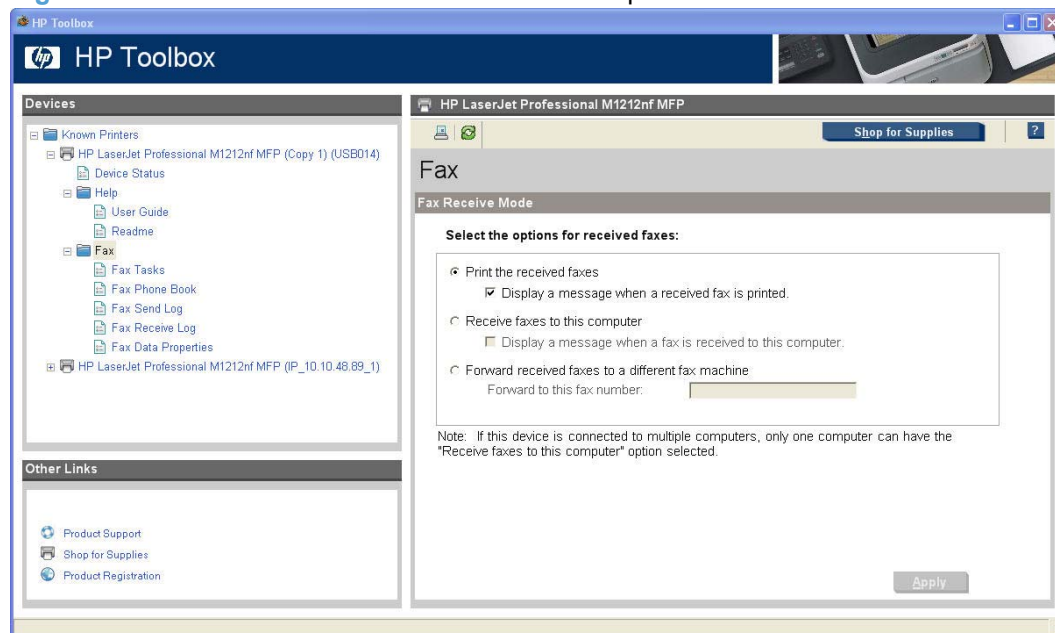
 **NOTE:** Click **Apply** for the changes to take effect.

Figure 2-5 HP Toolbox FX Fax folder – Fax Tasks pane




Fax Phone Book pane

The **Fax Phone Book** pane shows the product phone book data.

The maximum number of characters that a name can have in a phone book entry is 16. Only 12 of these characters are displayed on the product control panel, because four characters are used to display the phone book entry number (for example, 011:).


The maximum number of characters that a telephone number can have is 50. This includes special characters that are used to insert pauses into the dial sequence.

Figure 2-6 HP Toolbox FX **Fax** folder – **Fax Phone Book** pane

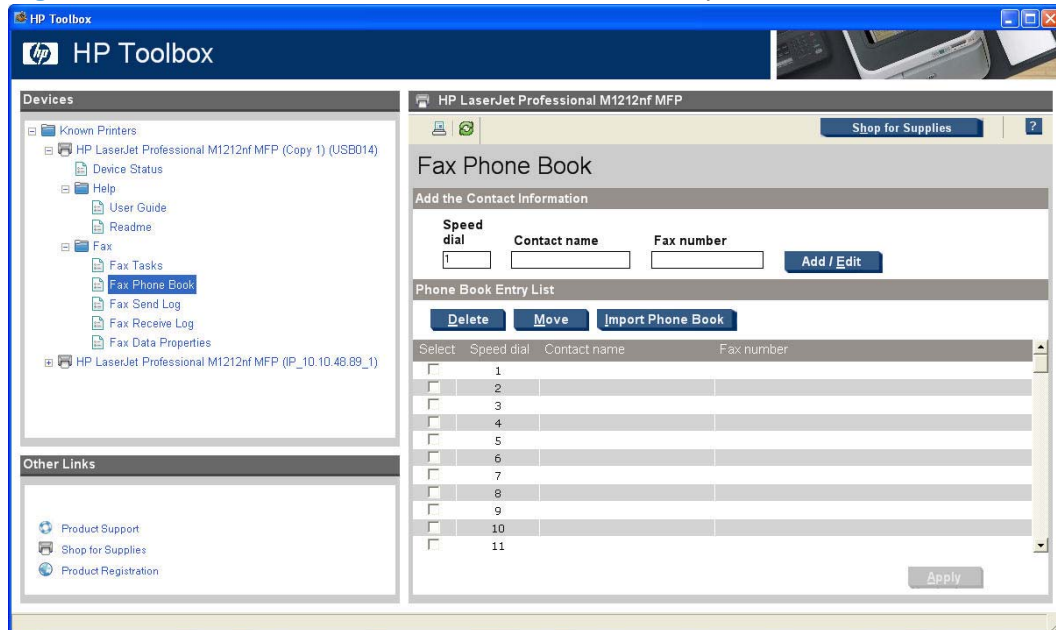

Use the **Fax Phone Book** page to add or remove individuals or groups on your speed-dial list, import phone books from a variety of sources, and update and maintain the contact list.

- To add an individual contact to the speed-dial list, select the row of the speed-dial number that you want to specify. Type the contact name in the **Contact name** window. Type the fax number in the **Fax number** window. Click **Add**.
- To add a group of contacts to the speed-dial list, select the row of the speed-dial number that you want to specify. Click **Add/Group**. Double-click a contact name from the list on the left to move it to the group list on the right, or select a name on the left and then click the appropriate arrow to move it to the group list on the right. You can also use those two methods to move names from right to left. When you have created a group, type a name in the **Group name** window, and then click **Apply**.
- To edit an existing individual speed-dial entry, click anywhere on the row containing the contact name to select it, and then click **Update**. Make any required changes, and then click **Apply**.
- To edit an existing group speed-dial entry, click anywhere on the row containing the group name to select it, and then click **Update Group**. Make any required changes, and then click **Apply**.
- To delete an entry from the speed-dial list, select the item and then click **Delete**.
- To move speed-dial entries, select the entry and then click **Move**, or select **Move** and then specify the entry in the dialog box. Either select **Next empty row** or specify the number of the row where you want to move the entry.

 **NOTE:** If you specify a row that is occupied, then the new entry will overwrite the existing entry.

- To import contacts from a phone book that exists in Lotus Notes, Outlook, or Outlook Express, use the following procedure:

1. Click **Import/Export Phone Book**.
2. Select the **Import** option, and then click **Next**.
3. Select the appropriate software program, navigate to the appropriate file, and then click **Finish**.

To export contacts from a phone book, use the following procedure:

1. Click **Import/Export Phone Book**.
2. Select the **Export**, and then click **Next**.
3. Enter the file name or browse to the file to which you want to export contacts, and then click **Finish**.

You can also select individual entries from the phone book instead of importing the entire phone book.

- To delete all entries, click **Delete All**, and then click **Yes**.

In addition to numerical digits, the following are valid characters for fax numbers:

- (
-)
- +
- -
- *
- #
- R
- W
- .
- ,
- <space>

 **NOTE:** Click **Apply** for the changes to take effect.

Fax Send Log pane

The **Fax Send Log** pane lists all recently sent faxes and information about them, including the date and time sent, job number, fax number, page count, and the results.

The **Results** column provides the fax status. If the fax attempt was unsuccessful, this column provides a description of why the fax was not sent.

Click any column heading to re-sort the information in that column in ascending or descending order.

Click the **Refresh** button to view new fax data. The following information for each fax appears in the logs:

- Date and time
- Job number
- Fax number
- Pages
- Result


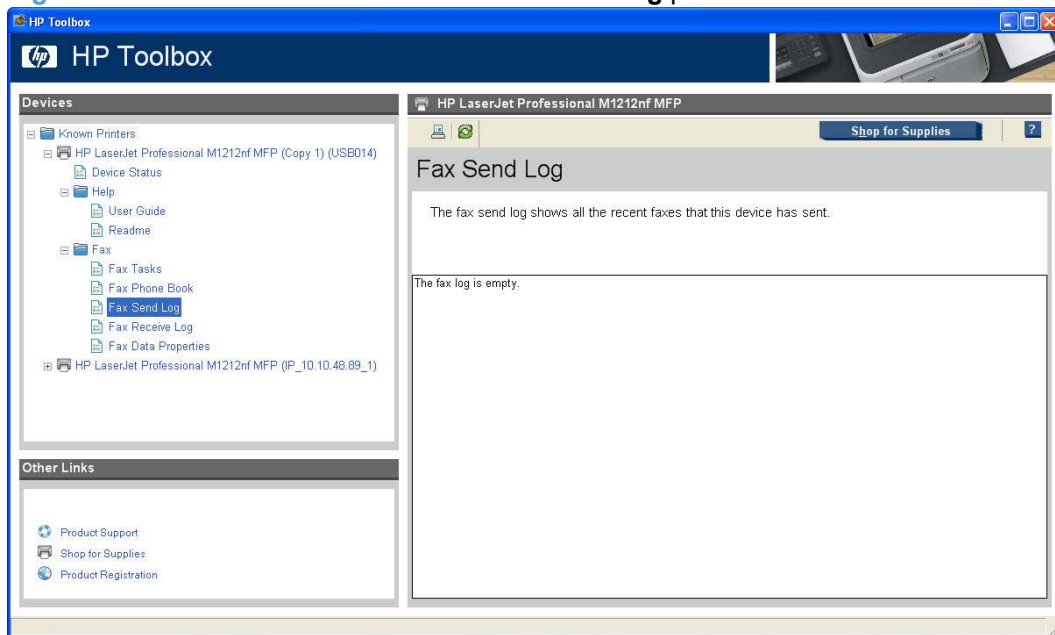
 **NOTE:** A maximum of 40 fax log entries are listed.

Figure 2-7 HP Toolbox FX **Fax** folder – **Fax Send Log** pane



Fax Receive Log pane

The **Fax Receive Log** pane provides a list of all recently received faxes and information about them including the date and time received, job number, fax number, page count, and results.


The **Results** column provides the fax status. If the fax attempt was unsuccessful, this column provides a description of why the fax was not sent.

The **Fax Receive Log** pane can be used to block future faxes. Check the **Block Faxes** box next to a received fax listed on the log, or click the **Go to Junk Faxes page** link to go to that pane, which is described below.

Click the **Refresh** button to view new fax data. The following information for each fax appears in the logs:


- Date and time
- Job number
- Fax number

- Pages
- Result

 **NOTE:** A maximum of 40 fax log entries are listed.

NOTE: The **Fax Receive Log** pane is not self-refreshing. If left open, newly-received faxes will not appear until the screen is refreshed.

Figure 2-8 HP Toolbox FX Fax folder – **Fax Receive Log** pane

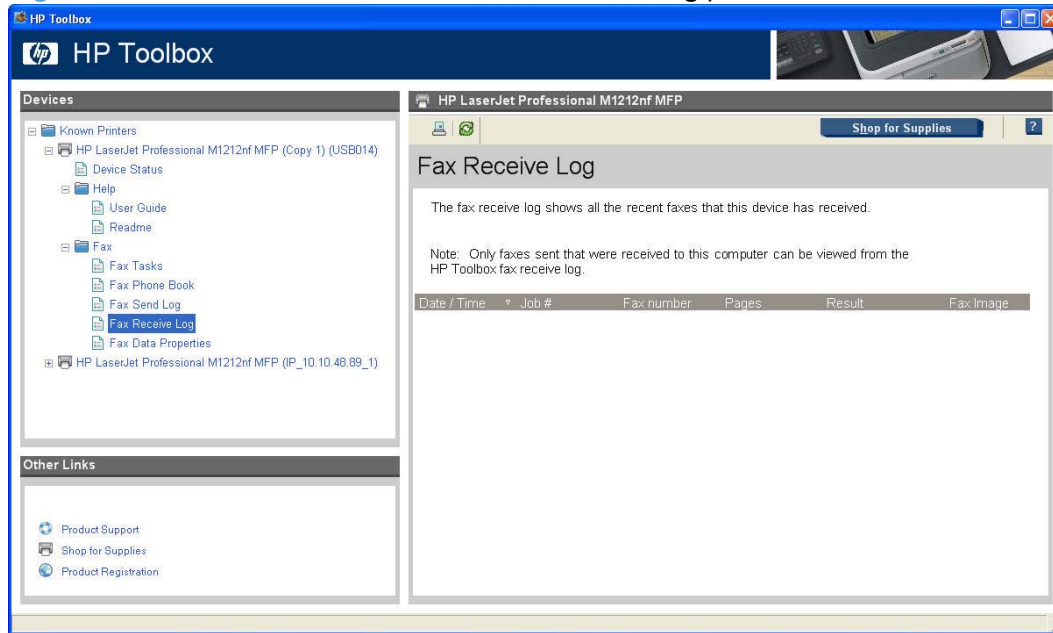


Fax Data Properties pane

Use the **Fax Data Properties** pane to manage the space used to store faxes on your computer.

- Select **Delete fax data files older than:** to specify the number of days faxes are stored on your computer.
- Select **Limit total data storage size to:** to specify the amount of storage your computer allocates for fax data storage.

Figure 2-9 HP ToolboxFX Fax folder – Fax Data Properties pane

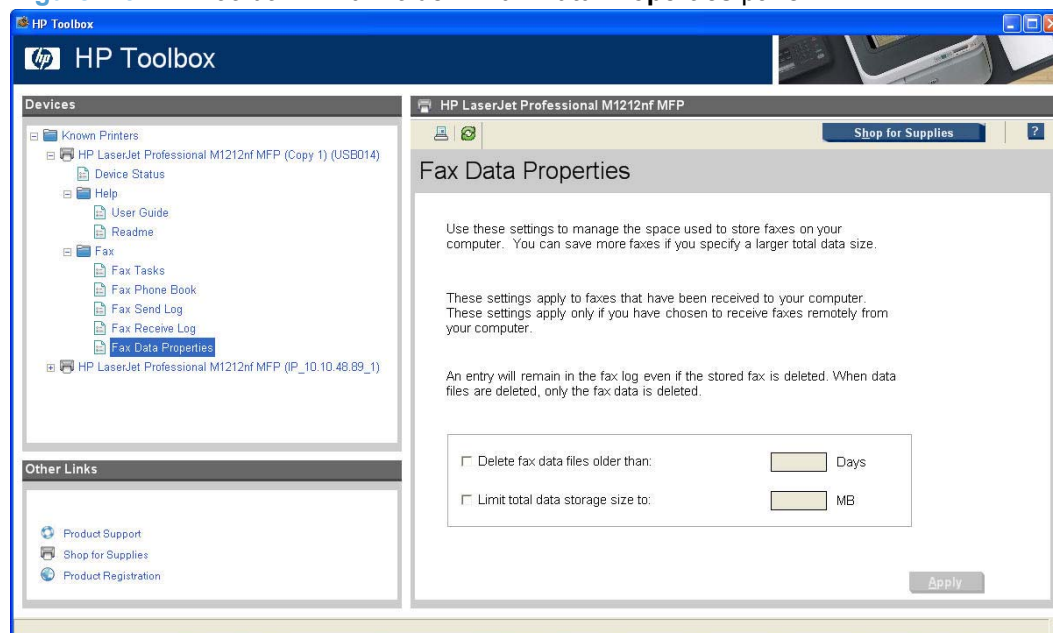

Other Links

- [Product Support](#)
- [Shop for Supplies](#)
- [Product Registration](#)

Product Support

Select **Product Support** to get to a Web page with links to online support for the product.

Shop for Supplies

The **Shop for Supplies** link connects to a Web page that can be used to order supplies online. The supplies come not come from HP but from a choice of resellers. Supplies are preselected. Use the options on this screen to change quantities or order additional items. The selected items are dropped into the shopping cart, ready for checkout. This process ensures that the correct supplies are ordered from the selected reseller.

Product Registration

The **Product Registration** link connects to a Web page to register the product.

3 Install Windows printing-system components

The HP LaserJet Professional M1130/M1210 MFP Series comes with software and installers for Microsoft Windows and Apple Macintosh systems. For information about Macintosh software, see [Macintosh software and utilities on page 149](#). Linux and UNIX systems support the HP LaserJet Professional M1130/M1210 MFP Series, and software is available on the Web. This chapter provides procedures for installing and uninstalling the HP LaserJet Professional M1130/M1210 MFP Series printing-system software for Windows operating systems.

- [Supported operating systems for Windows](#)
- [Windows operating system requirements](#)
- [Install overview](#)
- [Software installation types for Windows](#)
- [Installation options](#)
- [Microsoft Windows general installation overview](#)
- [Detailed MS Windows installation instructions](#)
- [Uninstall software](#)

Supported operating systems for Windows

The HP LaserJet Professional M1130/M1210 MFP Series printer supports the following Windows operating systems:

- Windows XP (32-bit and 64-bit)
- Windows Server 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Windows Server 2008 (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)

Windows operating system requirements

The HP printing-system software has the following minimum system requirements for Windows 7, Windows Vista, Windows XP, and Windows Server 2003.

- 1 GHz processor
- 1 GB RAM
- 700 MB free hard disk space



NOTE: Windows 95, Windows 98, Windows Me, and Windows NT are not supported.

All Windows operating systems also have the following requirements:

- A CD-ROM, DVD drive, or Internet connection with which to install the printing-system software
- A dedicated USB 1.1 or USB 2.0 connectivity port, or network connection, to communicate with the product

Install overview

The software for the HP LaserJet Professional M1130/M1210 MFP Series product is available from the product firmware or from the printing-system software CD. HP Smart Install installs the HP LaserJet Professional M1130/M1210 MFP Series printing-system software from the product firmware onto the hard disk and updates Windows files. HP Smart Install is the recommended installation method.

For all supported operating systems, each install option presents a series of screens that guide you through the installation process.

Software installation types for Windows

The HP LaserJet Professional M1130/M1210 MFP Series printing-system software can be installed in the following ways:

- **HP Smart Install:** Recommended, included in the product firmware. HP Smart Install starts automatically when the product is connected to a computer by USB. HP Smart Install can also be started from the product's EWS for M1210 Series products.
- **CD install:** Optional installation method.

Installation options

The HP LaserJet Professional M1130/M1210 MFP Series printing-system software can be installed when the product is connected to the computer in the following configurations:

- Directly connected via a USB port
- Connected via a wired network

Microsoft Windows general installation overview


HP LaserJet Professional M1130/M1210 MFP Series printing-system software for Windows systems

HP LaserJet Professional M1130/M1210 MFP Series printing-system software can be installed either via a direct USB connection to the product or from the printing-system software CD

USB installation

 **NOTE:** This installation type is supported for Windows only.

The HP Smart Install allows you to install the product driver and software by connecting the product to a computer through a USB cable.

 **NOTE:** The installation CD is not required during a HP Smart Install. Do not insert the software installation CD into the computer CD drive.

1. Turn the product on.
2. Connect the USB cable.
3. The HP Smart Install program should start automatically. Follow the onscreen instructions to install the software.
 - If the HP Smart Install program does not start automatically, AutoPlay might be disabled on the computer. Browse the computer and double-click the HP Smart Install drive to run the program. If you cannot find the HP Smart Install drive, use the product installation CD to install the software.
 - If the program prompts you to select a connection type, select the connection type you will use to print to the product after installation.

CD installation

In supported Windows environments (Windows 7, Windows Server 2003, Windows Server 2008, Windows XP, and Windows Vista), insert the printing-system software CD in the CD-ROM drive to open an interactive CD Browser. Use the CD Browser to install the drivers and related components, and to gain access to online user documentation and optional HP software.


If the installation screen does not appear when you insert the printing-system software CD into the CD-ROM drive, follow these steps to open the CD Browser:

1. On the **Start** menu, click the **Run** option.
2. Type the following: X:\SETUP.EXE (where X is the letter of the CD-ROM drive).
3. Click the **OK** button.

The main screen of the software CD Browser contains installation and documentation options in the left panel. Move the cursor over each option to see a description of the option in the right panel. The following

figure shows the main screen of the HP LaserJet Professional M1130/M1210 MFP Series printing-system software CD.


Figure 3-1 CD Browser – Main screen

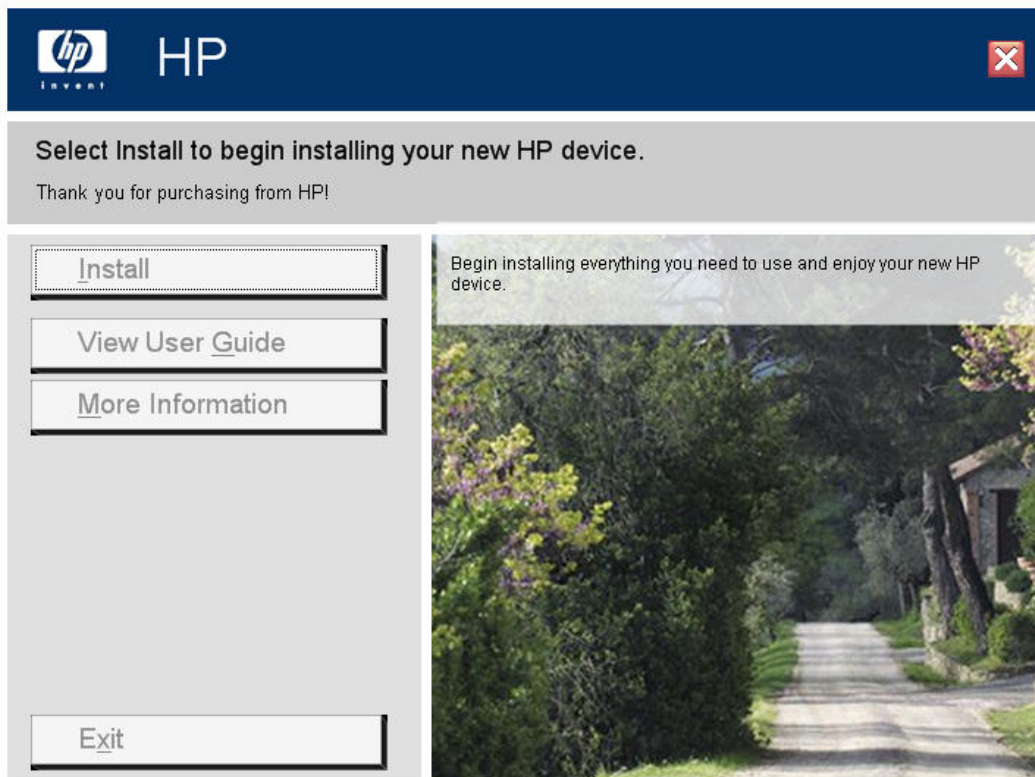

Click **Install** to start the CD installer. By default, the CD installer installs the HP LaserJet Professional M1130/M1210 MFP Series Host-based print driver, the driver recommended for most users.

 **NOTE:** For more information about HP LaserJet Professional M1130/M1210 MFP Series printer drivers, see [HP host based print driver for Windows on page 117](#).

Install the print driver using the Microsoft Add Printer Wizard

 **NOTE:** You can return to the previous screen by clicking the **< Back** button, or exit the Add Printer Wizard by clicking the **Cancel** button.

Select one of the following three options to install the print driver using the Microsoft Add Printer Wizard:

- **Use an existing port for a direct connection:** The product is connected to the computer using a USB cable or is connected via the network without using a print server and the printer port already exists.

Follow these instructions to select the correct connection option:

1. On the **Start** menu, click the **Settings** option, and then perform one of the following:


Windows XP Home: Click the **Printers and Other Hardware Devices** option.

Windows XP Professional, Windows Server 2003, and Windows 2008: Click the **Printers and Faxes** option.

Windows Vista: Under the **Hardware and Sound** category, click the **Printer** option.


Windows 7: Click the **Devices and Printers** option.

2. Click the **Add a printer** option. The Add Printer Wizard opens.
3. Click the **Next** button on the **Add Printer Wizard** welcome dialog box.
4. If the product is connected to the computer using a USB cable or is connected via the network without using a print server, select the **Local printer attached to this computer** option, and then click the **Next >** button.

 **NOTE:** If you select the **Automatically detect an install my Plug and Play printer** check box prior to clicking the **Next >** button, the computer will automatically install the print driver.

NOTE: If the product is connected via the network using a print server, select the **A network printer, or a printer attached to another computer** option (Point and Print installation), and then click the **Next >** button. For detailed installation instructions, see [Print server connection on page 71](#).

Figure 3-2 Add Printer Wizard – Local or Network Printer screen

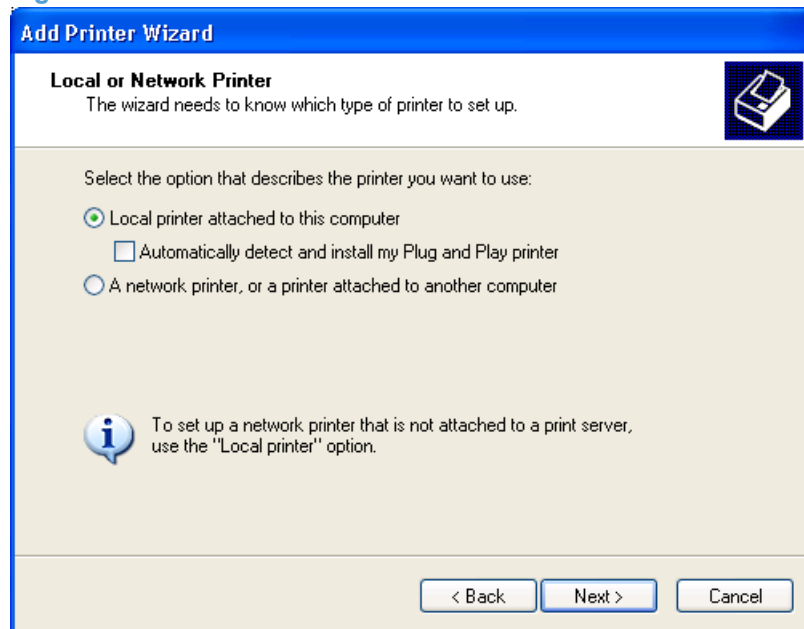

- **Create a new TCP/IP port for a direct connection:** The product is connected via the network without using a print server and the printer port does not exist.
- **Print server connection:** The product is connected via the network using a print server.

Use an existing port for a direct connection

Use these instructions when the product is connected to the computer using a USB cable or when printing via the network without using a print server.

1. If the product is connected to the computer using a USB cable or is connected via the network without using a print server and the printer port already exists, select the **Use the following port** option, select the product name, print path, or IP address of the product from the **Use the following port** drop-down list, and then click the **Next >** button.


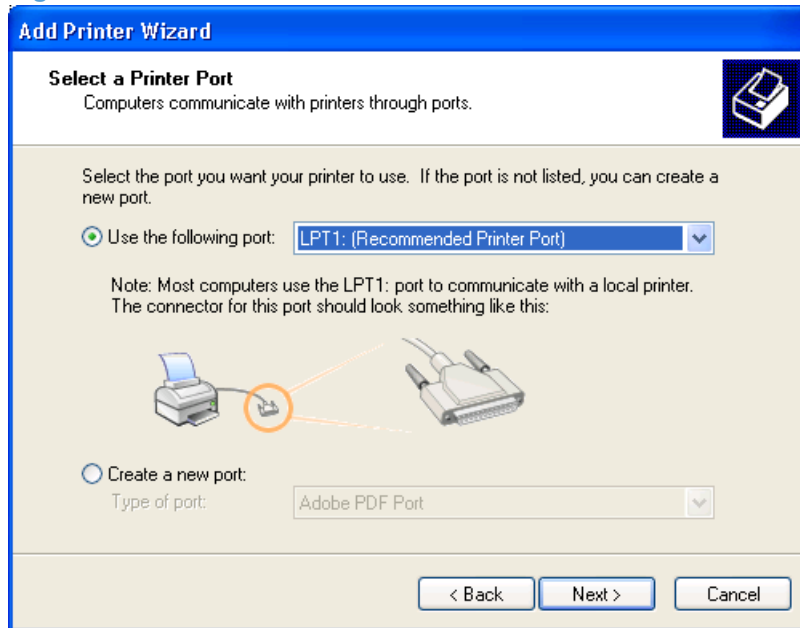
 **NOTE:** If the printer port does not appear in the **Use the following port** drop-down list, see [Create a new TCP/IP port for a direct connection on page 68](#). If the product is connected via the network using a print server, see [Print server connection on page 71](#).


Figure 3-3 Add Printer Wizard — Select a Printer Port screen



2. (Optional) Click the **Windows Update** button to display a list of drivers that can be downloaded from the Microsoft Windows Update Web site.


If the appropriate model of HP LaserJet Professional M1130/M1210 MFP Series is already listed, select it and click the **Next >** button. If the product is not listed, click the **Have Disk** button to continue to the **Install From Disk** screen.

Figure 3-4 Add Printer Wizard — Install Printer Software screen

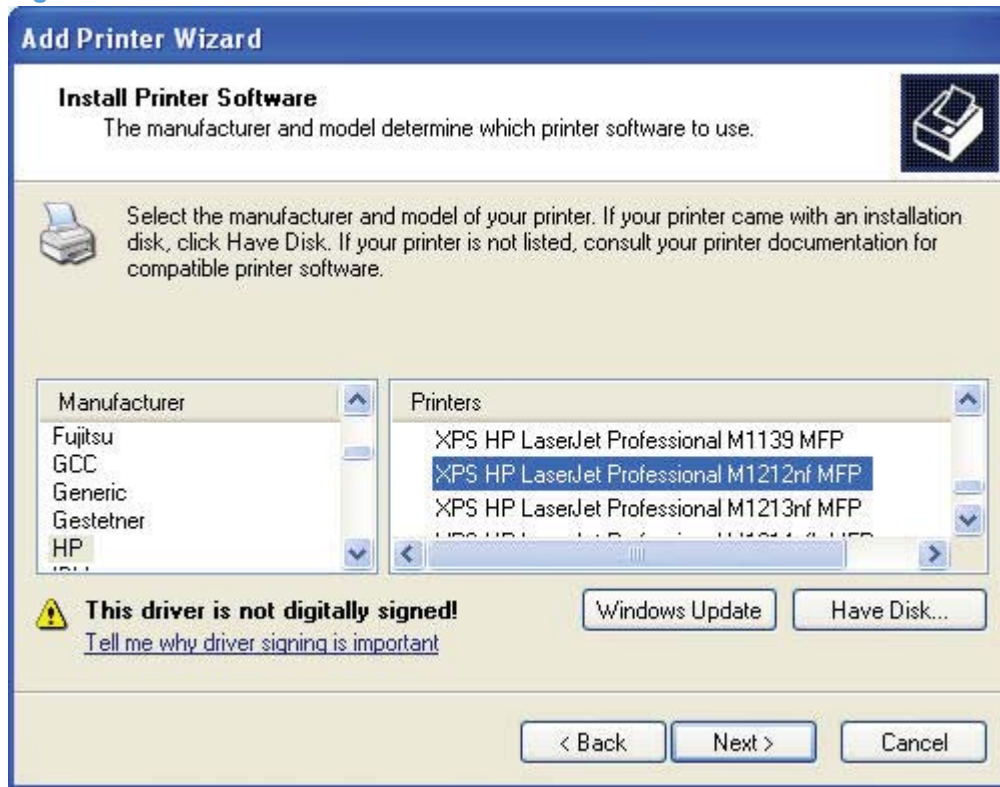

3. If the correct path to the CD-ROM drive is listed in the **Copy manufacturer's files from** text box, click the **OK** button. If not, click the **Browse** button to continue to the **Locate File** screen.


Figure 3-5 Add Printer Wizard — Install from Disk screen

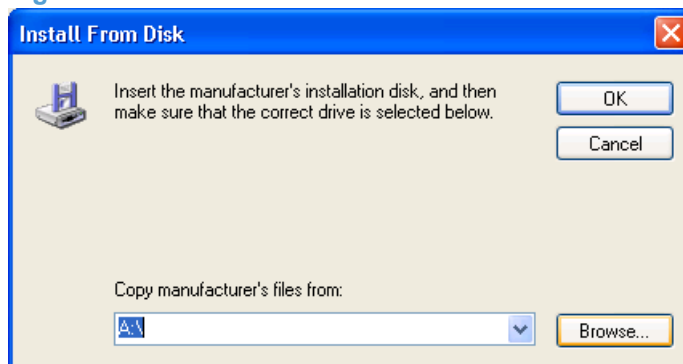

4. Navigate to your CD-ROM drive, and then select the .INF file for your product.
5. Click the **OK** button to continue to the **Install Printer Software** screen.

6. Select the appropriate model of HP LaserJet Professional M1130/M1210 MFP Series from the list and click the **Next >** button to continue to the **Name Your Printer** screen.

Figure 3-6 Add Printer Wizard — Install Printer Software, screen 2

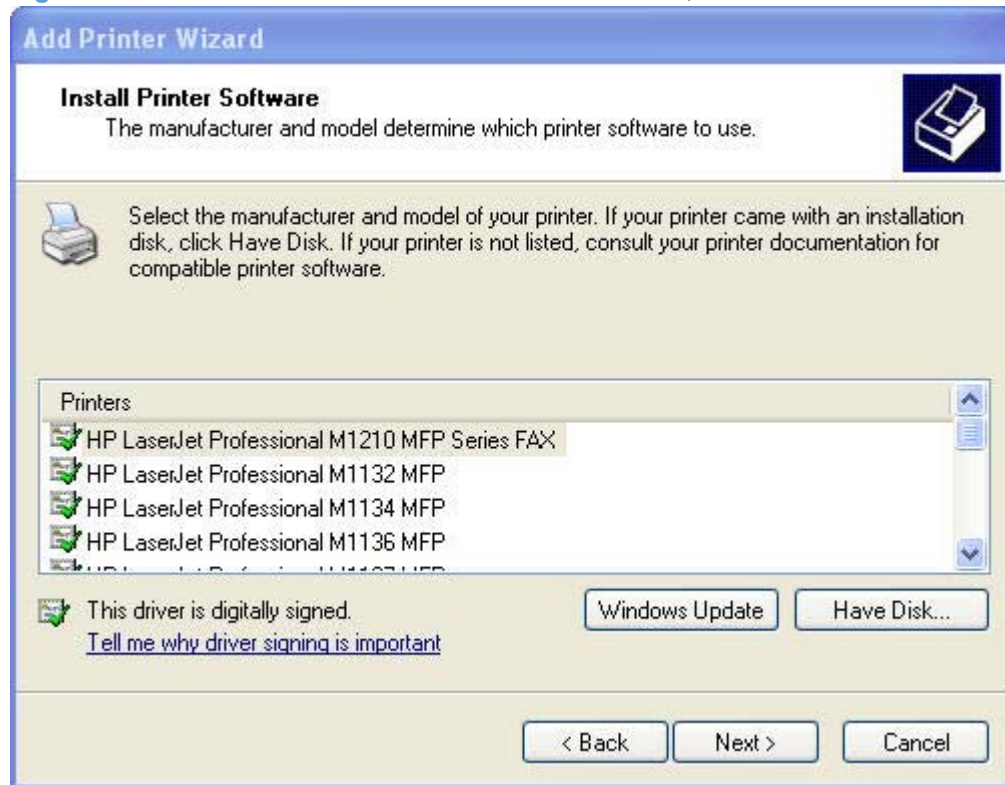


7. You can either type a name for the product in the **Printer name** text box or use the default name provided.

Select the **Yes** option to use this printer as the default printer or select the **No** option to keep the existing product as the default printer.

Click the **Next >** button to continue to the **Printer Sharing** screen.

Figure 3-7 Add Printer Wizard — Name Your Printer screen

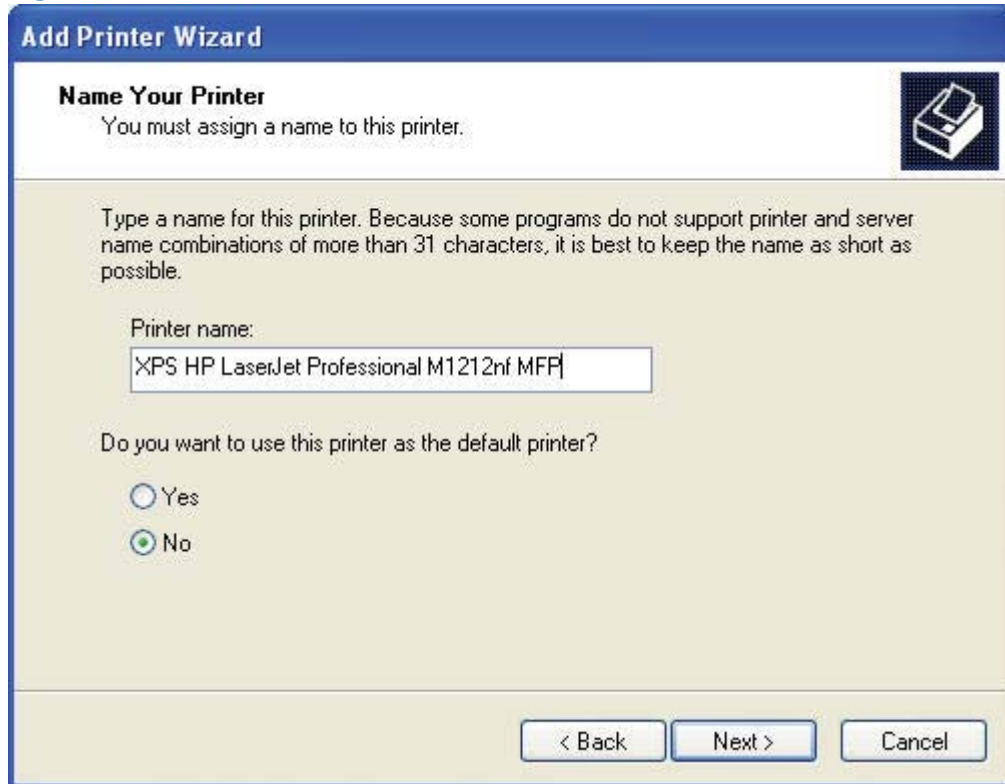

Add Printer Wizard

Name Your Printer
You must assign a name to this printer.

Type a name for this printer. Because some programs do not support printer and server name combinations of more than 31 characters, it is best to keep the name as short as possible.

Printer name:
XPS HP LaserJet Professional M1212nf MFP


Do you want to use this printer as the default printer?

☐ Yes
☒ No

< Back Next > Cancel

8. Select either the **Do not share this printer** option, or select the **Share name:** option and type share name, and then click the **Next >** button to continue to the **Print Test Page** screen.


Figure 3-8 Add Printer Wizard — Printer Sharing screen

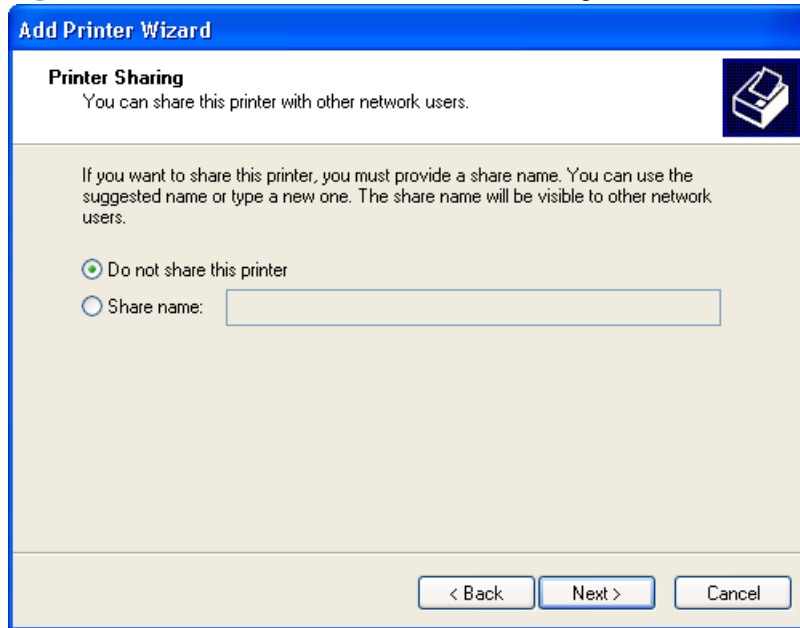

9. Select the **Yes** option if you want to print a test page after the software is installed. Select the **No** option if you do not want to print a test page after the software is installed.

Click the **Next >** button to continue to the **Completing the Add Printer Wizard** screen.

Figure 3-9 Add Printer Wizard — Print Test Page screen

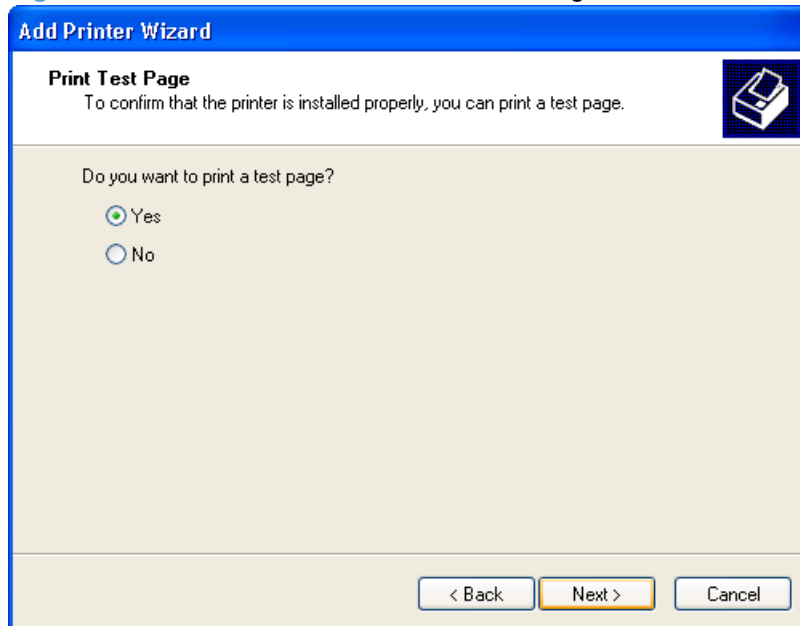

10. Review the installation details, and then click the **Finish** button to complete the Add Printer Wizard.

Create a new TCP/IP port for a direct connection

Perform the following when the product is connected via the network without using a print server and a printer port does not exist:

1. If the printer port does not appear in the **Use the following port** drop-down list, select the **Create a new port** option.
 - If the **Advanced TCP/IP Port Monitor** option appears in the **Type of port** drop-down list, select this option, and then click the **Next** button. The **Welcome to the Add Standard TCP/IP Printer Port Wizard** dialog box appears.
 - If the **Advanced TCP/IP Port Monitor** option does not appear in the **Type of port** drop-down list, select the **Standard TCP/IP Port** option from the **Type of port** drop-down list, and then click the **Next** button. The **Welcome to the Add Standard TCP/IP Printer Port Wizard** dialog box appears.


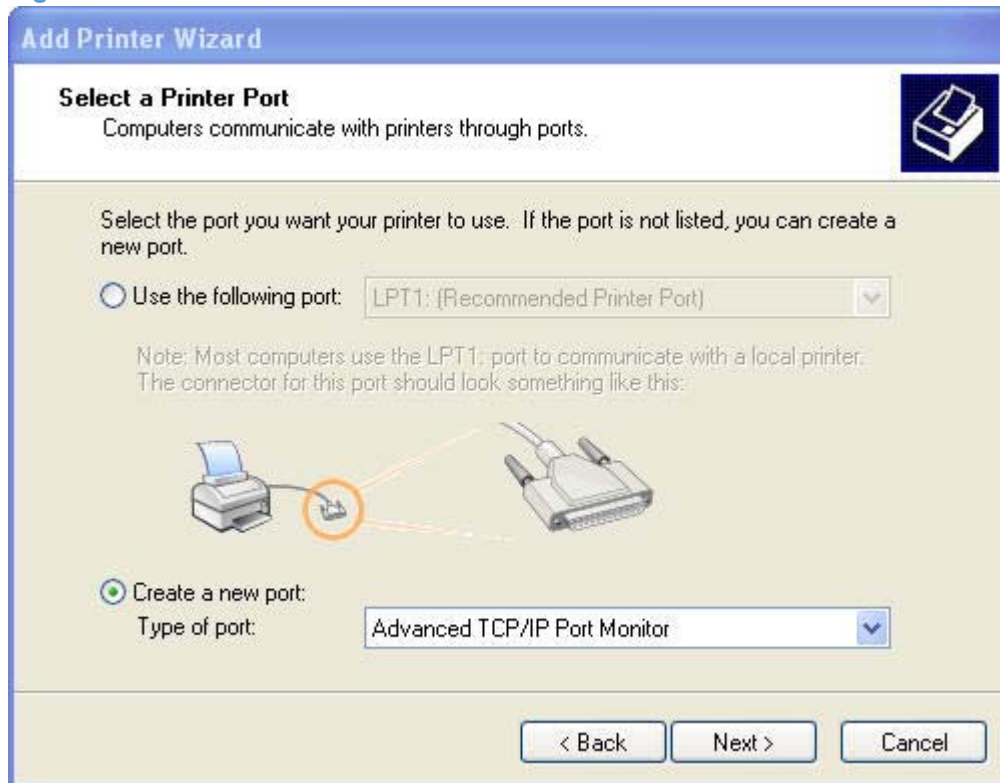
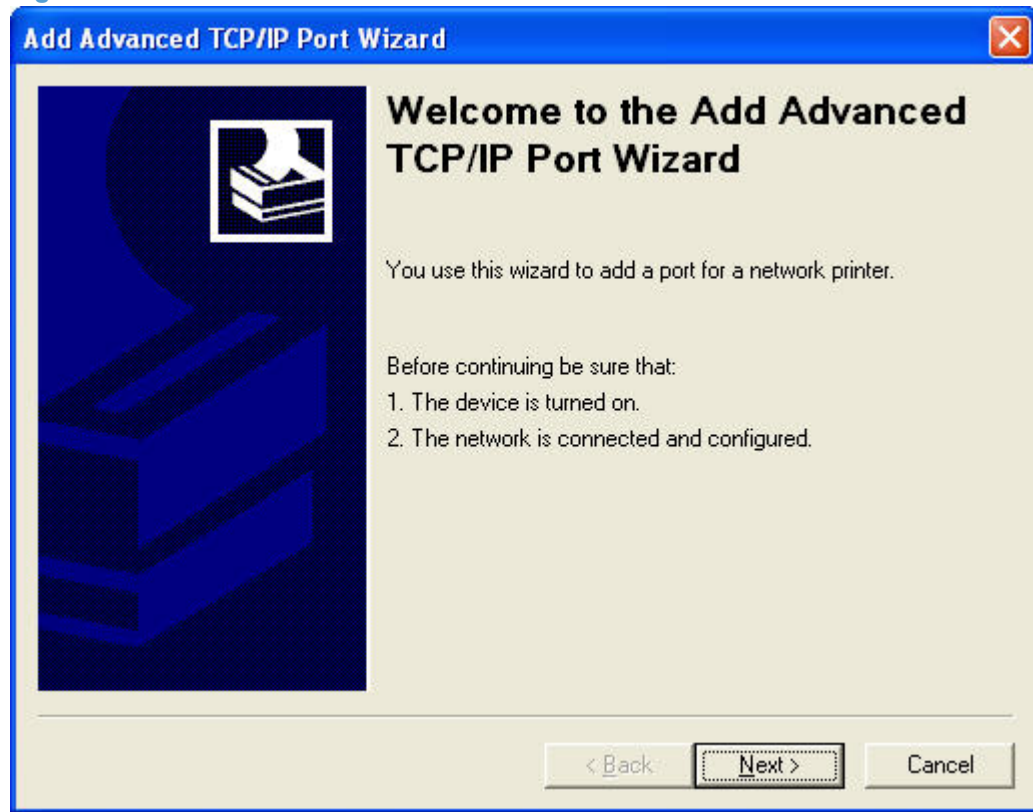
 **NOTE:** If the printer port already appears in the **Use the following port** drop-down list, see [Use an existing port for a direct connection on page 63](#). If the product is connected via the network using a print server, see [Print server connection on page 71](#).

Figure 3-10 Select a Printer Port screen




2. Click the **Next >** button.

Figure 3-11 Add Advanced TCP/IP Printer Port screen




3. Type the product's IP address or host name in the **Printer Name or IP Address** text box, and then click the **Next** button.

 **NOTE:** The default port name is the name that you typed in the **Printer Name or IP Address** text box. You can change this name by typing a new name in the **Port Name** text box.

NOTE: The **Always print to this device, even if its IP address changes** check box is only available if you select the **Advanced TCP/IP Port Monitor** option from the **Select a Printer Port** dialog box. This feature allows the computer to communicate with the product using the MAC address of the network card rather than the IP address.

Figure 3-12 Add Port screen

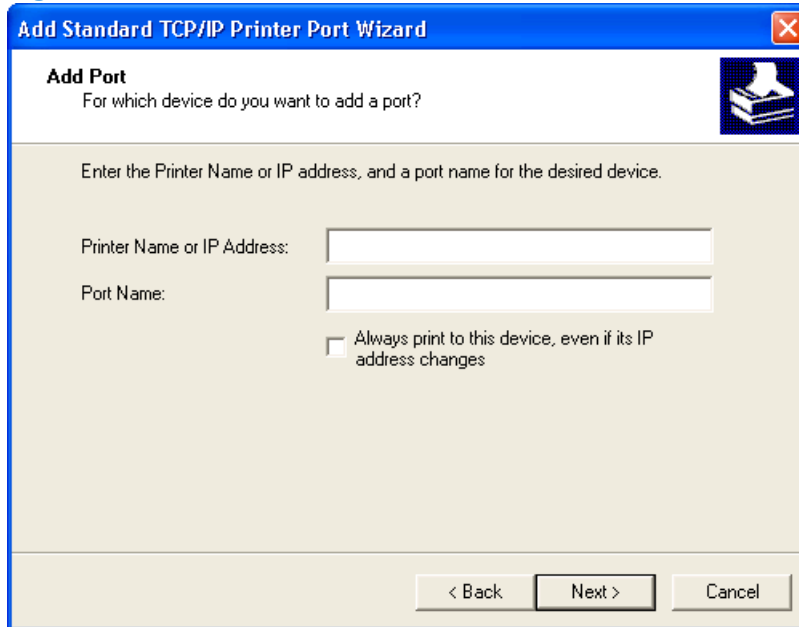

4. Review the installation details, and then click the **Finish** button to complete the Add Printer Wizard.

Print server connection

Perform the following when the product is connected via the network using a print server:

1. If the product is connected via the network using a print server, select the **A network printer, or a printer attached to another computer** option, and then click the **Next >** button.


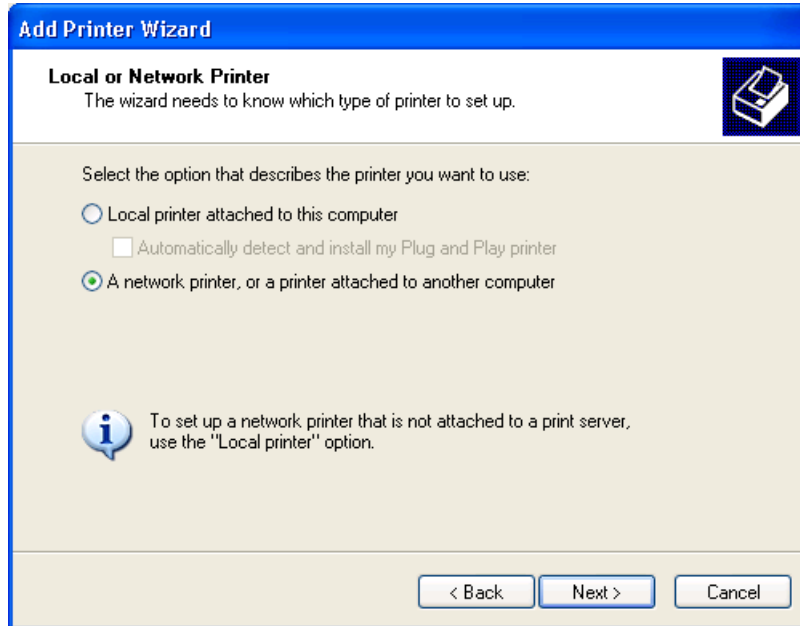
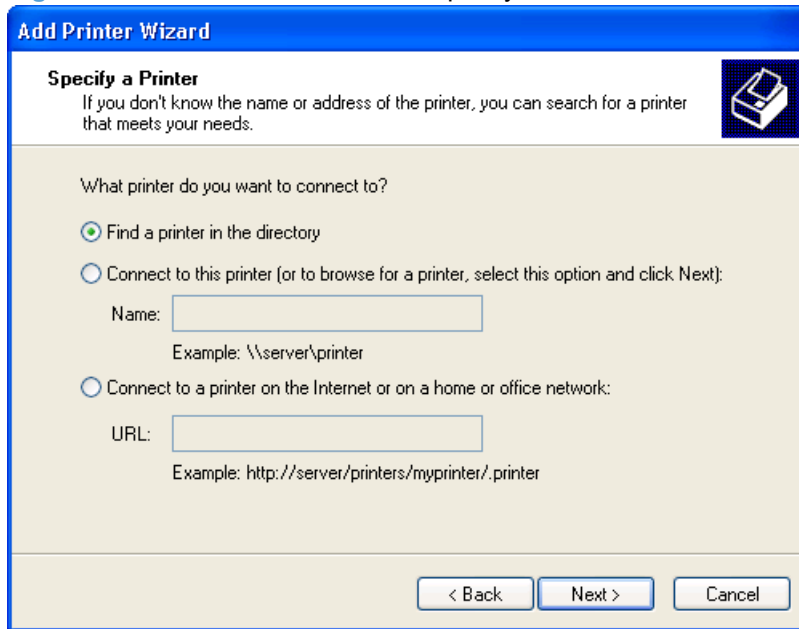
 **NOTE:** If the product is connected to the computer using a USB cable, or is connected via the network without using a print server, select the **Local printer attached to this computer** option, and then click the **Next >** button. You can also select the **Automatically detect and install my Plug and Play printer** check box prior to clicking the **Next >** button to have the computer automatically install the print driver. For detailed installation instructions, see either [Use an existing port for a direct connection on page 63](#) or see [Create a new TCP/IP port for a direct connection on page 68](#).

Figure 3-13 Add Printer Wizard — Local or Network Printer screen



2. Select either the **Find a printer in the directory** option, the **Connect to this printer (or to browse for a printer, select this option and click Next)** option, or the **Connect to a printer on the Internet or on a home or office network** option, and then click the **Next >** button.

Figure 3-14 Add Printer Wizard — Specify A Printer screen



Add Printer Wizard

Specify a Printer
If you don't know the name or address of the printer, you can search for a printer that meets your needs.

What printer do you want to connect to?

☒ Find a printer in the directory

☐ Connect to this printer (or to browse for a printer, select this option and click Next):

Name:

Example: \\server\printer

☐ Connect to a printer on the Internet or on a home or office network:

URL:

Example: http://server/printers/myprinter/.printer

< Back Next > Cancel

If you select the **Find a printer in the directory** option and then click the **Next >** button, you will continue to the **Find Printers** dialog box.

If you select the **Connect to this printer (or to browse for a printer, select this option and click Next)** option and then click the **Next >** button, you will continue to the **Browse for Printer** dialog box.


If you select the **Connect to a printer on the Internet or on a home or office network** option and then click the **Next >** button, you will continue to the **Completing the Add Printer Wizard** dialog box.

Select one of the following options:

a. (Find a printer in the directory option only)


Specify search attributes to find your product on the network, and then click the **Find Now** button to search the specified location for your product. Once the search has completed, select the product, and then click the **OK** button to continue to the **Default Printer** dialog box.

Figure 3-15 Add Printer Wizard — Find Printers screen

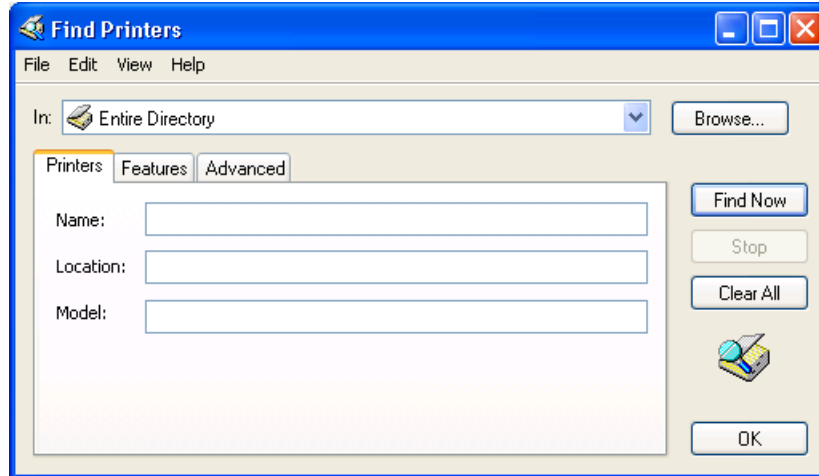

Select either the **Yes** option to use this printer as the default printer, or select the **No** option to keep the existing product as the default printer, and then click the **Next >** button to continue to the **Completing the Add Printer Wizard** dialog box.


Figure 3-16 Add Printer Wizard — Default Printer screen

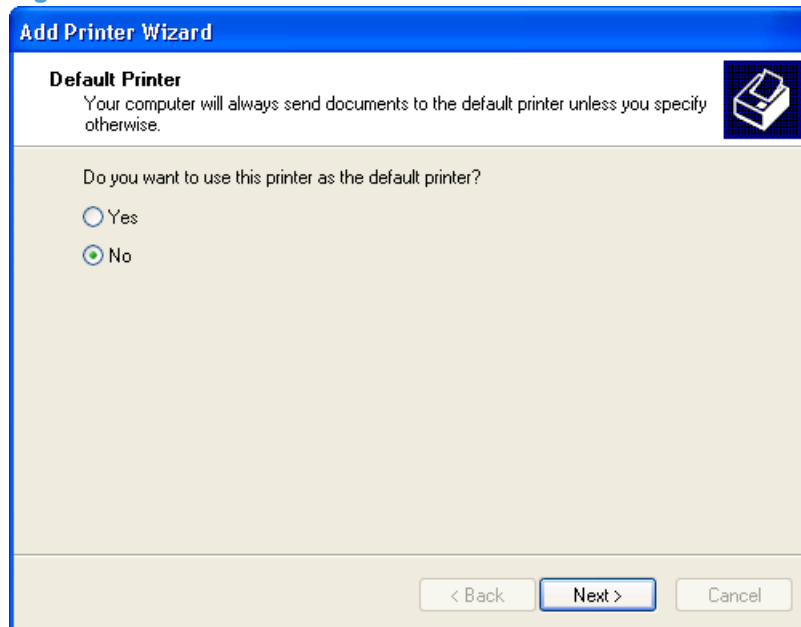

- b. (Connect to this printer (or to browse for a printer, select this option and click Next) option only)

Specify the print path for the product and then click the **Next >** button. The computer will search the network for shared products. Select the product from the list and then click the **Next >** button to continue to the **Completing the Add Printer Wizard** dialog box.

Figure 3-17 Add Printer Wizard — Browse for Printer screen

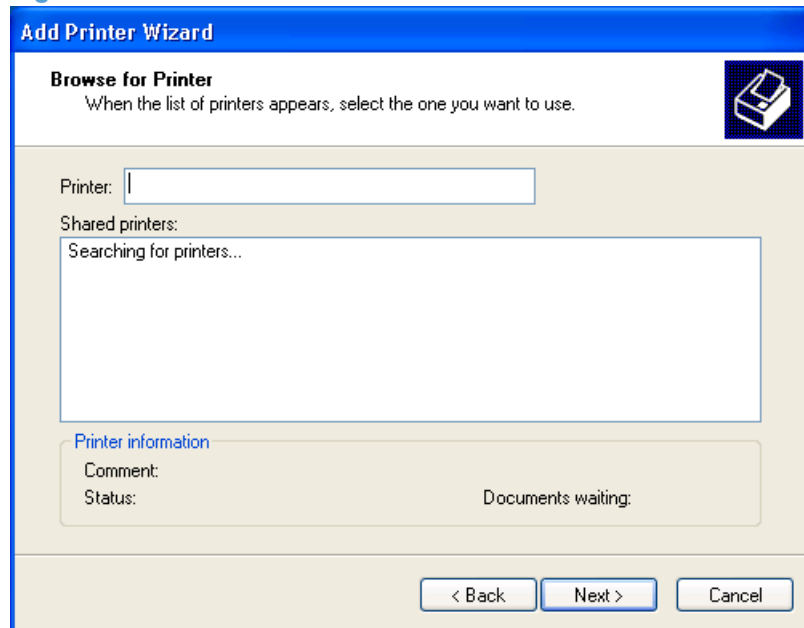

- c. (Connect to a printer on the Internet or on a home or office network option only)

Type the URL for the product, and then click the **Next >** button. Follow the onscreen instructions to connect to the product, and then you will continue to the **Completing the Add Printer Wizard** dialog box.

3. Review the installation details, and then click the **Finish** button to complete the Add Printer Wizard.

Detailed MS Windows installation instructions

The dialog boxes shown here appear in the Windows XP Professional installation sequence. The order and appearance of dialog boxes can vary among operating systems.


Install the Host-based driver using HP Smart Install

- [Install the print driver for USB and wired network connected products](#)
- [EWS Smart Install \(M1210 Series only\)](#)

Install the print driver for USB and wired network connected products


1. Connect the product to the computer using a USB cable. The **Welcome to HP Smart Install** screen appears. Select whether to accept, or review before accepting, the software End User License Agreement, and then click the **Install** button.

Figure 3-18 Welcome to HP Smart Install screen

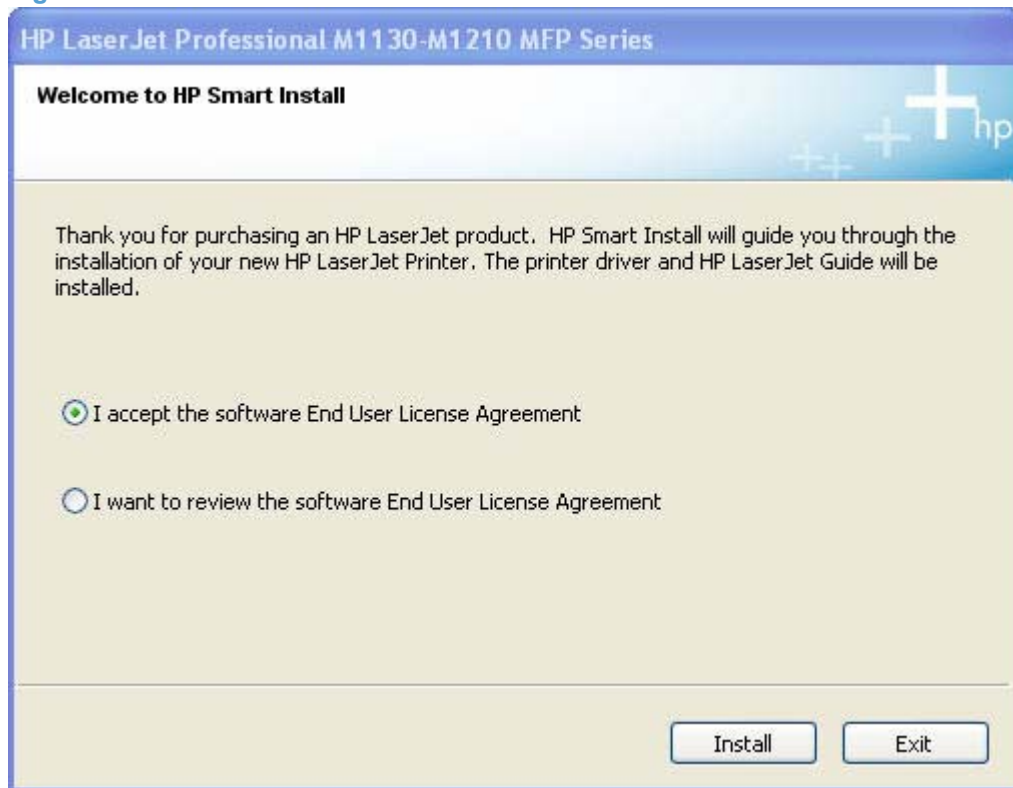

2. On the **Printer Connections** screen, select **Configure to print over the Network** or **Configure to print using USB**. Click the **Next** button.


Figure 3-19 Printer Connections screen

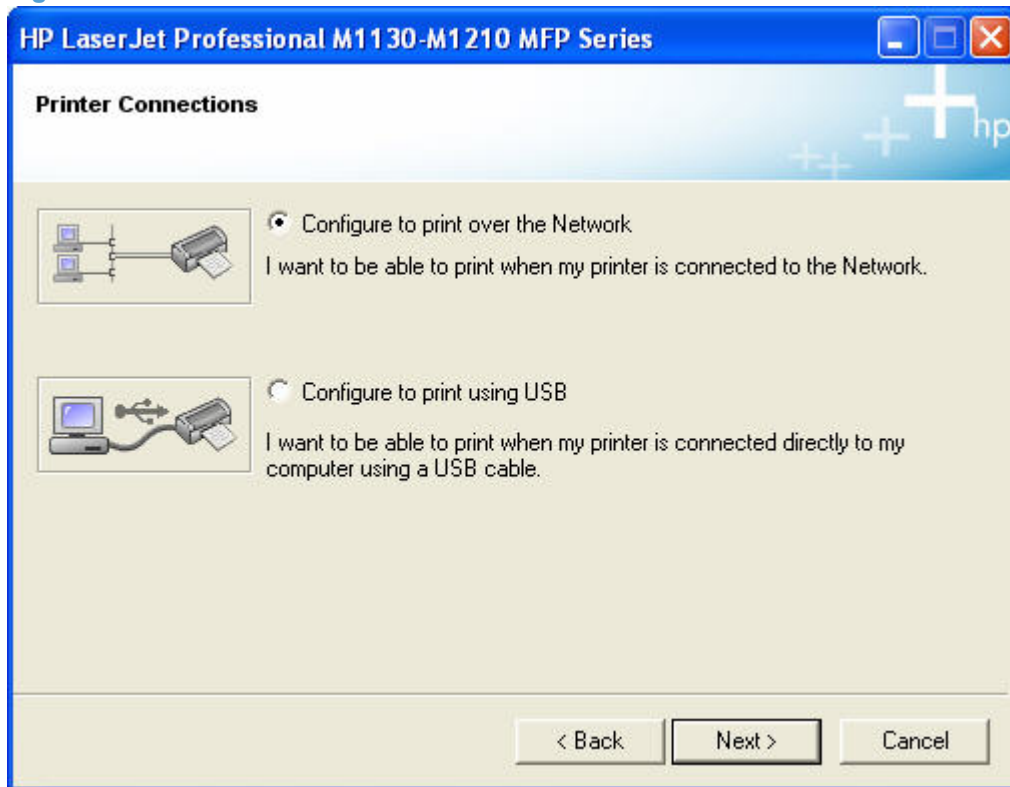


- ▲ For product installations configured to print over the network, follow these steps.
- i. Connect your product to the network if not already connected.
 - ii. The **Network Connection Successful** screen appears. Click the **Next** button.

3. The **Congratulations! Software installation complete** screen appears. Click the **Next** button to register your product and print a test page. Deselect **Register your product** to continue without registering your product.

Figure 3-20 Congratulations! Software installation complete

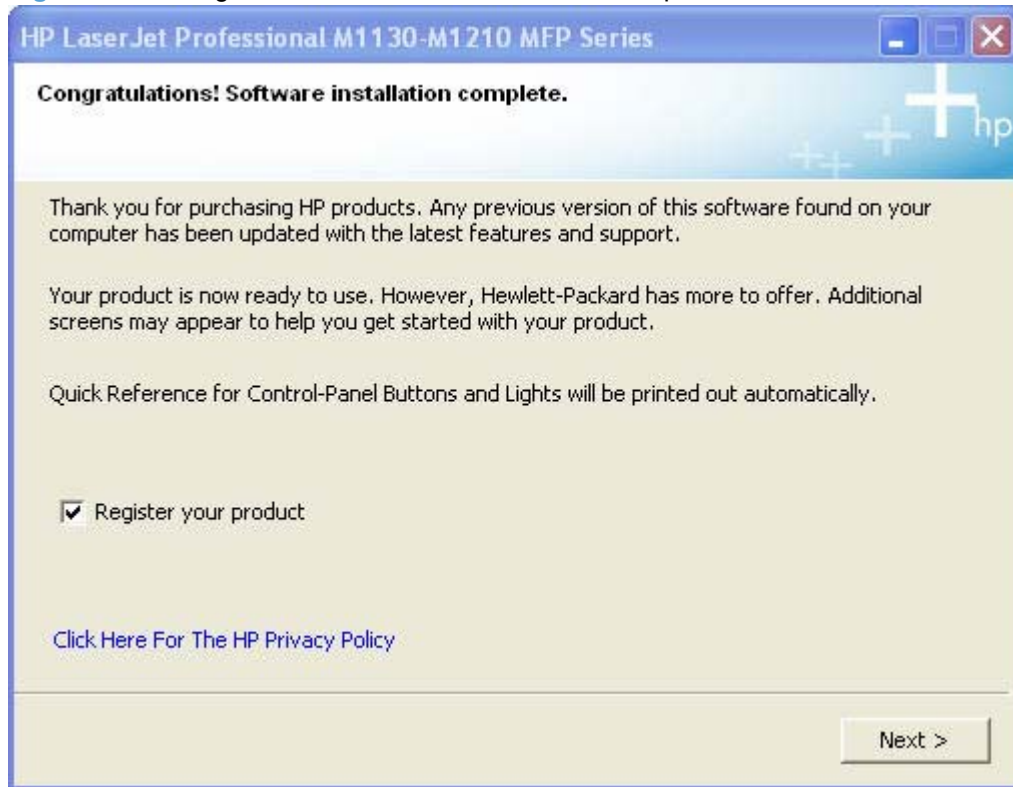


4. Click the **Finish** button to complete the installation.

 **NOTE:** For M1210nf models, the fax configuration setup will start.

5. The HP LaserJet Help Navigation application appears after the installation is complete.


EWS Smart Install (M1210 Series only)

1. Connect the product to the network and turn the power on.
2. Obtain the IP address for your product by printing a product configuration page.
 - a. On the product control panel, press the Setup  button.
 - b. Use the arrow buttons to select the **Reports** menu, and then press the **OK** button.
 - c. Use the arrow buttons to select the **Config report** option, and then press the **OK** button.
3. Locate the IP address on the configuration page. Enter the IP address in the Address field of a Web browser and navigate to the EWS for the product.


4. Click the **HP Smart Install** tab on the EWS, and then click the **Download** button.




5. A download dialog window for the setup file opens. Click **Save File**.

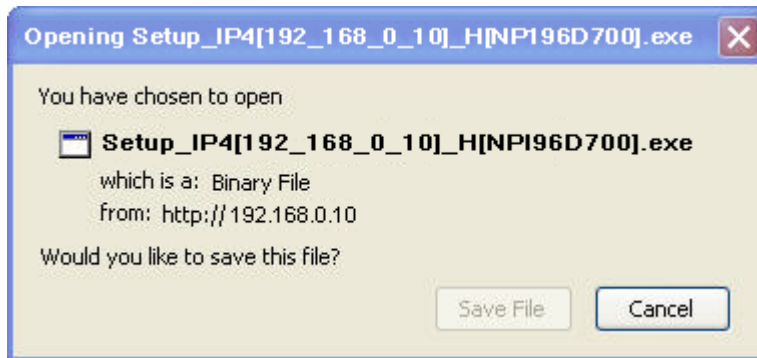


6. Open the downloaded file, and then click the **Run** button on the dialog window that appears.

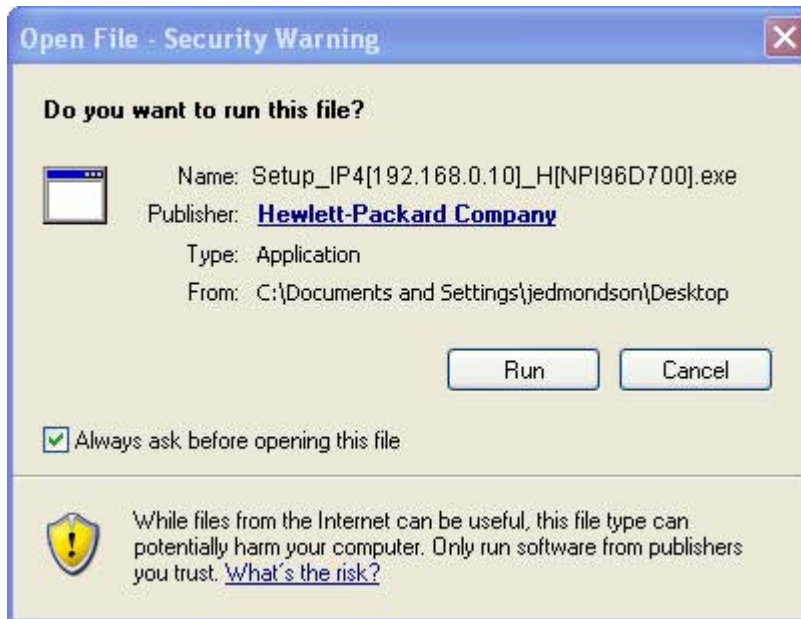

7. The **License Agreement** screen appears. Select **I accept the terms of the license agreement** and then click the **Next** button.

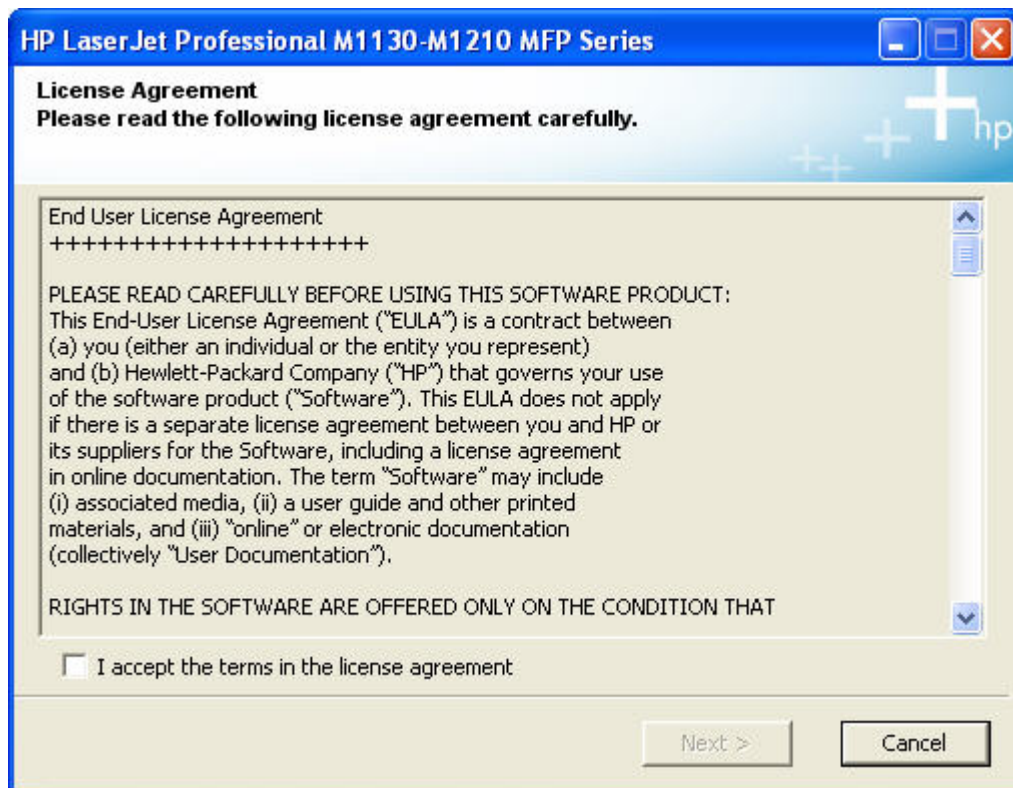


8. The **Congratulations! Software installation complete** screen appears upon successful installation of the driver.

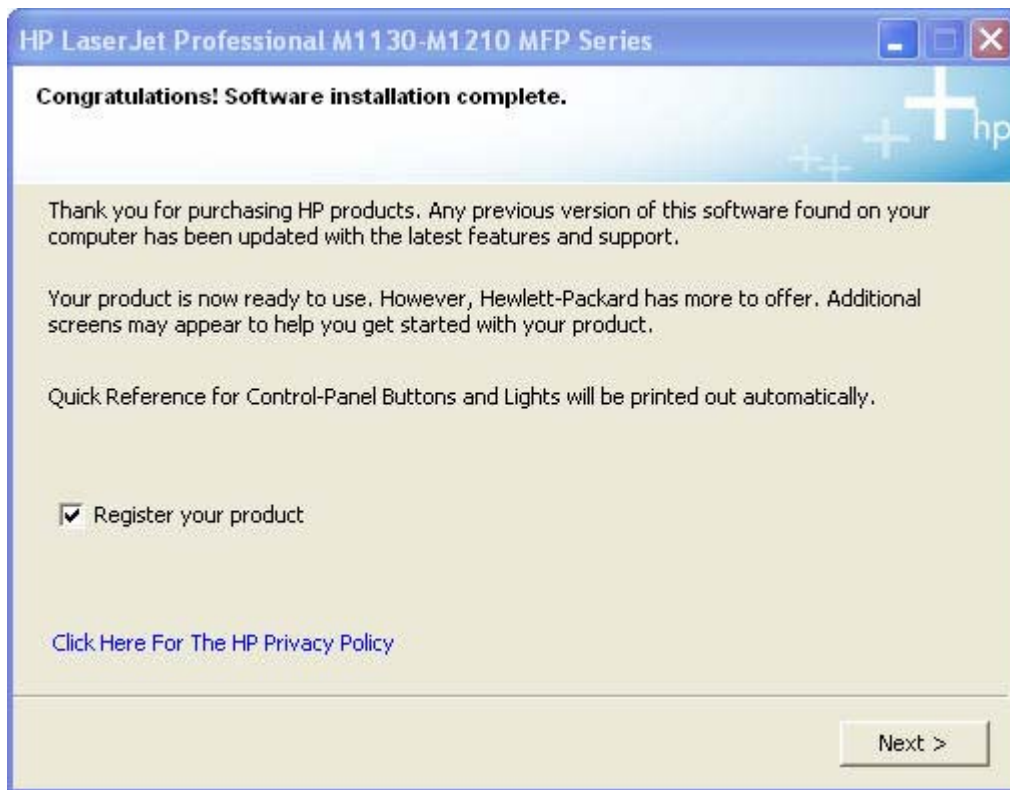


9. **Select Register** your product and **Print Test Page**, and then click the **Next** button. A Web browser opens to the HP Product Registration page, and a test page prints at the product.

10. The **Congratulations! Software installation complete** screen appears with links to download HP Smart Web Printing and the XPS driver.

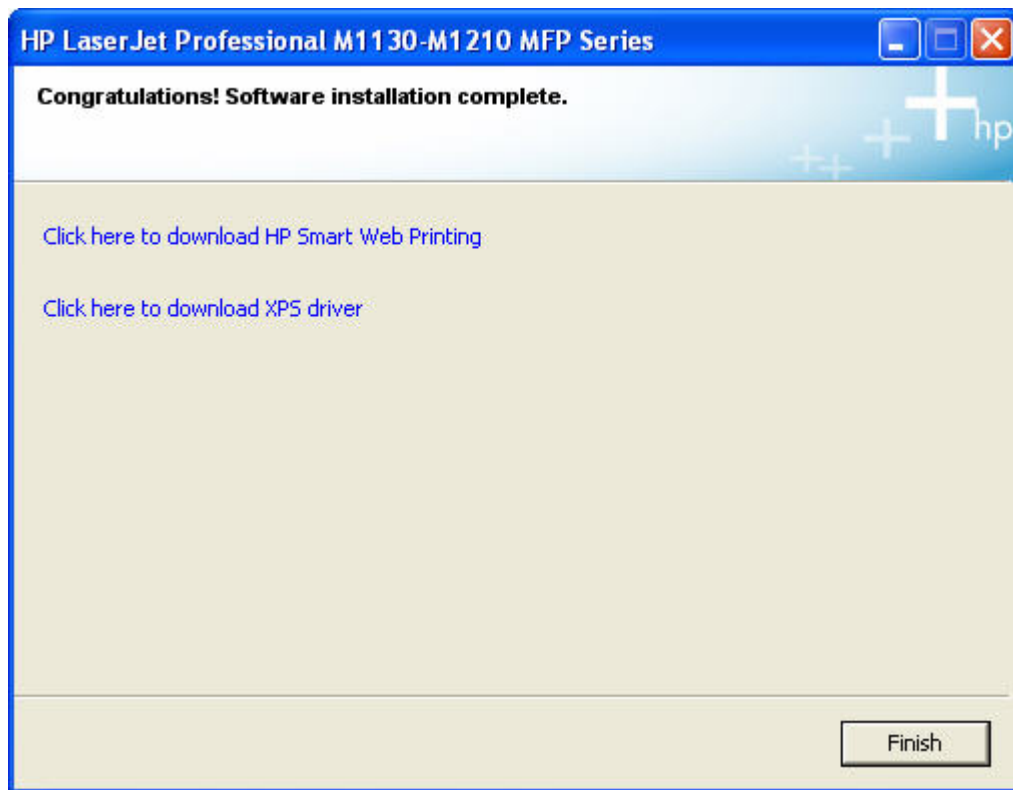

11. Click the **Finish** button.

 **NOTE:** For M1210nf models, the fax configuration setup will start.


12. The HP LaserJet Help Navigation application opens.

Install the Host-based driver from the CD

- [Install the print driver from the CD for USB connected products](#)
- [Install the print driver from the CD for wired network connected products](#)

Install the print driver from the CD for USB connected products

A series of dialog boxes appear during installation of the HP LaserJet Professional M1130/M1210 MFP Series printing-system software in Windows environments.


 **NOTE:** You can return to the previous dialog box by clicking **Back** or exit the HP LaserJet Professional M1130/M1210 MFP Series printing-system software installation by clicking **Cancel** wherever these options appear in the installation sequence.

1. Close all programs.
2. Make sure the USB cable is not connected between the product and the computer. Insert the HP LaserJet Professional M1130/M1210 MFP Series printing system software CD into the CD-ROM drive. The software installer detects the language of the operating system, and then displays the main menu of the CD Browser program in the same language.

If the installer program has not started after 30 seconds, complete these steps.


- a. On the **Start** menu, click **Run**.
- b. Type the following: X:\SETUP.EXE (where X is the letter of the CD-ROM drive).
- c. Click **OK**.

Figure 3-21 Software Installation — Initial screen

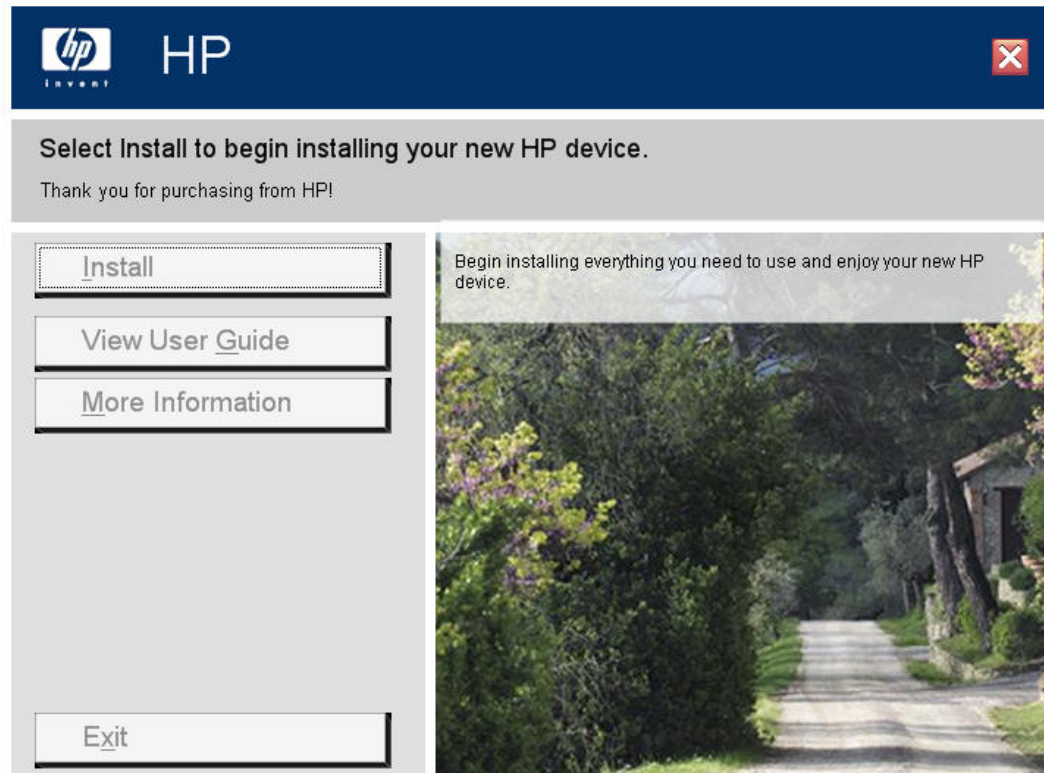

3. Click **Install** to begin the installation process. The **Choose Easy Install or Advanced Install** screen appears.

Figure 3-22 Choose Easy Install or Advanced Install screen

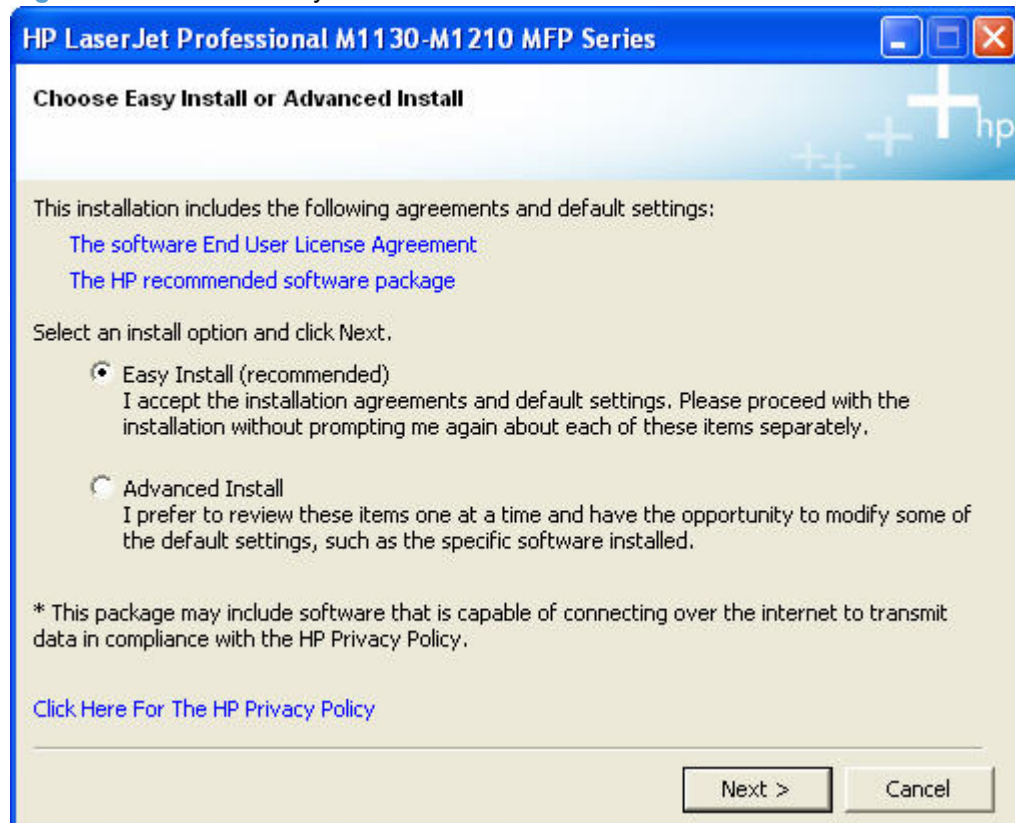


The **Choose Easy Install or Advanced Install** screen contains links to the following information.

- **The software End User License Agreement** – use this link to view the end user license agreement.
 - **The HP recommended software package** – use this link to view information about the HP Customer Participation Program.
 - **Click Here For The HP Privacy Policy** – use this link to view the HP Privacy Policy.
4. Select **Easy Install (recommended)**. Using **Easy Install (recommended)** allows the installation agreements and default settings to be accepted without being prompted for them during the installation. **Advanced Install** allows you to read, and manually accept, each of the installation agreements. Click the **Next** button to continue the installation.


5. Select an appropriate printer model on the **Select Printer** screen and click the **Next** button.

Figure 3-23 Select Printer screen

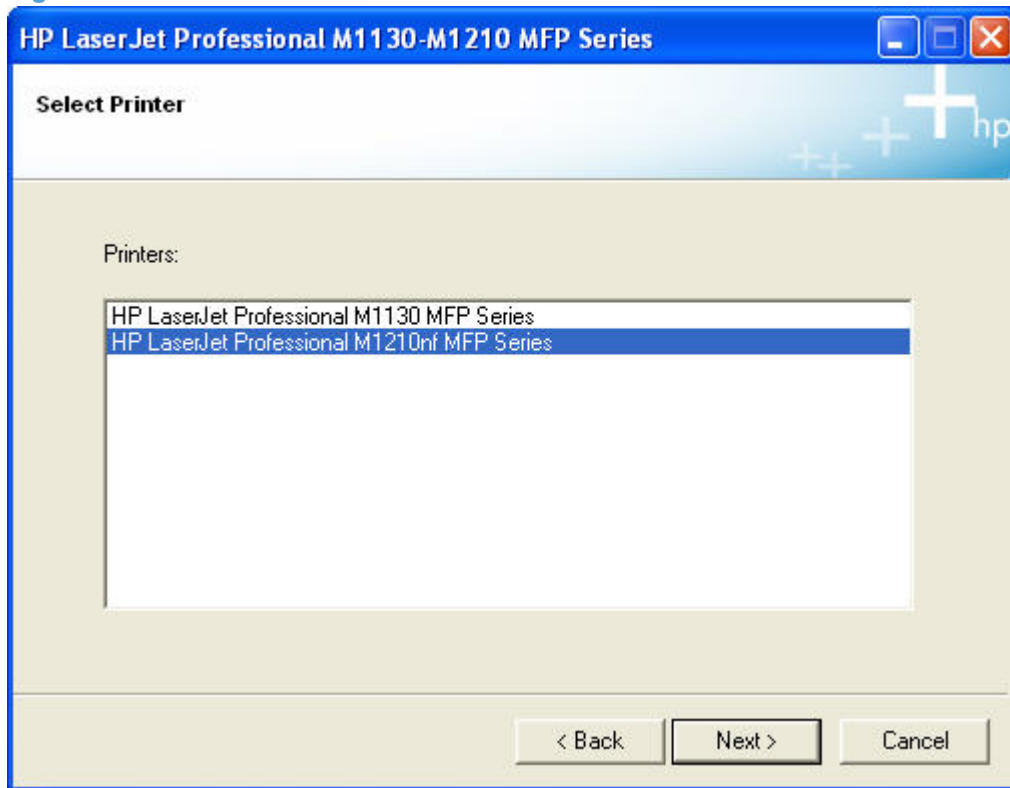


6. Select **Configure to print using USB** and then click the **Next** button.

Figure 3-24 Configure to print using USB screen (part 1)

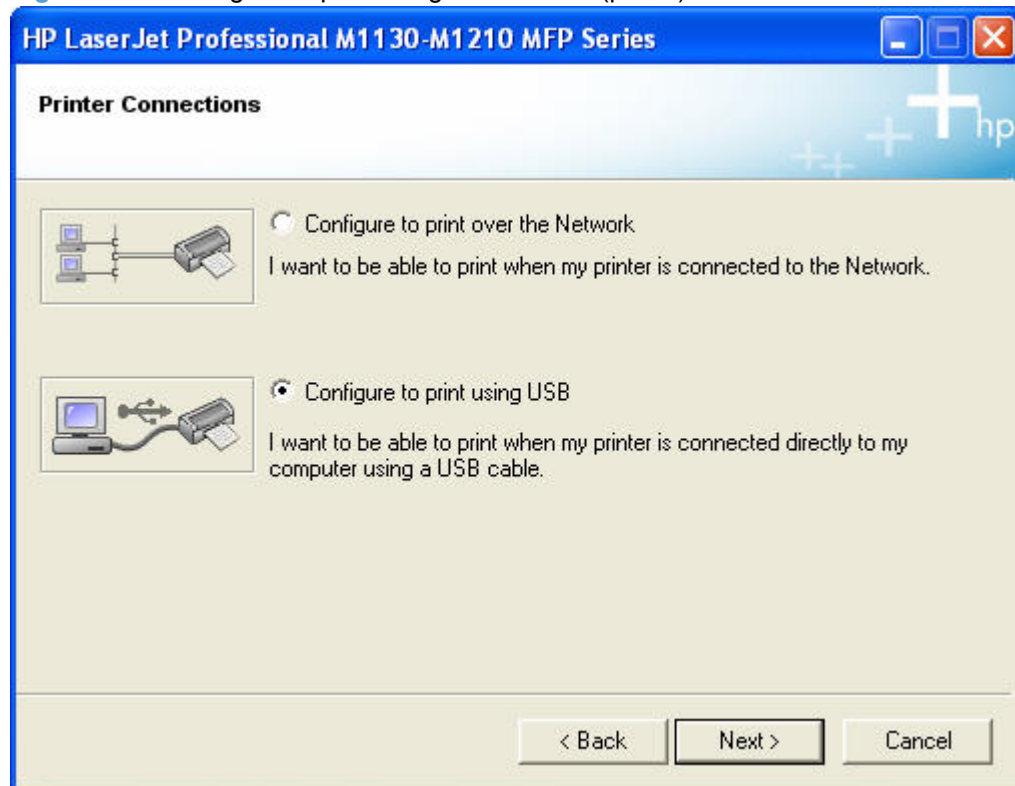


7. Connect a USB cable between the computer and the product when prompted on the **Configure to print using USB** screen.

Figure 3-25 Configure to print using USB screen (part 2)

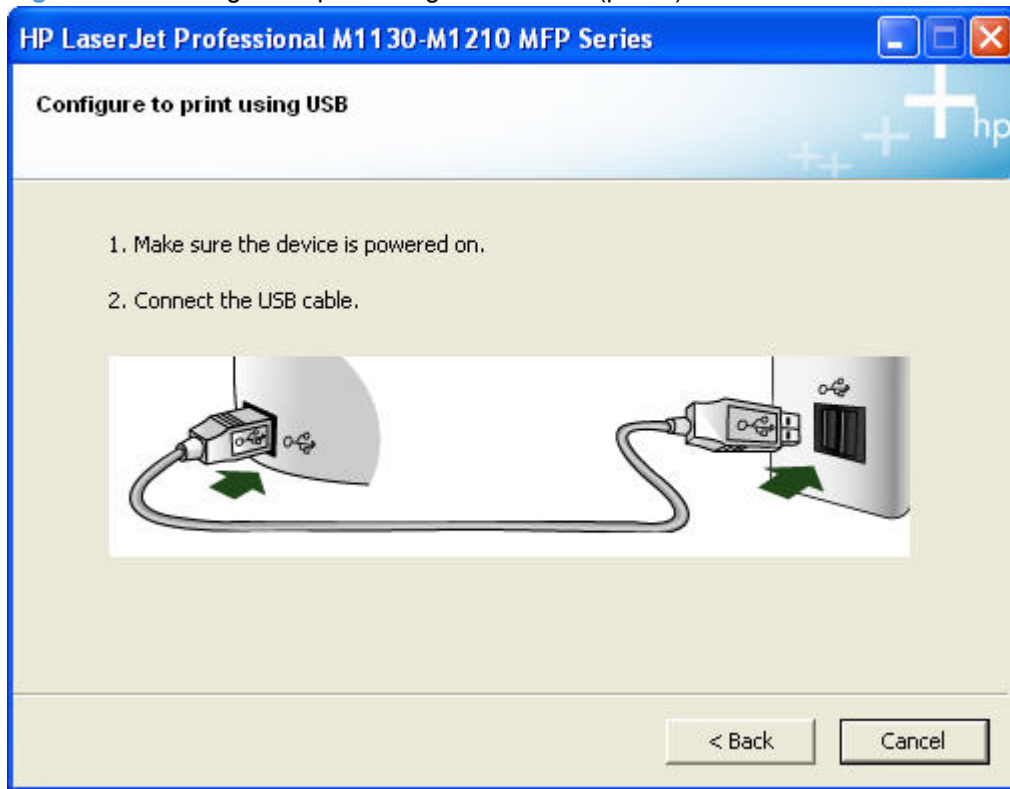

8. The **Congratulations! Software installation complete** screen appears upon successful installation of the driver.


Figure 3-26 Software installation complete screen (part 1)

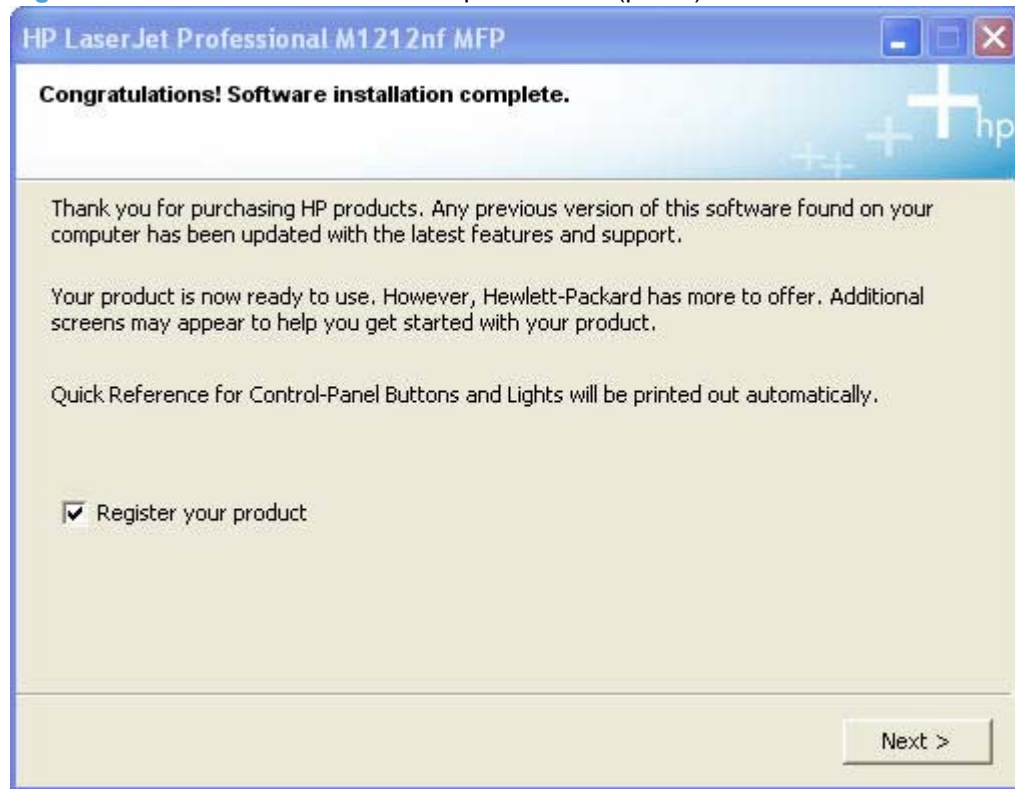

9. Select **Register your product** and then click the **Next** button. A Web browser opens to the HP Product Registration page.

10. The **Congratulations! Software installation complete** screen appears with links to download HP Smart Web Printing and the XPS driver.

Figure 3-27 Software installation complete screen (part 2)

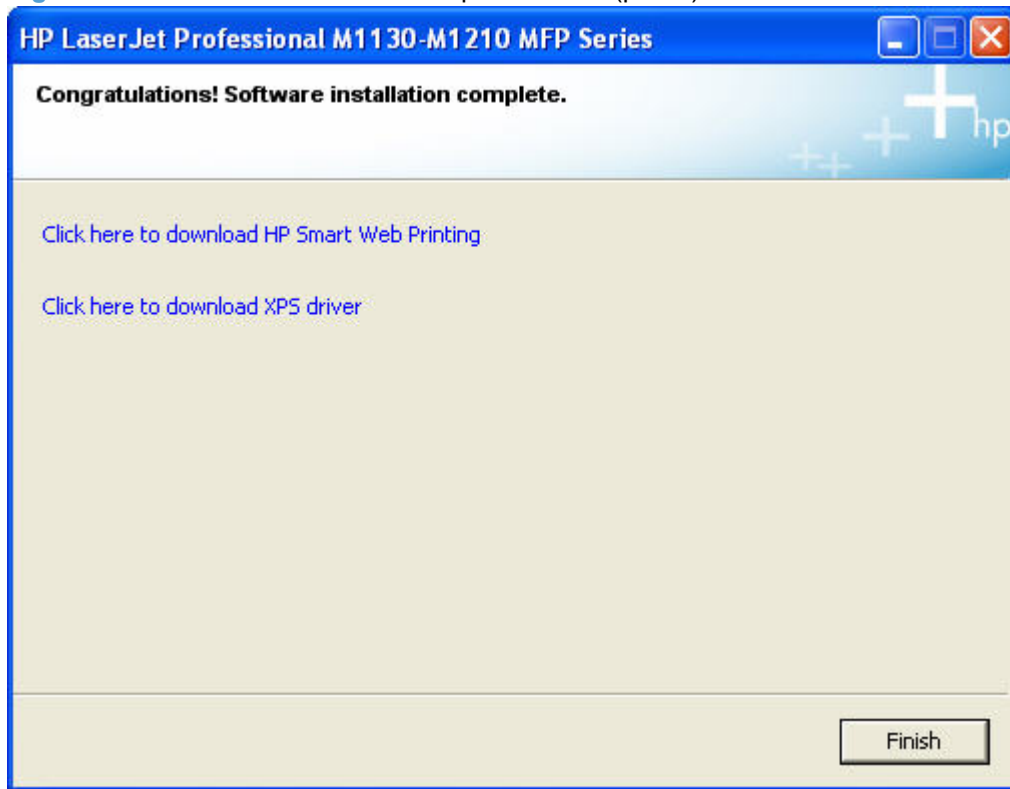


11. Click the **Finish** button.
12. The HP LaserJet Help Navigation application opens.

Install the print driver from the CD for wired network connected products

The recommended installation (**Easy Install**) installs the HP LaserJet Professional M1130/M1210 MFP Series Host based printer driver, screen fonts, and user guide.

A series of dialog boxes appear during installation of the HP LaserJet Professional M1130/M1210 MFP Series printing-system software in Windows environments.

 **NOTE:** You can return to the previous dialog box by clicking **Back** or exit the HP LaserJet Professional M1130/M1210 MFP Series printing-system software installation by clicking **Cancel** wherever these options appear in the installation sequence.


1. Close all programs.
2. Insert the HP LaserJet Professional M1130/M1210 MFP Series printing system software CD into the CD-ROM drive. The software installer detects the language of the operating system, and then displays the main menu of the CD Browser program in the same language.

If the installer program has not started after 30 seconds, complete these steps.

- a. On the **Start** menu, click **Run**.
- b. Type the following: X:\SETUP.EXE (where X is the letter of the CD-ROM drive).


- c. Click **OK**.

Figure 3-28 Software Installation — Initial screen

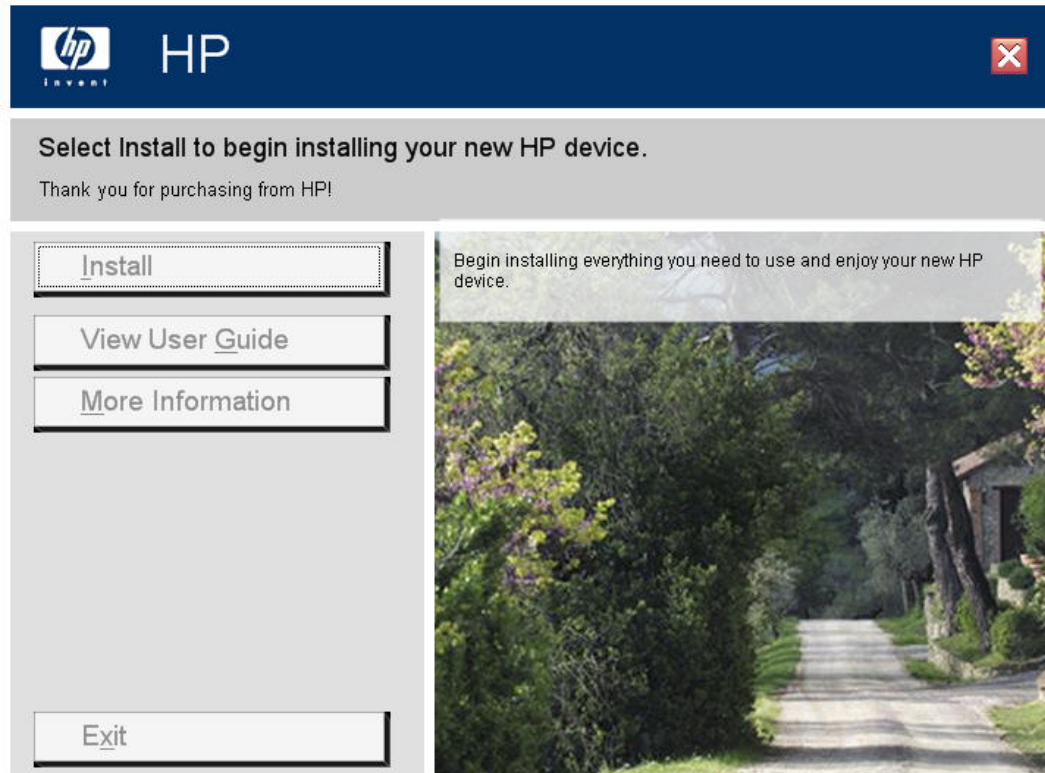

3. Click **Install** to begin the installation process. The **Choose Easy Install or Advanced Install** screen appears.

Figure 3-29 Choose Easy Install or Advanced Install screen

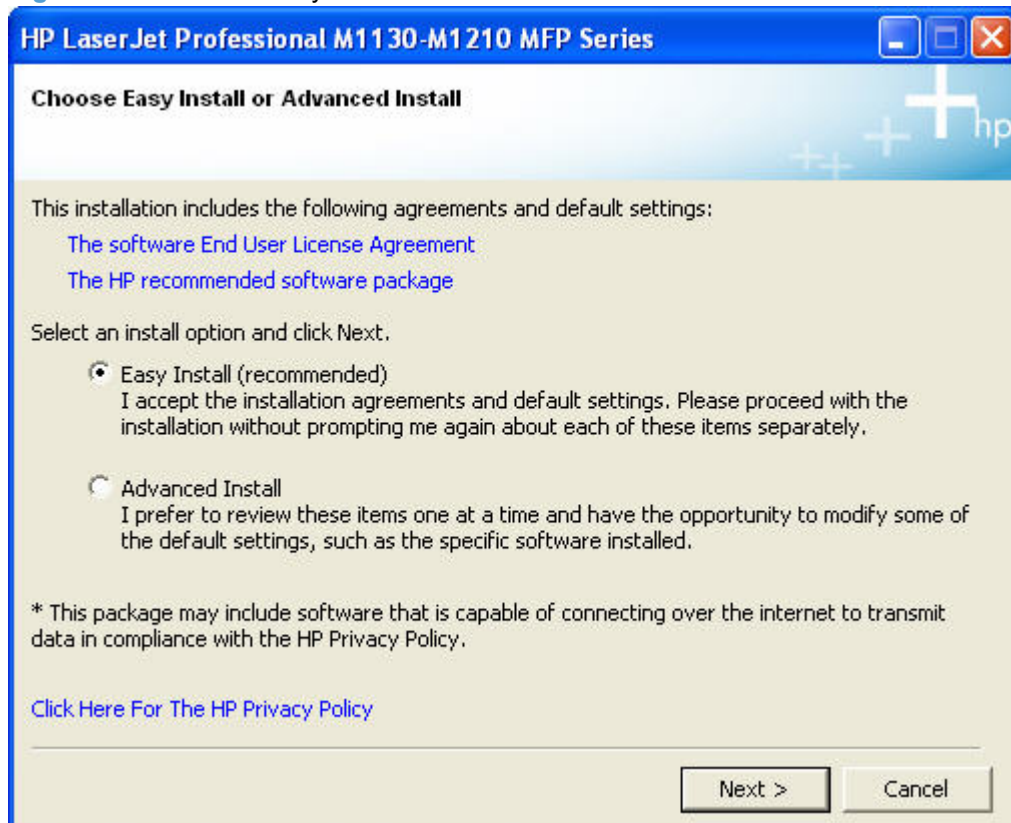


The **Choose Easy Install or Advanced Install** screen contains links to the following information.

- **The software End User License Agreement** – use this link to view the end user license agreement.
 - **The HP recommended software package** – use this link to view information about the HP Customer Participation Program.
 - **Click Here For The HP Privacy Policy** – use this link to view the HP Privacy Policy.
4. Select **Easy Install (recommended)**. Using **Easy Install (recommended)** allows the installation agreements and default settings to be accepted without being prompted for them during the installation. **Advanced Install** allows you to read, and manually accept, each of the installation agreements. Click the **Next** button to continue the installation.

5. Select an appropriate printer model on the **Select Printer** screen and click the **Next** button.

Figure 3-30 Select Printer screen

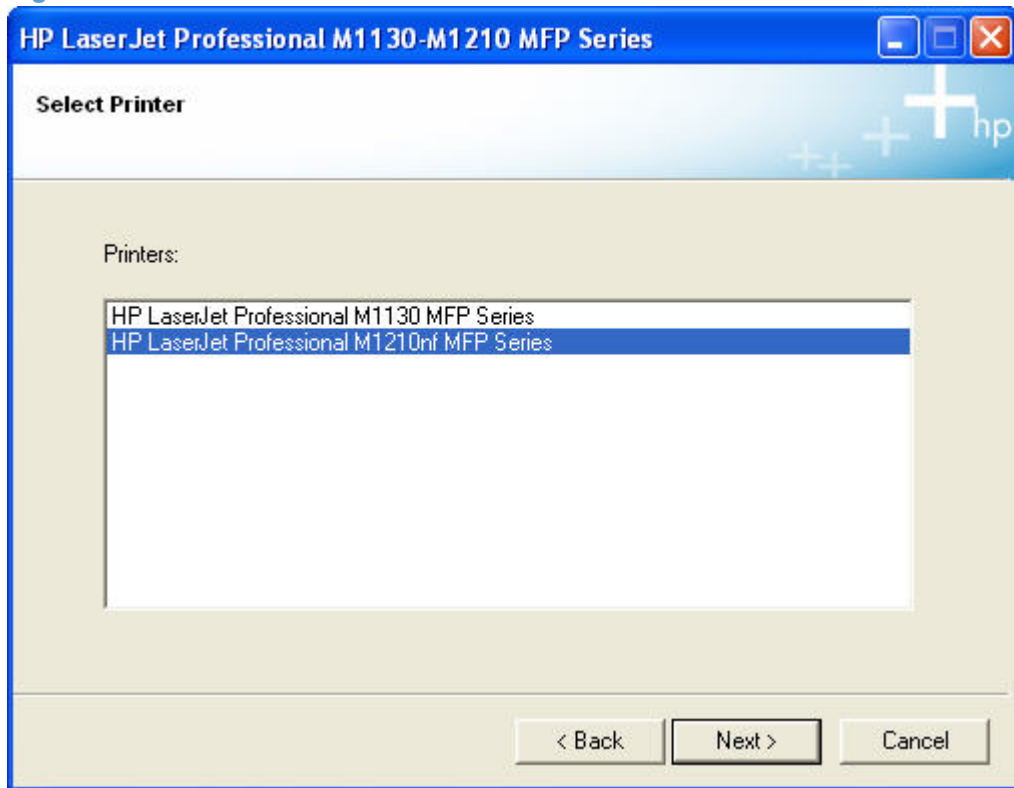

6. To locate your product on the network, choose whether to **Select from a list of detected printers (Recommended)** or **Specify a printer by address** on the **Identify Printer** screen and then click the **Next** button.


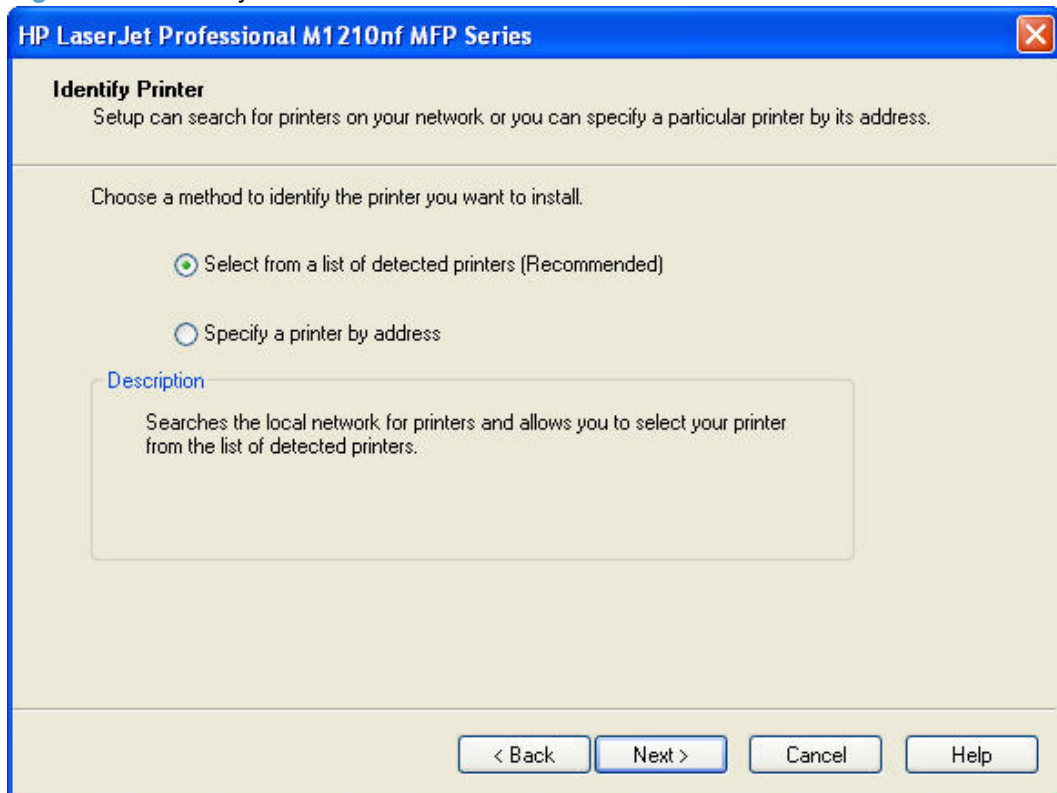
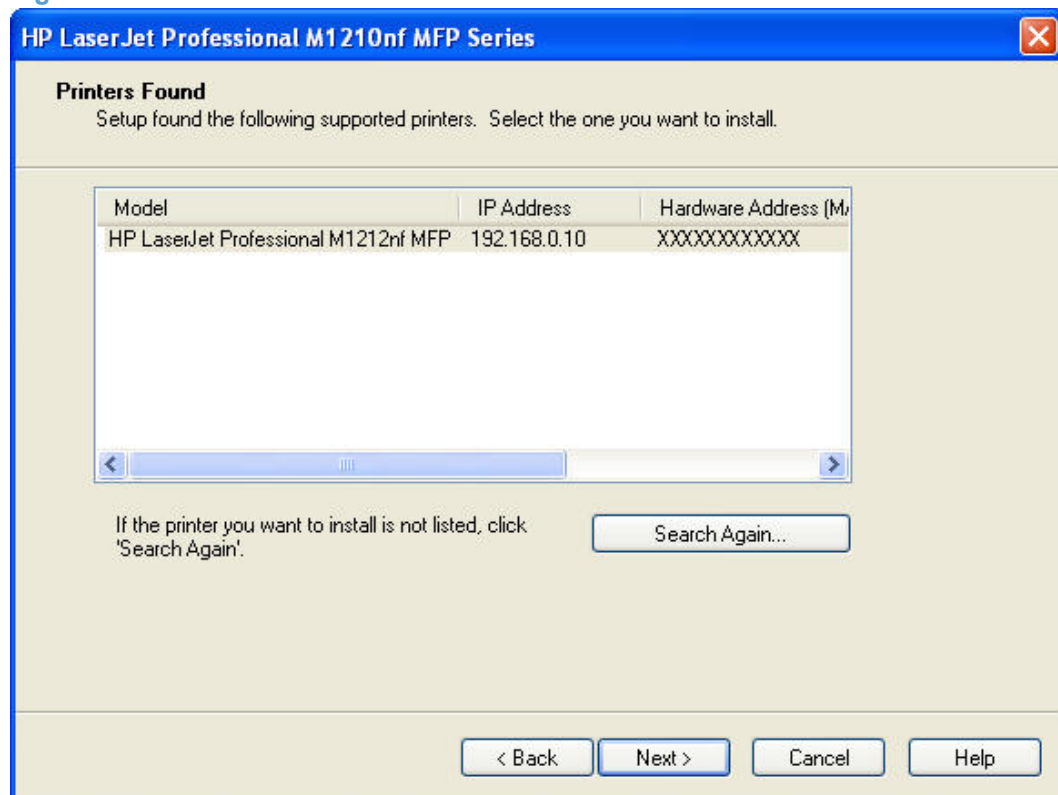
 **NOTE:** If you choose to **Specify a printer by address**, you will be presented with screens for manually entering an IP, MAC, or hostname address for locating your product on the network.

Figure 3-31 Identify Printer screen




7. On the **Printers Found** screen, select your product and then click the **Next** button.

Figure 3-32 Printers Found screen.




8. The **Confirm Settings** screen appears, displaying the network settings for the selected product. Click the **Next** button to proceed.

Figure 3-33 Confirm Settings screen

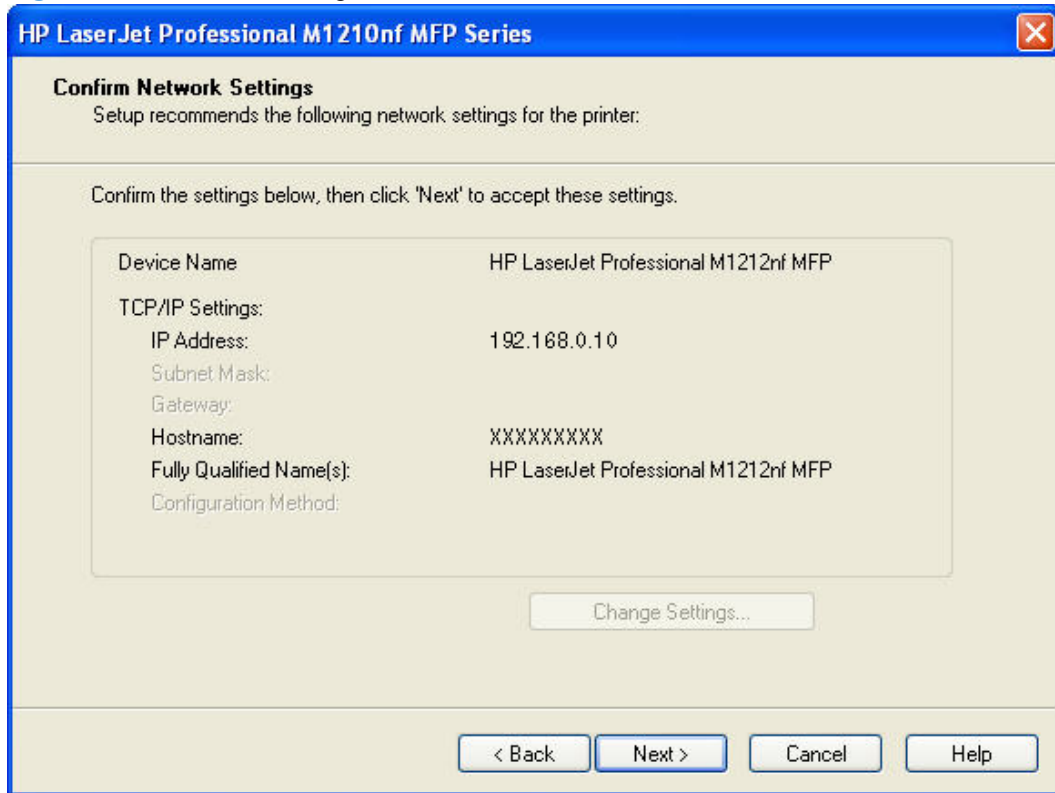

9. The **Congratulations! Software installation complete** screen appears upon successful installation of the driver.


Figure 3-34 Software installation complete screen (part 1)

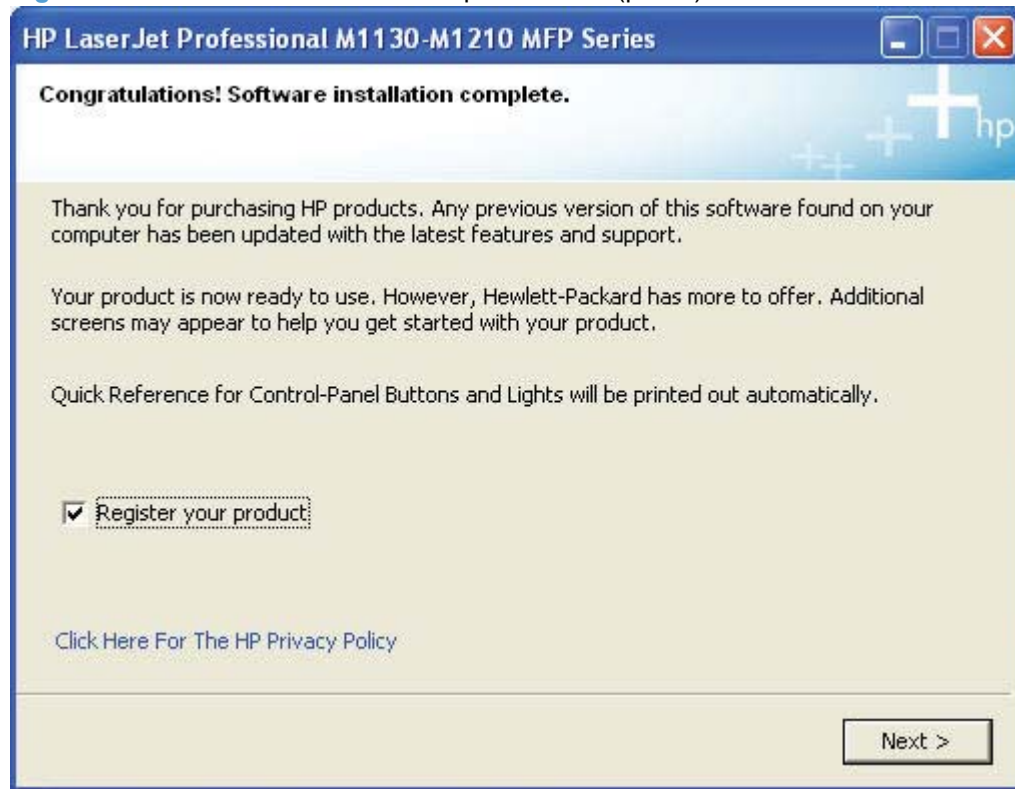


10. Select **Register your product** and then click the **Next** button. A Web browser opens to the HP Product Registration page, and a test page prints at the product.

11. The **Congratulations! Software installation complete** screen appears with links to download HP Smart Web Printing and the XPS driver.

Figure 3-35 Software installation complete screen (part 2)

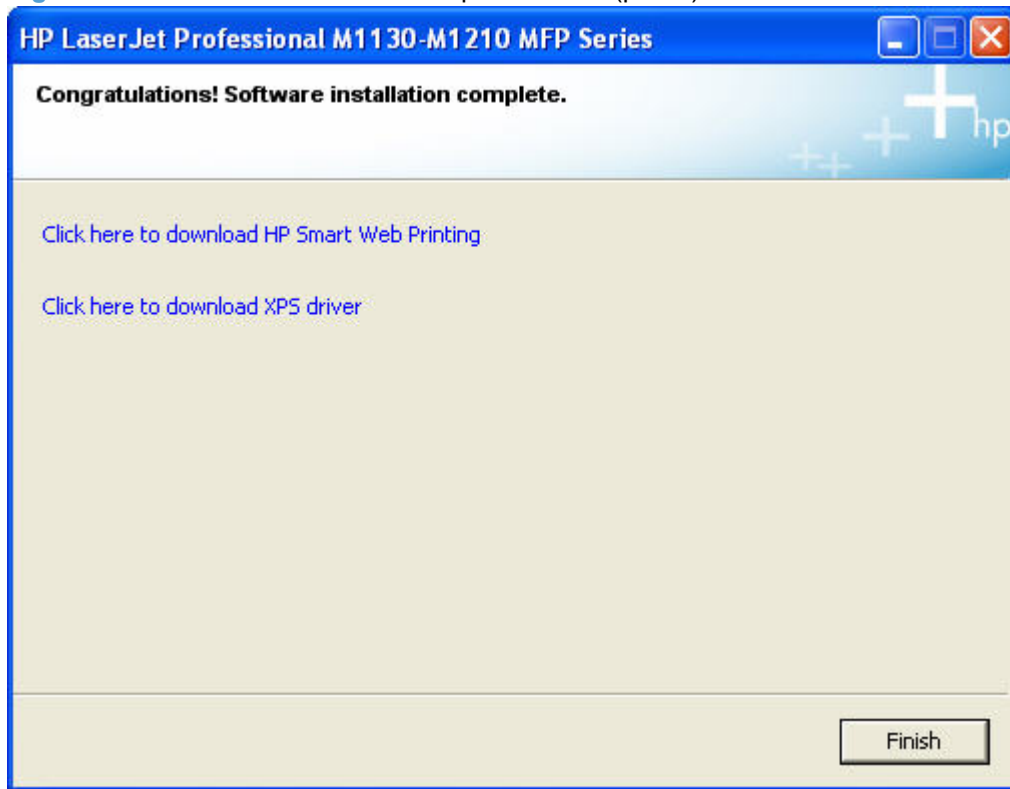

12. Click the **Finish** button.

 **NOTE:** For M1210nf models, the fax configuration setup will start.

13. The HP LaserJet Help Navigation application opens.

Install the HP LaserJet Professional M1130/M1210 MFP Series XPS driver

New driver install

Use the following procedure to install the XPS driver when no instances of the HP LaserJet Professional M1130/M1210 MFP Series driver are installed.


1. Extract the XPS zip file to a folder location.
2. Plug the USB cable into the printer and the computer, then power on the printer.
3. The XPS driver **must** be installed using the Windows Add New Hardware wizard.

If HP Smart Install is enabled for the product, it will start automatically when the USB connection is made between the product and the computer and prevent the Windows Add New Hardware wizard from starting.

Disable HP Smart Install for the product using the following steps.


- a. Navigate to the folder that contains the extracted XPS files and start the HP Smart Install Utility by double clicking SIUtility.exe (or SIUtility64.exe for 64 bit operating systems) in the **UTIL** folder.
- b. On the **Welcome to the HP Smart Install Utility** click the **Printer** button.

Figure 3-36 Welcome to the HP Smart Install Utility screen

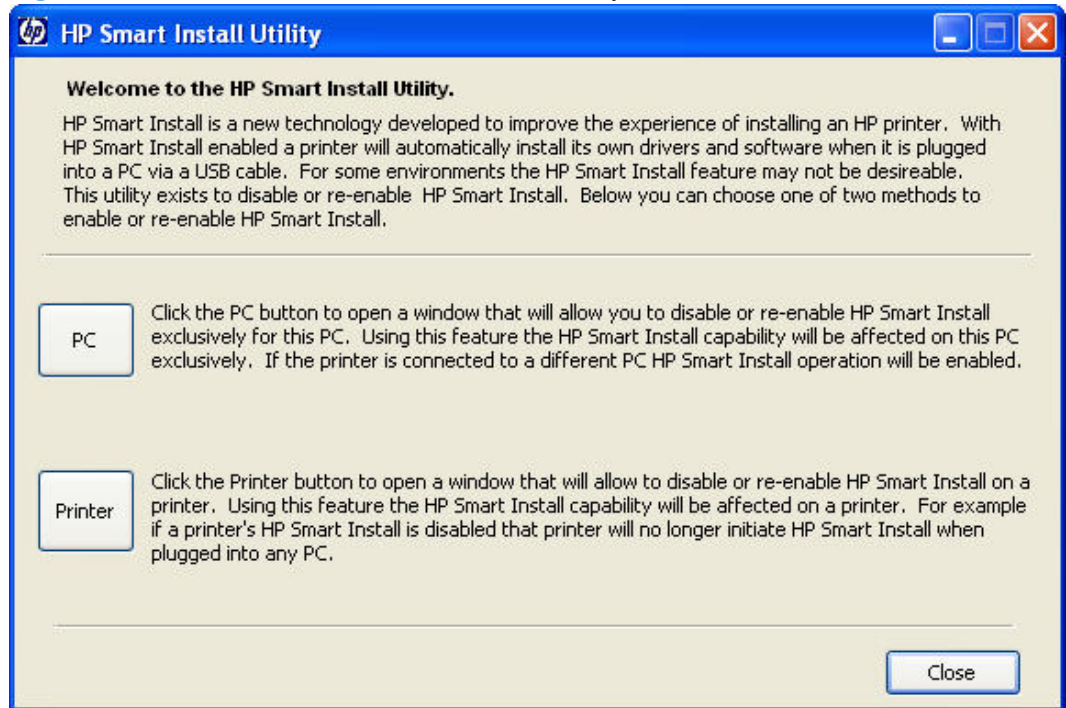


- c. Select the printer from the list and then click the **Next** button.

Figure 3-37 HP Smart Install Printer Configuration screen

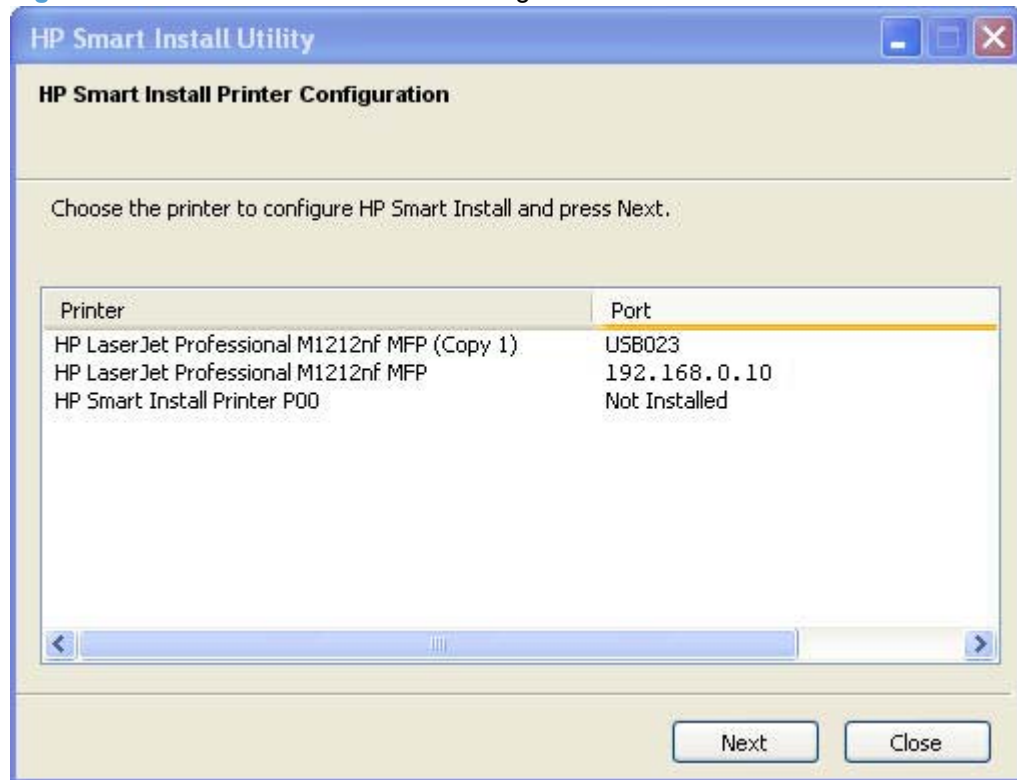

- d. On the **This Printer's HP Smart Install is currently Enabled** dialog click the **Disable HP Smart Install on the selected Printer** button.

Figure 3-38 HP Smart Install currently Enabled screen

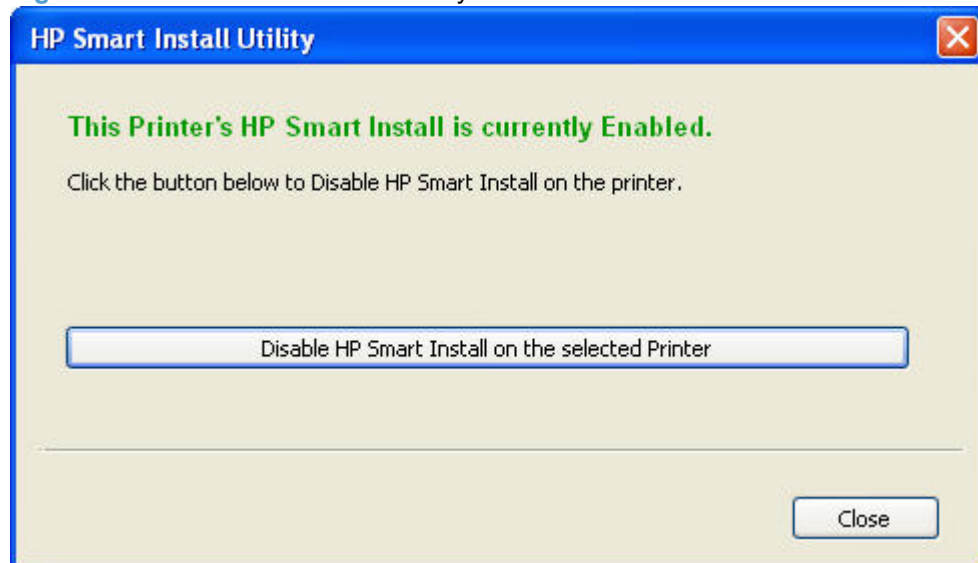

- e. On the message box that appears, click **Yes** to confirm the disabling of HP Smart Install.

- f. Click the **Close** button on the **This Printer's HP Smart Install is currently Disabled** screen.

Figure 3-39 HP Smart Install currently Disabled screen




- g. Click the **Close** button on the **Choose the printer to configure HP Smart Install** screen.
- h. Click the **Close** button on the **Welcome to the HP Smart Install Utility** screen.
- i. Unplug the USB cable from the printer and then plug it back in.

4. On the **Welcome to the Found New Hardware Wizard** screen, select **No** beneath **Can Windows connect to Windows Update to search for software?**.


Figure 3-40 Welcome to the Found New Hardware Wizard screen




5. On the next Found New Hardware Wizard screen, select **Install from a specific location (Advanced)** and then click the **Next** button.

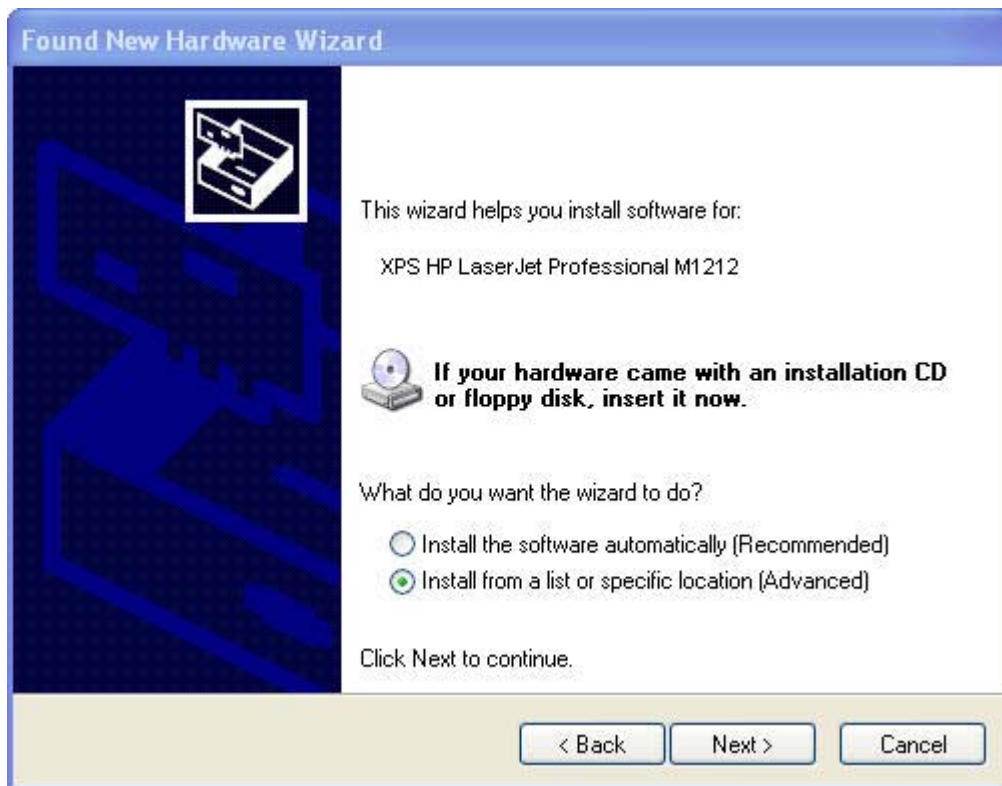

6. Select **Don't search, I will choose the driver to install.** and then click the **Next** button.

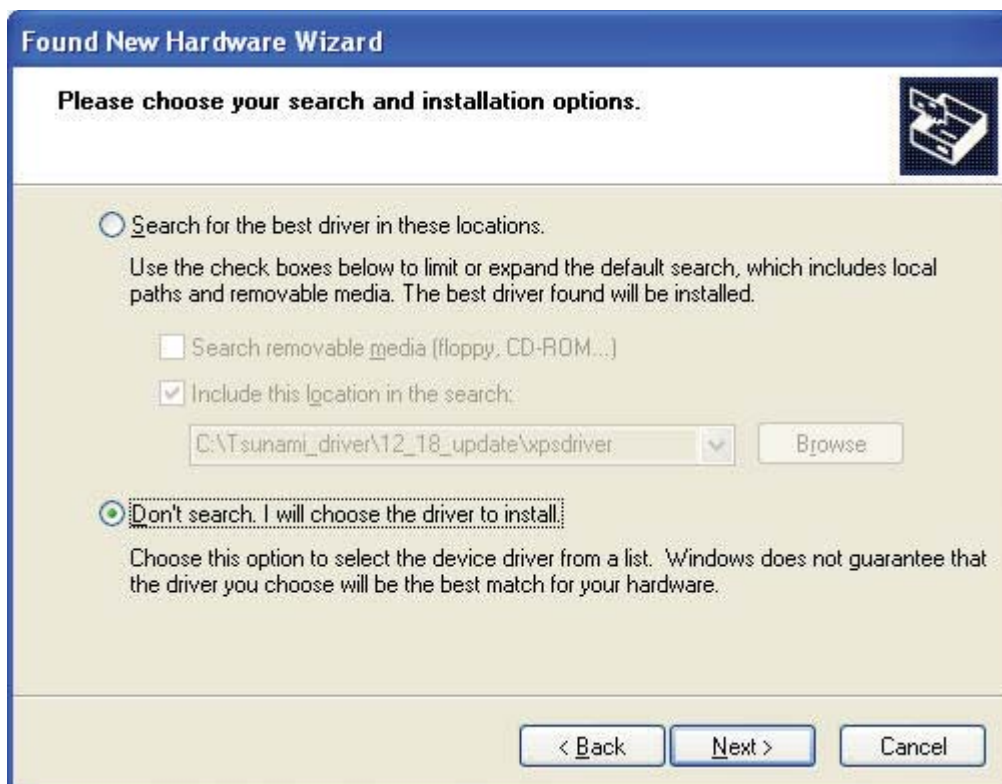


7. Ensure that **Show compatible hardware** is selected. Select your printer in the **Printers** list, and then click the **Have Disk...** button.

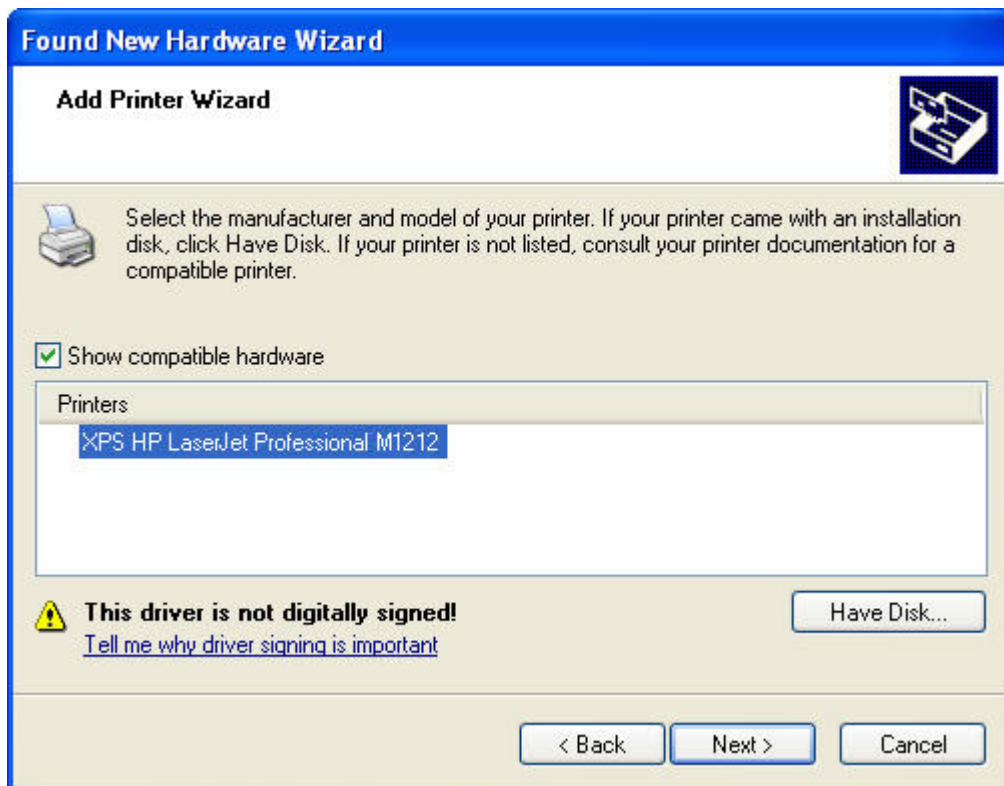

8. Navigate to the location of the XPS .inf file, select the XPS .inf file (example: HPM1210XPS . INF), and then click the **Open** button.

Figure 3-41 Locate File dialog window

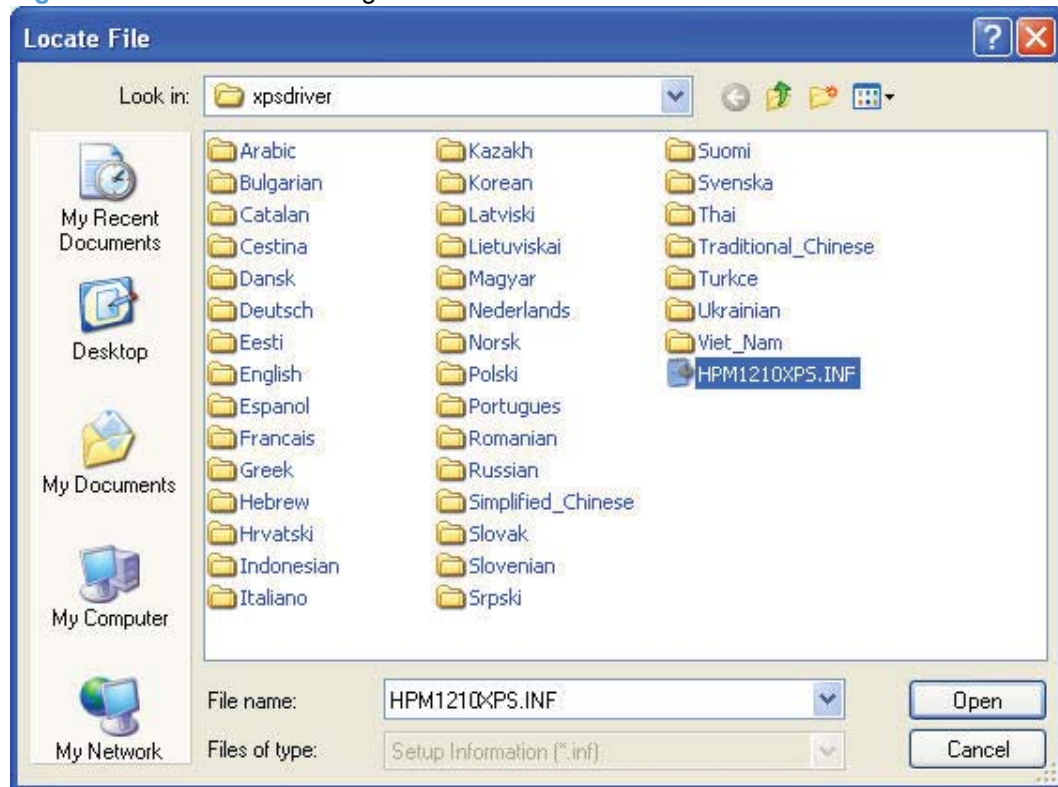

9. Click the **OK** button on the **Install From Disk** dialog
10. Click the **Next** button. The driver installation proceeds automatically.

11. Click the **Finish** button to complete the installation and to close the **Add New Hardware Wizard**.



Existing driver install

Use the following procedure to install the XPS driver when an instance of the HP LaserJet Professional M1130/M1210 MFP Series driver is installed.

1. Extract the XPS zip file to a folder location.
2. Click **Start**, and then do one of the following:

Windows XP: Click **Control Panel**, and then double-click the **Printers and Other Hardware** icon.

-or-

Windows Server 2003 and Windows XP Professional: Select **Settings**, and then select **Printers and Faxes**.

-or-

Windows Vista: Click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

-or-


Windows Server 2008: Click **Start**, click **Control Panel**, and then open the **Printers** folder.

-or-

Windows 7: Click **Start**, click **Control Panel**, and then click **Devices and Printers**.


3. Right click in the **Printers and Faxes** window and select **Add Printer**. The **Add Printer Wizard** screen opens.

Figure 3-42 Add Printer Wizard

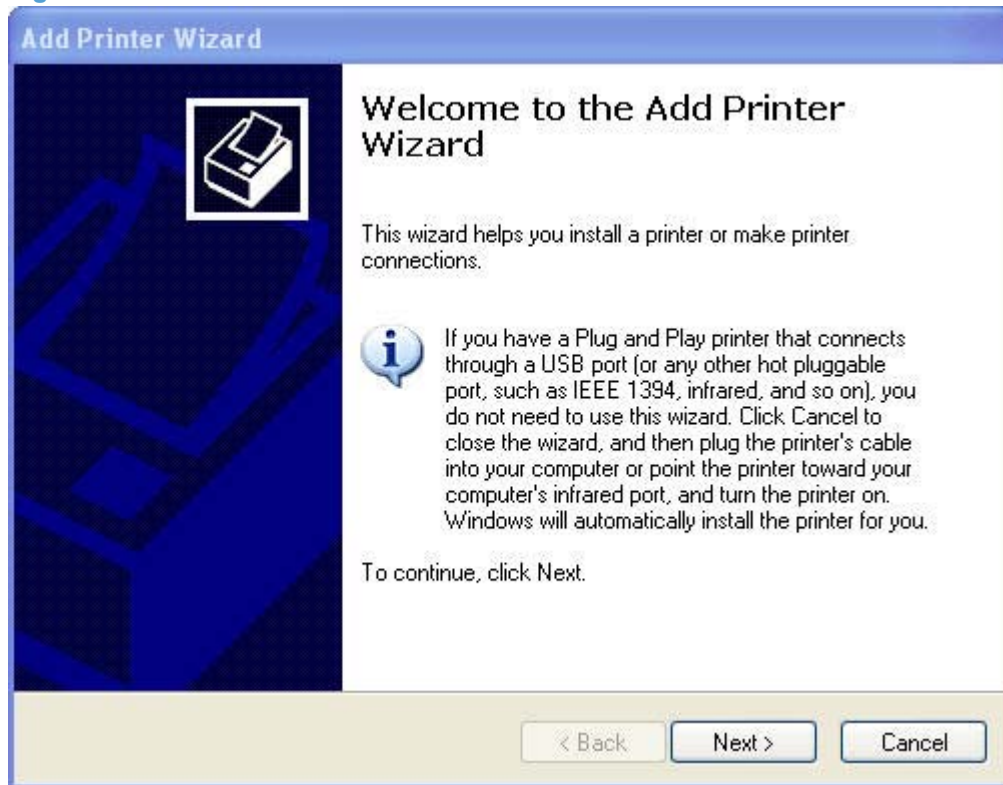


4. On the **Local or Network Printer** screen, select **Local printer attached to this computer**, and then click the **Next** button.

Figure 3-43 Local or Network Port screen

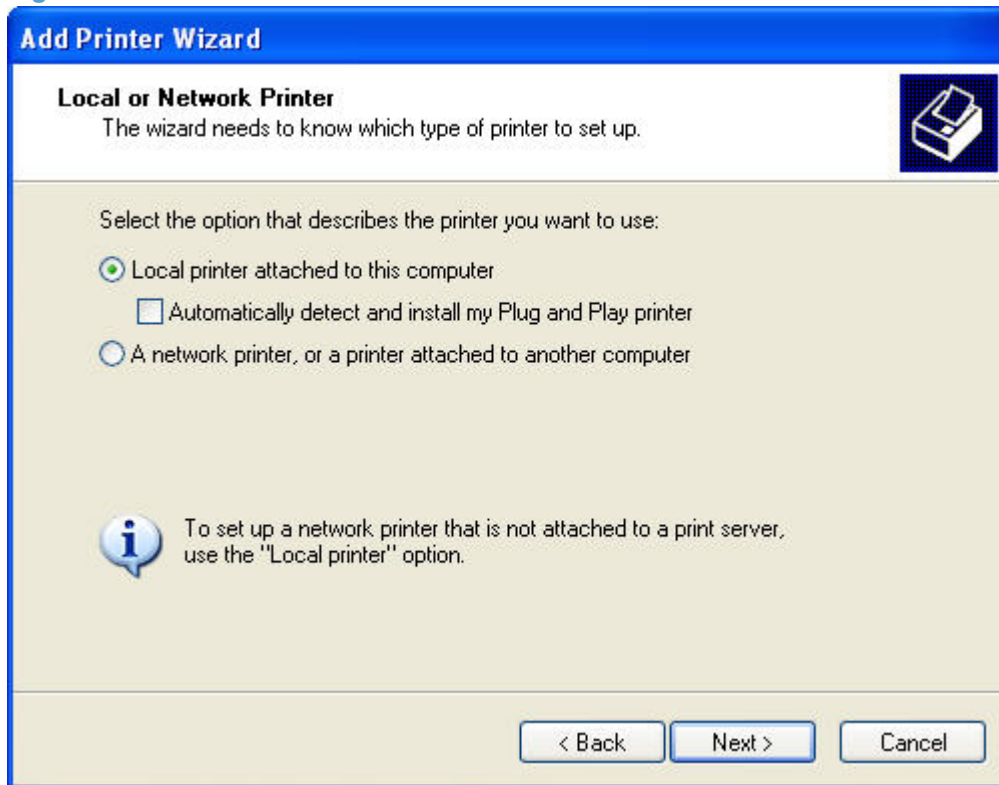


5. On the **Select a Printer Port** screen, select **Use the following port:** and then select the port your HP LaserJet Professional M1130/M1210 MFP Series uses. Click the **Next** button.

Figure 3-44 Select a Printer Port screen

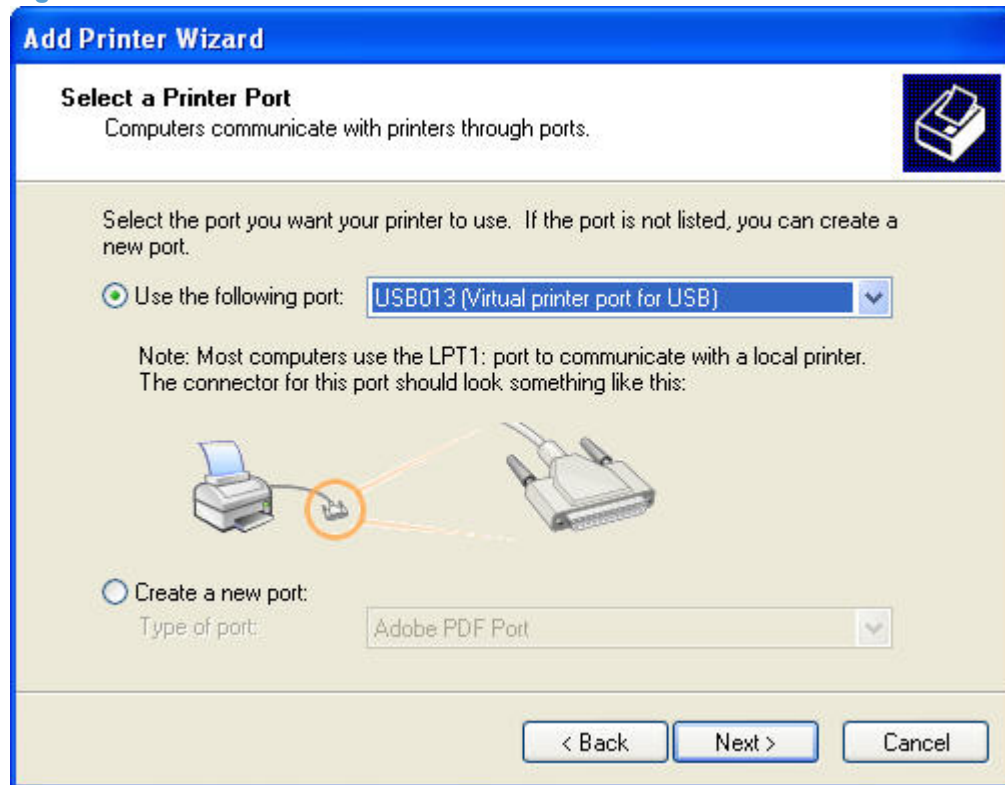


6. On the **Install Printer Software** screen, select your printer in the **Printers** list, and then click the **Have Disk...** button.

Figure 3-45 Install Printer Software screen

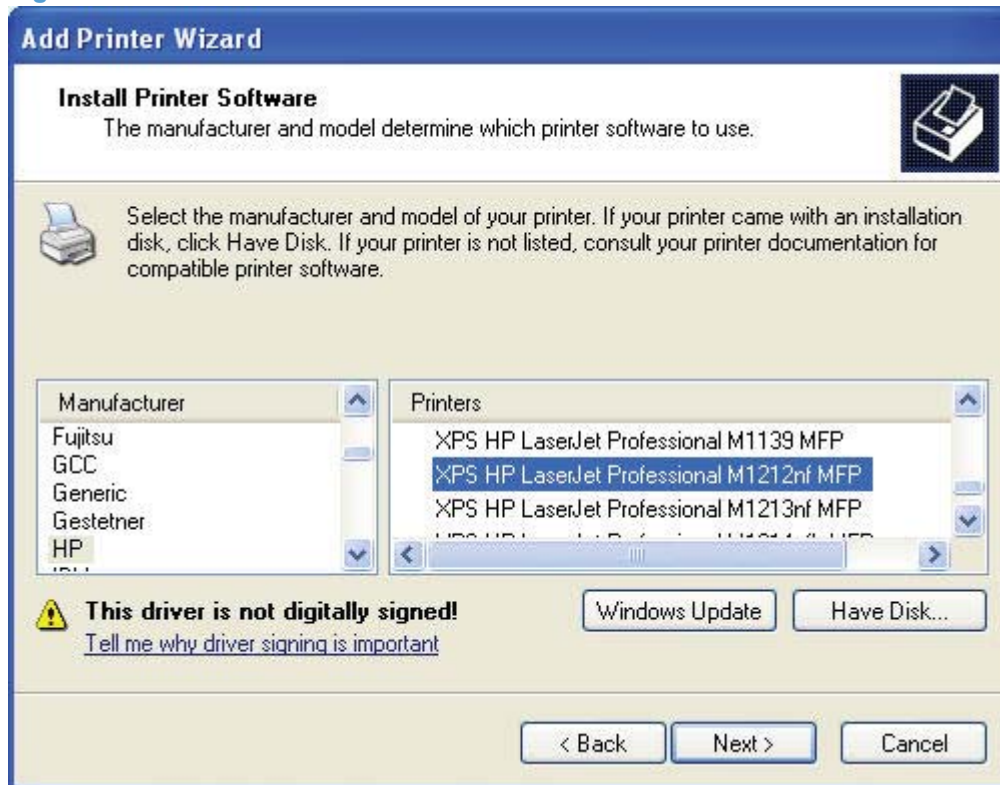

7. Navigate to the location of the XPS .inf file, select the XPS .inf file (example: HPM1210XPS . INF), and then click the **Open** button.


Figure 3-46

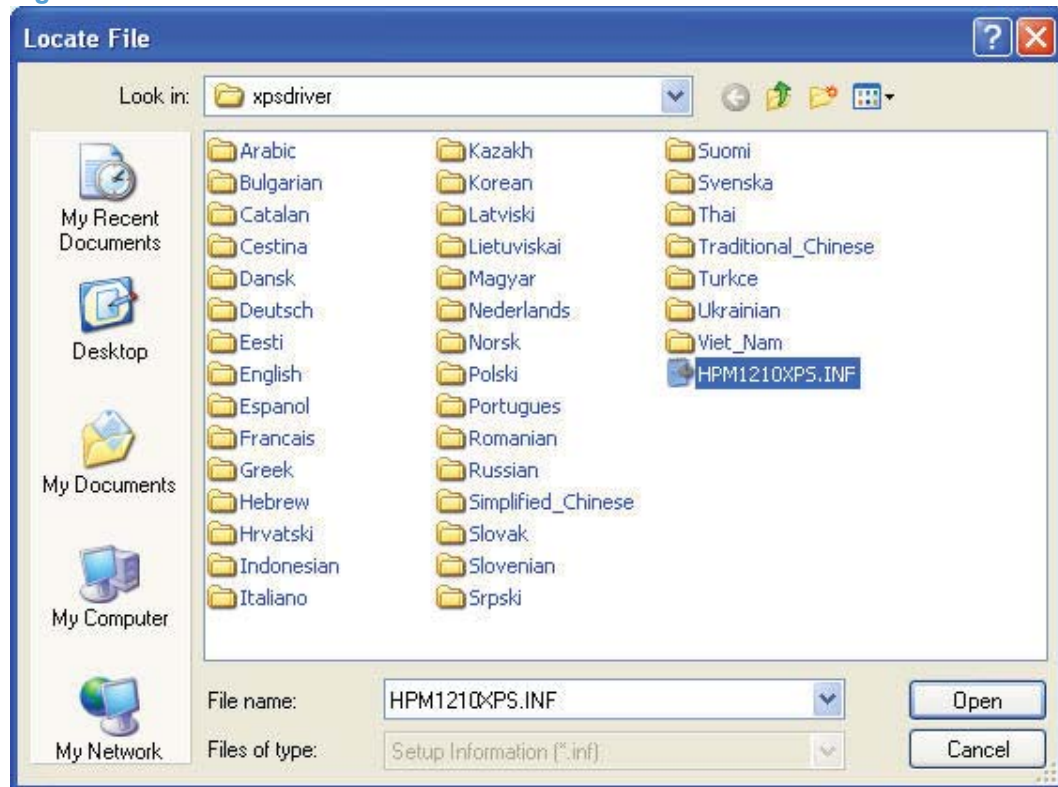

8. Click the **OK** button on the **Install From Disk** dialog and then click the **Next** button.


9. On the **Use Existing Driver** screen, select **Keep existing driver (recommended)** and then click the **Next** button.

Figure 3-47 Use Existing Driver screen

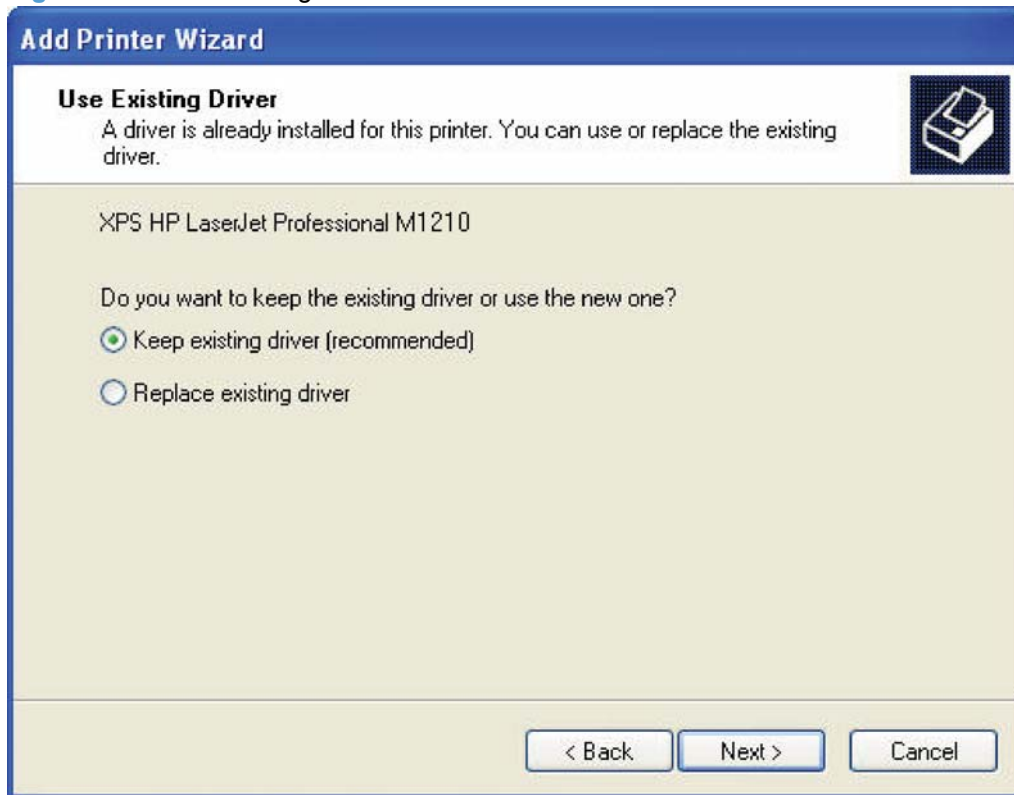

10. On the **Name Your Printer** screen, enter or a name for the printer or use the existing name. Select whether to use this printer as your default printer. Click the **Next** button.


Figure 3-48 Name Your Printer screen

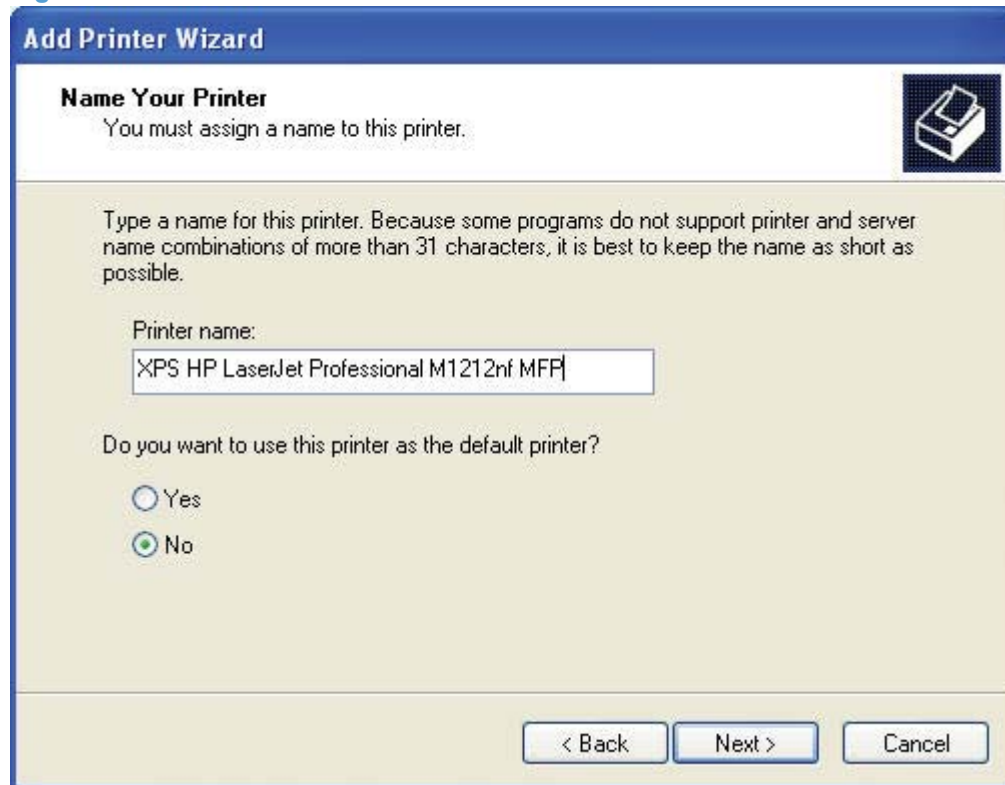

11. On the **Printer Sharing** screen, select whether to share this printer. Click the **Next** button.
12. On the **Print Test Page** screen, select whether to print a test page. Select the **Next** button.

13. Click the **Finish** button on the **Completing the Add Printer Wizard** screen to complete the installation.

Figure 3-49 Completing the Add Printer Wizard screen

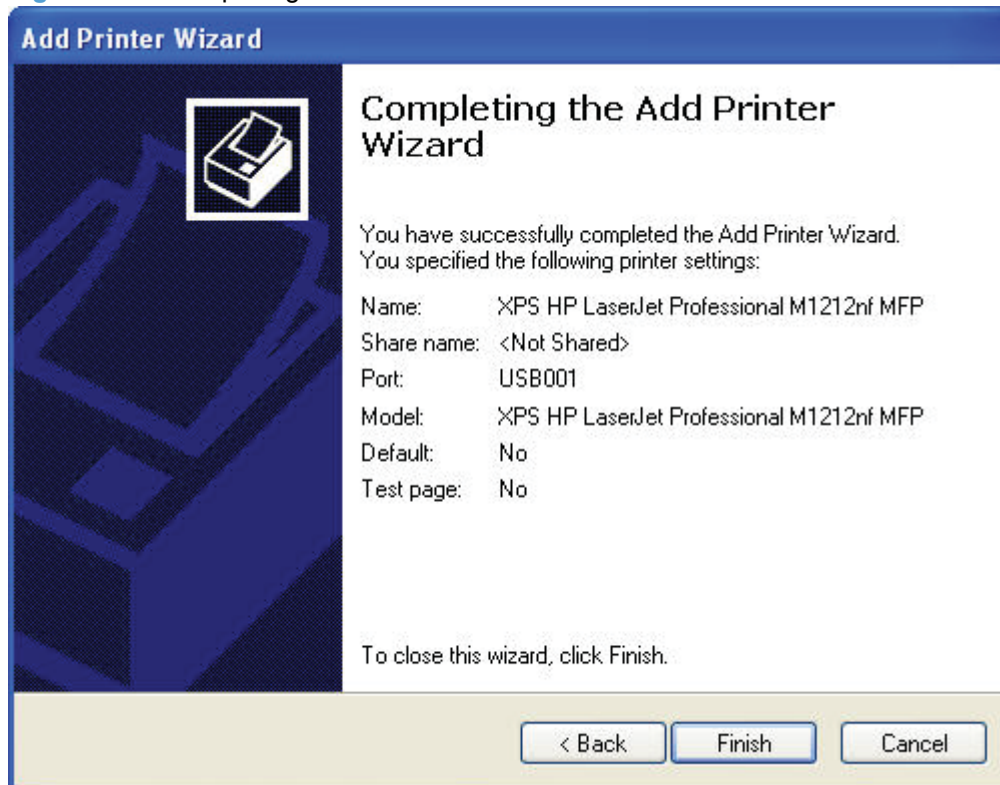


Use the Back, Next, Finish, and Cancel buttons

The following buttons appear on various dialog boxes during the installation process.

- **Back.** Click this button to return to the previous dialog box.
- **Next.** After you select any options on a given screen, click this button to proceed to the next step in the installation sequence.
- **Finish.** Click this button to complete the installation process and proceed to the **Additional Options** screen.
- **Cancel.** Click this button to exit the installer without installing the product. When you click **Cancel**, the **Installation Cancelled** dialog box opens, stating that the installation was cancelled.

Figure 3-50 Installation Cancelled dialog box

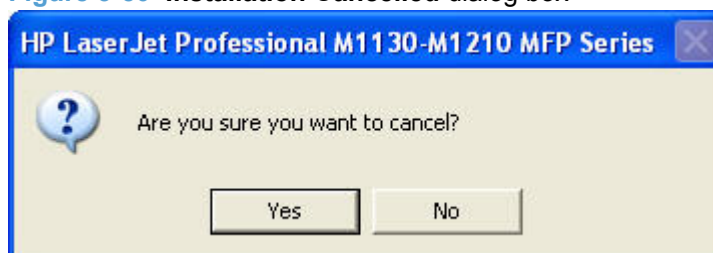

Click **Finish** to close the installer.

Set a default printer

1. In Windows Vista, click the **Start** button, click **Control Panel**, and then click **Hardware and Sound**. Under the **Printers** section, click **Change default printer**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Control Panel**, and then click **Printers and Faxes** (Windows XP Professional) or **Printers and other hardware devices** (Windows XP Home).

Windows 7: Click **Start**, click **Control Panel**, and then click **Devices and Printers**.

2. Right-click the product that you want to set as the default printer.
3. Click **Set As Default**. A check mark appears next to the menu option.

Uninstall software

- [Uninstall the Host based driver](#)
- [Uninstall the XPS driver](#)

Uninstall the Host based driver

- [Use the HP Uninstall utility \(recommended\)](#)
- [Use Windows Add or Remove Programs feature](#)

Use the HP Uninstall utility (recommended)

1. Click the **Start** button, select **All Programs**, select **HP**, select your product name, and then click the **Uninstall** utility.
2. The Printer Uninstall List screen appears. Select the product, or products, to uninstall and then click **Remove One** or **Remove All** to initiate the uninstall process.

Use Windows Add or Remove Programs feature

Use these instructions to uninstall the product using the Windows Add or Remove Programs feature.



NOTE: You must have Administrator privileges to uninstall the product using Add or Remove Programs.


1. In Windows Vista, click the **Start** button, click **Control Panel**, and then click **Add or Remove Programs**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Control Panel**, and then double-click **Add or Remove Programs**.

In Windows 7, click the **Start** button, click **Control Panel**, and then click **Programs and Features**.

2. Click the entry for the HP LaserJet Professional M1130/M1210 MFP Series product, and then click **Remove**. The following screen appears.

Figure 3-51 Uninstall

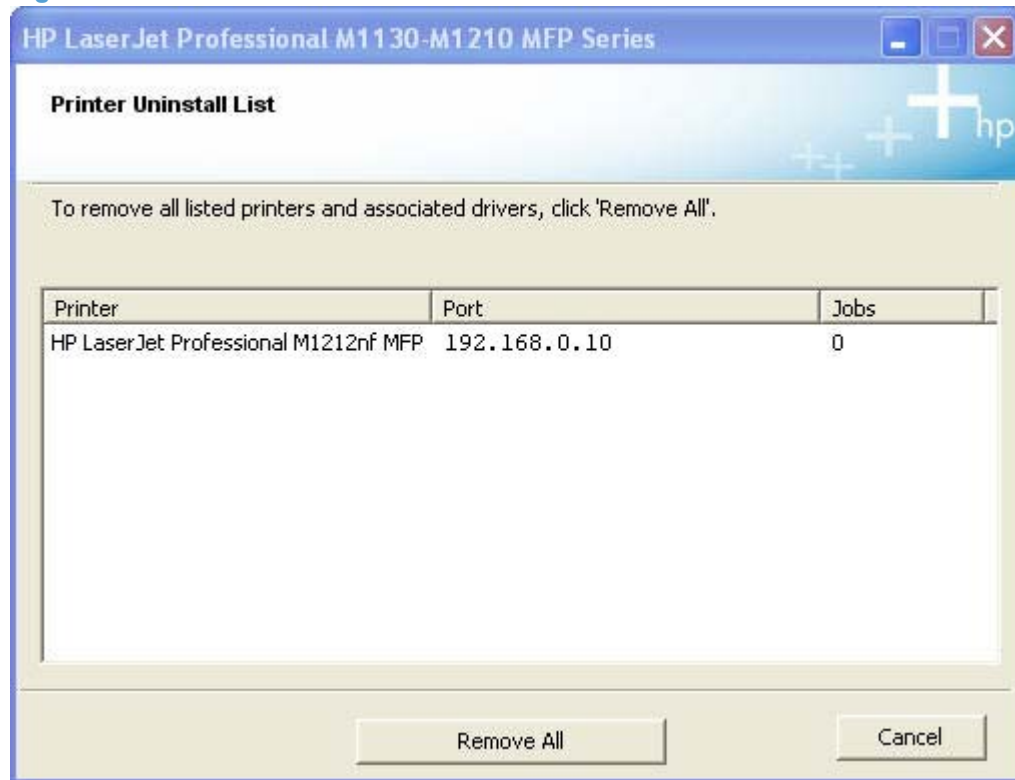

Select the product, or products, to uninstall and then click **Remove One** or **Remove All** to initiate the uninstall process.

Uninstall the XPS driver

1. In Windows 7, click the **Start** button, click **Control Panel**, and then click **Devices and Printers**.
2. In Windows Vista, click the **Start** button, click **Control Panel**, and then click **Hardware and Sound**. Under the **Printers** section, click **Change default printer**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Control Panel**, and then click **Printers and Faxes** (Windows XP Professional) or **Printers and other hardware devices** (Windows XP Home).

Windows 7: Click **Start**, click **Control Panel**, and then click **Devices and Printers**.
3. Right-click the **XPS HP LaserJet Professional XXXX** product and select **Delete** to delete the XPS driver print queue.
4. From the **File** menu select **Server Properties**.
5. In the **Print Server Properties** window click the **Drivers** tab.
6. Locate the driver named **XPS HP LaserJet Professional XXXX** and then click the **Remove** button.

4 HP host based print driver for Windows

Introduction

This chapter describes the features of the HP LaserJet Professional M1130/M1210 MFP Series Host based Print Driver for Windows XP (32-bit and 64-bit), Windows Server 2003 (32-bit and 64-bit), Windows Vista (32-bit and 64-bit), Windows Server 2008 (32-bit and 64-bit), and Windows 7 (32-bit and 64-bit),.

You can control print jobs from several places:

- The product control panel
- The software program print dialog box
- The driver user interface

Generally, for features that are duplicated in more than one location (for instance, you can select the paper input tray from any of them), settings that are established in the software program take precedence over print-driver settings. Print-driver settings, in turn, override product control-panel settings.

When you install the printing-system software in Microsoft Windows XP, Microsoft Windows Server 2003, Microsoft Windows Vista, Windows Server 2008, or Windows 7, the HP Host based Print Driver is the recommended driver and installs by default from the product firmware or CD Browser.

Topics:

- [Gain access to print drivers](#)
- [Help system](#)
- [Advanced tab features](#)
- [Paper/Quality tab features](#)
- [Effects tab features](#)
- [Finishing tab features](#)
- [Services tab features](#)
- [Device Settings](#)

Gain access to print drivers

Depending on the operating system on which you are installing the print drivers, you can gain access to the print drivers and different print-driver interfaces in several ways.

To gain access to the print-driver settings from within most software programs, follow these steps:

1. Click **File**.
2. Click **Print**.
3. Click **Properties**.

The appearance and names of the driver tabs can vary, depending on the operating system. These driver settings apply only while that software program is open.

You can control the drivers directly from the **Printers** folder. Here you have access to two sets of driver tabs: the **Printing Preferences** tabs and the **Properties** tabs. The settings that you make on the **Printing Preferences** driver tabs control the driver default settings for each user's profile. Installable options can be configured in the **Properties** driver tabs.

Printing Preferences driver tabs

The **Printing Preferences** driver tabs change the default settings that are used across all software programs. To gain access to these tabs, follow these steps:

1. **Windows Vista:** Click **Start**, click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

Windows XP and Windows Server 2003: Click **Start**, click **Settings**, and then click **Printers and Faxes**.

Windows Server 2008: Click **Start**, click **Control Panel**, and then open the **Printers** folder.

Windows 7: Click **Start**, click **Control Panel**, and then click **Devices and Printers**.

2. Right-click the product name.
3. Click **Printing Preferences**.

The following **Printing Preferences** print-driver tabs are available:

- **Advanced**
- **Paper/Quality**
- **Effects**
- **Finishing**
- **Services**

Properties driver tabs

This set of tabs controls the driver behavior and driver connections. To gain access to the **Properties** tabs, follow these steps:

1. **Windows Vista:** Click **Start**, click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

Windows XP and Windows Server 2003: Click **Start**, click **Settings**, and then click **Printers and Faxes**.

Windows Server 2008: Click **Start**, click **Control Panel**, and then open the **Printers** folder.

Windows 7: Click **Start**, click **Control Panel**, and then click **Devices and Printers**.

2. Right-click the product name.
3. Click **Properties**.

The following **Properties** print-driver tabs are available:

- **General**
- **Sharing**
- **Ports**
- **Advanced**
- **Color Management**
- **Security**
- **About**

Help system

The HP Host based print driver includes a full-featured Help system to provide assistance with printing and configuration options.


“What's this?” Help

Windows XP, Windows Server 2003, Windows Server 2008, Windows Vista, and Windows 7 support **What's this?** Help. You can gain access to What's this? Help messages in any of the following ways:

- Right-click a feature or control. A pop-up Help window appears.
- Click the **?** question mark button in the upper-right corner of the frame, next to the **X**, to change the cursor to an arrow with a question mark. When you use this special cursor to select a control, the pop-up Help window for that control appears.
- Click a feature or control, and then press the **F1** key. The Help window for the currently selected control appears.


Incompatible Print Settings messages

Incompatible Print Settings (constraint) messages are unsolicited messages that appear in response to specific print-driver selections. These messages alert you to selections that are illogical or impossible given the product capabilities or the current settings of other controls.

 **NOTE:** Constraint messages are limited, and the underlying software architecture might accept some settings that are illogical or impossible for the product to perform. Sending a job with incompatible settings can lead to unexpected results. If print jobs do not print as expected, check the product documentation for the product capabilities.


In supported Windows operating environments, some technically invalid print-driver configurations result in warning messages. Duplexing, for example, is not possible when the Transparency paper type is selected. The following figure shows an **Incompatible Print Settings** message.

Figure 4-1 An **Incompatible Print Settings** message

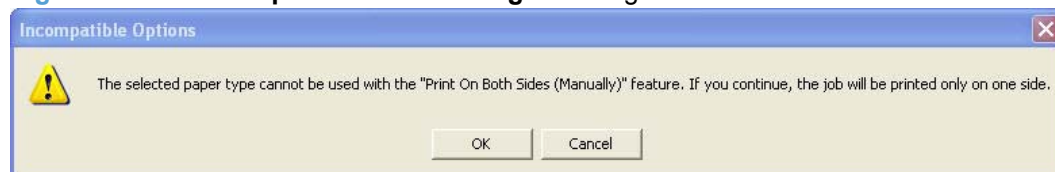

To resolve the conflicting settings, click **Restore my previous settings.** and then click **OK.** The driver resets the conflicting control back to its previous state.

If you want to keep the conflicting setting, click **Keep this setting, and I will change it later.** and then click **OK.**


 **NOTE:** In this example, the conflict can be resolved manually. If the conflict is not resolved when the driver is closed, then the same message appears again when a print job is sent to the product.

Advanced tab features

 **NOTE:** The **Advanced** tab is in the **Printing Preferences** tab set. For information about how to gain access to these tabs, see [Printing Preferences driver tabs on page 118](#).

Use the **Advanced** tab to change the layout of printed pages. Use this tab to configure special controls that are not commonly used, as well as to control features such as paper size and copies in the driver (although most current software programs support these features in the **Print** dialog box or through the page settings in the software program). The following figure shows the **Advanced** tab.

Figure 4-2 The default appearance of the **Advanced** tab

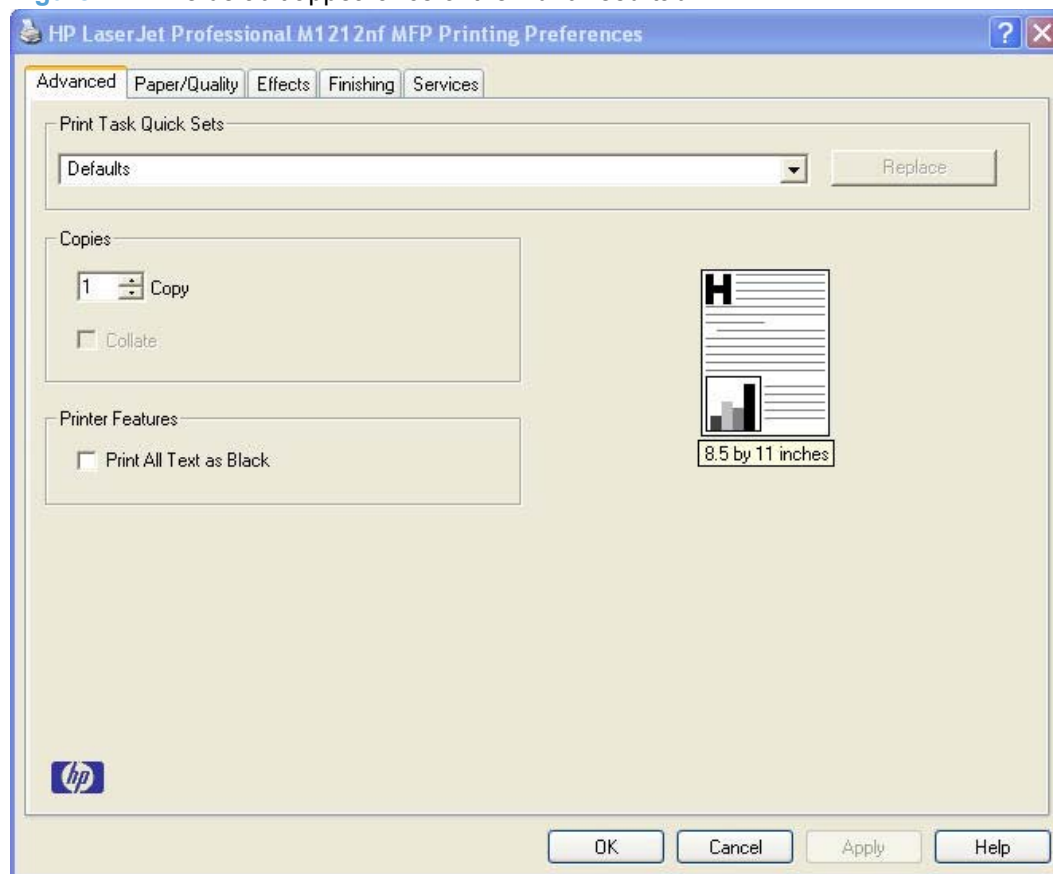

The **Advanced** tab contains the following controls:

- [Print Tasks Quick Sets](#)
- [Copies](#)
- [Printer Features](#)
- [Document preview image](#)

Print Tasks Quick Sets

The **Print Tasks Quick Sets** drop-down list appears on all tabs except the **Services** tab.

Print Tasks Quick Sets allow separate groups of print settings to be saved under specified names for reuse.

Follow these steps to create a Print Task Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- Select the print options for the new quick set.
- Type a name for the quick set, and then click **Save**.

Follow these steps to use a Print Tasks Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- In the **Print Tasks Quick Sets** drop-down list, select one of the quick sets, and then click **OK** to print the job with the predefined settings.

Copies

The **Copies** control contains the **Copies** setting.

Copies

Copies: Specifies the number of copies to print. This driver setting is useful for software programs that do not provide a copy count. If a copies setting is available in the software program, set the copy count in the software program.

The number of copies that you request appears in the **Copies** option. You can select the number by typing in the text box or by using the up and down arrows to the right of the text box. Valid entries are numbers from 1 to 999. The copies value will not advance from the maximum number (999) to 1 when the up arrow is used, or change from 1 to the maximum number (999) when the down arrow is used. When you click another group box or leave the **Advanced** tab, invalid entries into the text box (such as non-numerical input, numbers less than 1, or numbers greater than the maximum allowed) are changed to the last valid value that appeared in the text box. The default number of copies is 1.

Because you can set the number of copies that you want from some software programs, conflicts between the software program you are using and the driver can arise. In most cases, the software program and the driver communicate, so that the number of copies set in one location (such as the program) will appear in the other (such as the driver). For some programs, this communication does not take place, and the copies values are treated independently. For these programs, setting 10 copies in the program and then setting 10 copies in the driver will result in 100 copies (10 x 10) being printed. It is recommended that you set the number of copies in the program, whenever possible.

Printer Features

The **Printer Features** control contains a checkbox for activating the **Print All Text as Black** feature.

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:

- **Advanced**
- **Paper/Quality**

- **Effects**
- **Finishing**


Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Paper/Quality tab features

 **NOTE:** The **Paper/Quality** tab is in the **Printing Preferences** tab set. For information about how to gain access to these tabs, see [Printing Preferences driver tabs on page 118](#).

Use the **Paper/Quality** tab to specify paper size, type, and source. You can also use this tab to specify different paper selections for the front cover, first page, other pages, last page, and back cover of the document. The following figure shows the **Paper/Quality** tab.

Figure 4-3 Paper/Quality tab

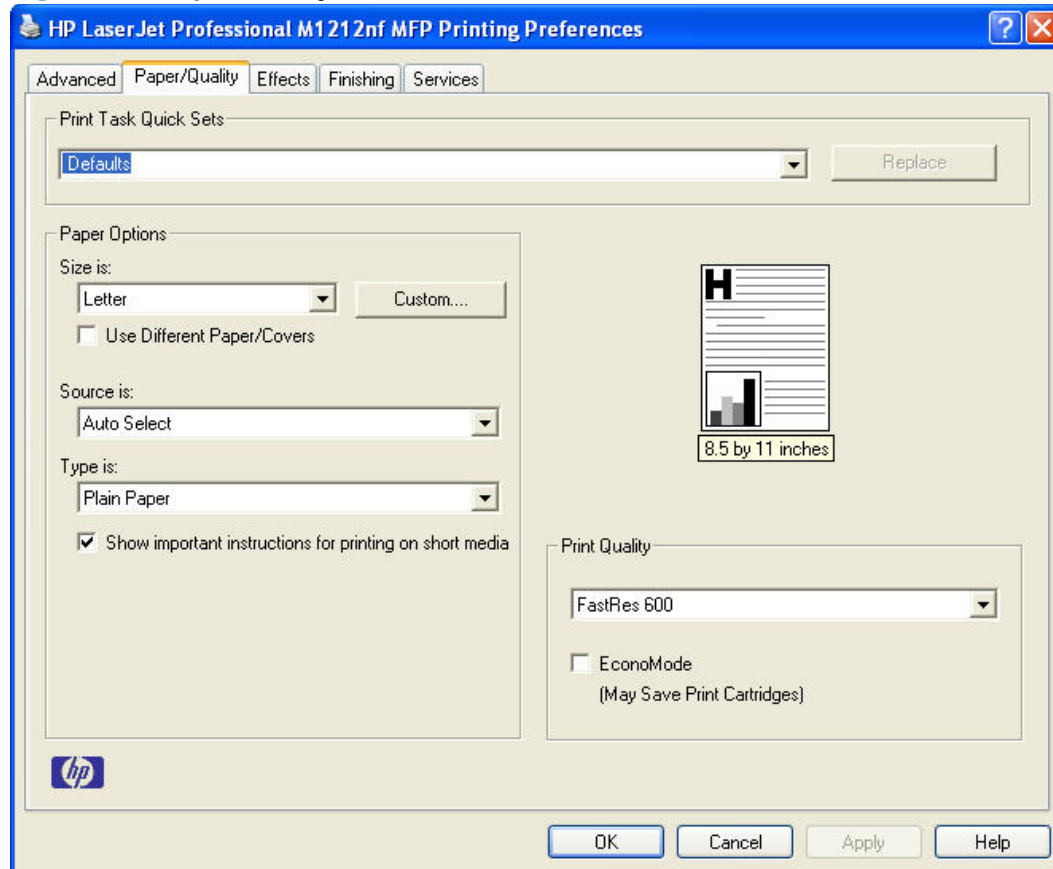

The **Paper/Quality** tab contains the following control sets:

- [Print Tasks Quick Sets](#)
- [Paper Options](#)
- [Document preview image](#)
- [Print Quality](#)

Print Tasks Quick Sets

The **Print Tasks Quick Sets** drop-down list appears on all tabs except the **Services** tab.

Print Tasks Quick Sets allow separate groups of print settings to be saved under specified names for reuse.

Follow these steps to create a Print Task Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- Select the print options for the new quick set.
- Type a name for the quick set, and then click **Save**.


Follow these steps to use a Print Tasks Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- In the **Print Tasks Quick Sets** drop-down list, select one of the quick sets, and then click **OK** to print the job with the predefined settings.

Paper Options

The settings in the **Paper Options** group box on the **Paper/Quality** tab apply to all of the pages of the document. The following figure shows the **Paper Options** group box and the selections that are available by default.

Figure 4-4 Paper Options group box

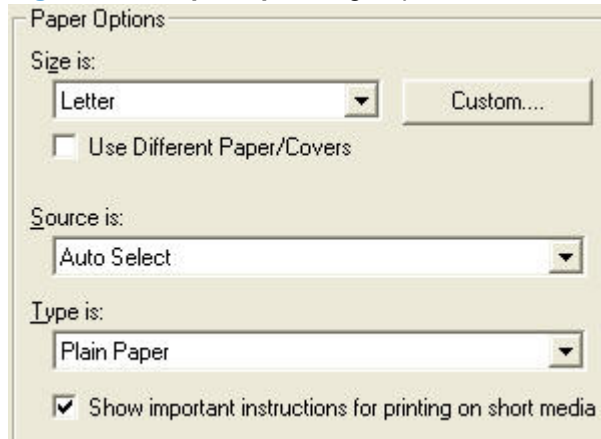


The settings in the **Paper Options** group box are described in the following order:

- [Size is](#)
- [Custom Paper Size](#)
- [Use Different Paper/Covers](#)
- [Source is](#)
- [Type Is](#)

Size is


The **Size is:** drop-down menu lists all of the supported paper sizes.

Because paper-size settings in most software programs override driver settings, it is generally best to use the driver to set the paper size only when you are printing from software programs that do not include a paper-size setting, such as NotePad, or when you are producing a book or a booklet that does not require different paper sizes.

 **NOTE:** Certain software programs can override the size command and specify different paper sizes within a single document.

When you change the print-driver setting to a paper size that is not currently loaded in the product, a control-panel message appears that prompts you to load the paper size.


For information about paper sizes, see [Engineering Details on page 167](#).

 **NOTE:** Several paper sizes are listed in the paper size drop-down menu that are physically too large for the printer, such as 16k. These sizes are included for scaling purposes— the printer scales down the printed output from a larger original size used by a software program.

Custom Paper Size

The **Custom Paper Size** dialog box appears when you click **Custom...** on the **Paper/Quality** tab. The following figure shows the initial appearance of the **Custom Paper Size** dialog box.

Figure 4-5 Custom Paper Size dialog box

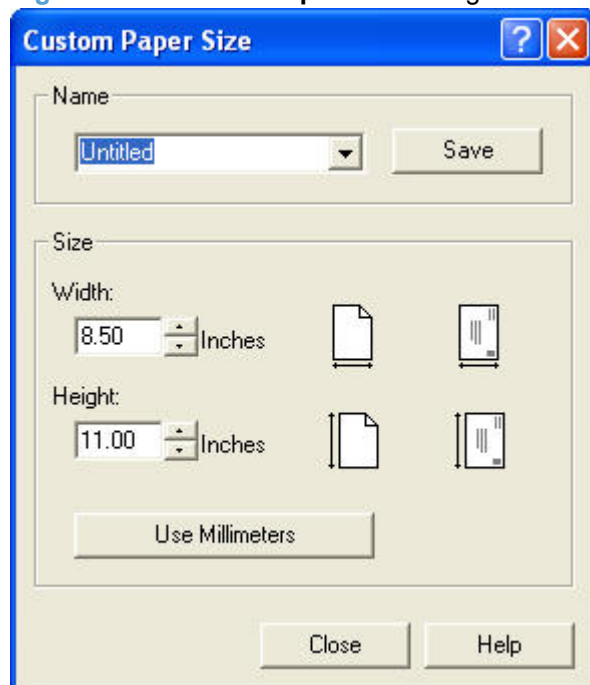

Name

Use the **Name** text box to type a name for a new custom paper size or to rename an existing paper size.

The text that appears in the **Name** text box is one of the following::

- The name of the any custom paper size that is selected on the **Paper/Quality** tab.
- "Custom" if a standard paper size has been selected on the **Paper/Quality** tab.
- Any text that has been typed into the **Name** text box. This text remains in the text box until the new size is saved or the dialog box is closed.

If you type a new name into the **Name** text box but then do not click **Save**, you can change the **Width:** and **Length:** values without losing the name. However, if you close the dialog box without clicking **Save**, any unsaved name or size values are lost without warning.

Size

The **Width:** and **Length:** values can be changed by typing numeric strings into the edit boxes.

Any entry that is too large is rounded down to the maximum valid entry, while any entry that is too small is rounded up to the minimum valid entry.

If units are in millimeters, the custom paper-size range minimum is the limit rounded up to the nearest whole millimeter. The custom paper-size range maximum is the limit rounded down to the nearest whole millimeter. Any non-numerical entry reverts to the last valid entry. Width and length entries are validated when the focus changes.

The resolution of each control is 1/100 of a millimeter or 1/100 of an inch, depending on the current measurement units.

Units

To change measurement units, click the button which displays either **Use Inches** or **Use Millimeters**.

Custom width and height control limits

The minimum paper size for this product is 98.4 x 148.0 mm (3.87 x 5.83 in) and the maximum is 215.9 x 355.6 mm (8.5 x 14.0 inches). The following table summarizes paper size limits for each paper-handling device.

Table 4-1 Host based driver custom paper sizes


Tray	Dimensions	Minimum	Maximum
Tray 1 (150-sheet multipurpose)	Width	98.4 mm (3.87 inches)	215.9 mm (8.5 inches)
	Height	148.0 mm (5.83 inches)	355.6 mm (14.0 inches)

Use the short media extender tool

This product is equipped with a short media extender tool for loading short media into the product. A help video plays automatically when a selection is made from the **Size is:** drop-down list that qualifies as short media. The help video illustrates how to use the short media extender tool.

Use Different Paper/Covers

Select **User Different Paper/Covers** to assign different paper types for the pages in your printed document.

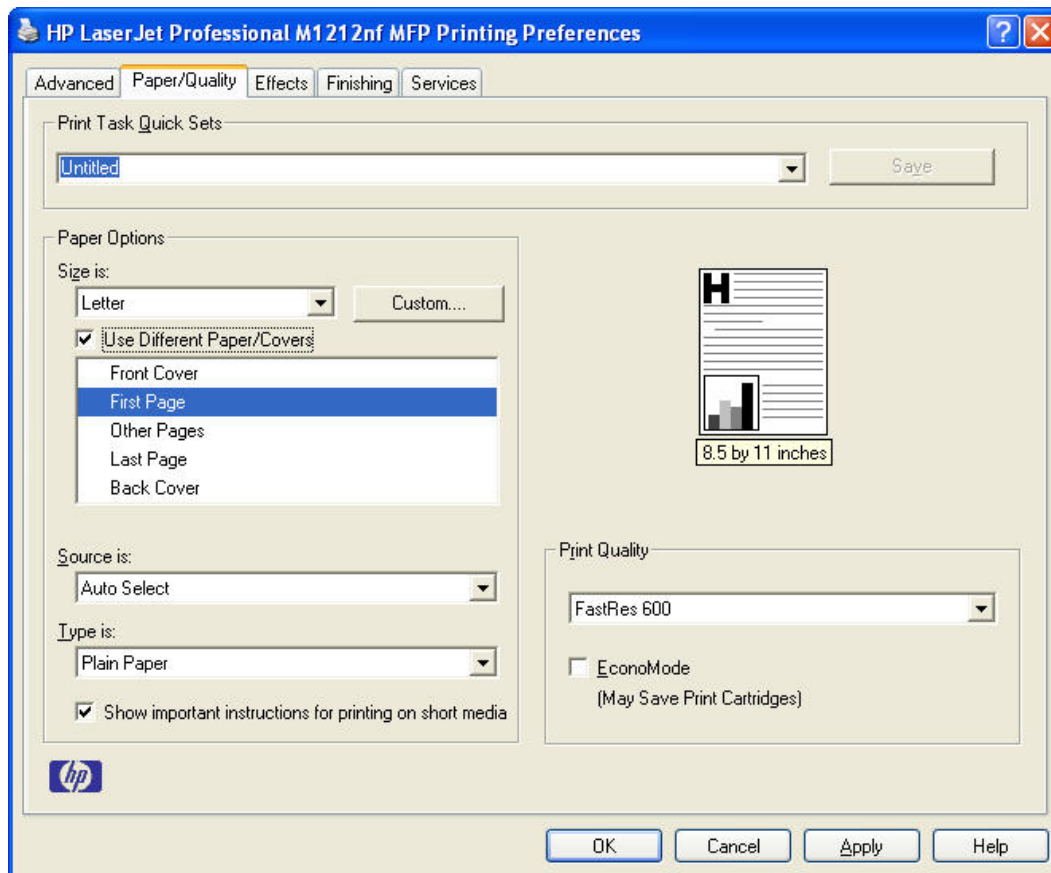

The following paper or cover selections, and their paper source and type or cover type, are available.

- **Front Cover: Add a Blank or Preprinted Cover**
- **First Page: Source is:, Type is:, and Show important instructions for printing on short media.**
- **Other Pages: Source is:, Type is:, and Show important instructions for printing on short media.**
- **Last Page: Source is:, Type is:, and Show important instructions for printing on short media.**
- **Back Cover: Add a Blank or Preprinted Cover**

Source is

The **Source Is:** setting specifies the source tray to use for printing a document.

The **Source Is:** drop-down menu can contain the following options, depending on what has been installed on the product:

- **Auto Select**
- **Manual Feed**

The default setting is **Auto Select**. When this setting is selected, the product uses the source tray that supports the paper size that you have selected. If you select a setting other than **Auto Select**, make

sure that the correct paper size is loaded in the source tray. For information about paper sources, see [Engineering Details on page 167](#).

Type Is

The **Type Is**: drop-down menu contains the paper types the product is capable of processing.

The **Type is**: dialog box contains the following paper types:

- **Plain Paper**
- **Light (60-74 g/m2)**
- **Mid-Weight (96-110 g/m2)**
- **Heavy (111-130 g/m2)**
- **Extra Heavy (131-175 g/m2)**
- **Transparency**
- **Labels**
- **Letterhead**
- **Envelope**
- **Preprinted**
- **Prepunched**
- **Color**
- **Bond**
- **Recycled**
- **Rough**
- **Vellum**

The default setting is **Plain Paper**, and the program selects the paper type. If you select a different setting, make sure that the correct paper type is loaded in the input tray. For more information about paper types, see [Engineering Details on page 167](#).

When you change the print-driver setting to a paper type that is not currently loaded in the product, a control-panel message appears that prompts you to load the paper type.

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:

- **Advanced**
- **Paper/Quality**

- **Effects**
- **Finishing**

Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Print Quality

The Print Quality section contains the following controls:

- [Print Quality drop-down menu](#)
- [EconoMode check box](#)

Print Quality drop-down menu

Use this control to select a print quality. Numeric values are in dots per inch (dpi).

The **Print Quality** drop-down menu contains the following resolution options.

M1130 Series printer

- **FastRes 600:** Prints using 400x600x2 resolution, is faster than full 1200 x 1200 resolution, but has slightly lower print quality.
- **FastRes 1200:** Prints using 600x600x2 resolution, is faster than full 1200 x 1200 resolution, but has slightly lower print quality.

M1210 Series printer

- **FastRes 600:** Prints using 400x600x2 resolution, is faster than full 1200 x 1200 resolution, but has slightly lower print quality.
- **FastRes 1200:** Prints using 600x600x2 resolution, is faster than full 1200 x 1200 resolution, but has slightly lower print quality.

EconoMode check box


Click the EconoMode check box to allow the printer to use less toner/ink on each page. This extends the life of your print cartridge and reduces your cost per page, but it reduces print quality. This option may work only if a genuine HP print cartridge is installed. HP print cartridges are able to measure the life of the mechanical parts as well as the toner/ink. When Economode is used frequently, the mechanical parts may wear out before the toner/ink does. This may result in toner/ink spillage, which could damage your printer. Using genuine HP print cartridges avoids this problem.

Effects tab features

 **NOTE:** The **Effects** tab is in the **Printing Preferences** tab set. For information about how to gain access to these tabs, see [Printing Preferences driver tabs on page 118](#).

Use the **Effects** tab to create unique paper effects such as scaling and watermarks. The following figure shows the **Effects** tab.

Figure 4-6 Effects tab

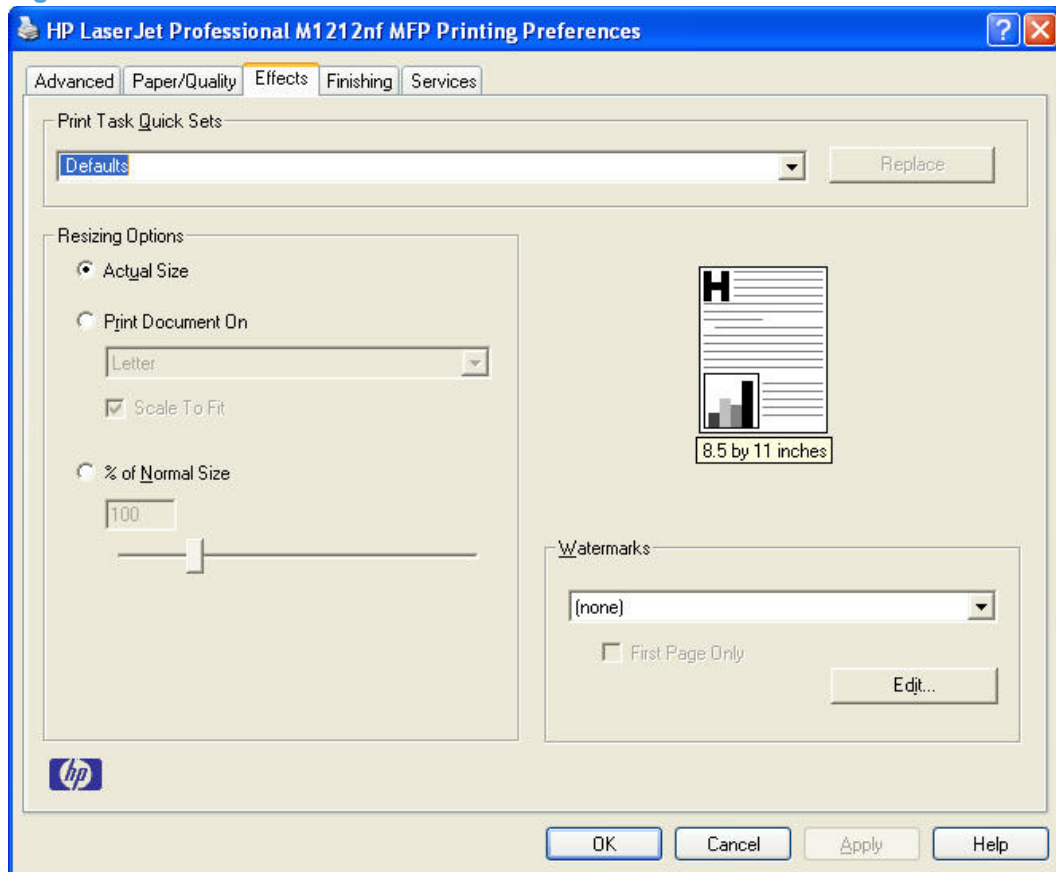

The **Effects** tab contains the following controls:

- [Print Tasks Quick Sets](#)
- [Resizing Options](#)
- [Document preview image](#)
- [Watermarks](#)

Print Tasks Quick Sets

The **Print Tasks Quick Sets** drop-down list appears on all tabs except the **Services** tab.

Print Tasks Quick Sets allow separate groups of print settings to be saved under specified names for reuse.

Follow these steps to create a Print Task Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- Select the print options for the new quick set.
- Type a name for the quick set, and then click **Save**.

Follow these steps to use a Print Tasks Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- In the **Print Tasks Quick Sets** drop-down list, select one of the quick sets, and then click **OK** to print the job with the predefined settings.

Resizing Options

The **Resizing Options** group box consists of the following controls:

- **Actual size** (default)
- **Print document on:**
- **Scale to fit**
- **% of actual size:**

Actual size

Actual Size is the default setting. It prints the document without changing the document size.

Print document on

Click the **Print Document On:** option to format the document for one paper size and then print the document on a different paper size, with or without scaling the image to fit the new paper size.

Print Document On: control is disabled by either of the following conditions:

- The **% of actual size:** value is selected.
- The **Pages per sheet:** value (on the **Finishing** tab) is not 1.


When **Print Document On:** is selected, the drop-down menu shows the paper sizes on which you can print. The list contains all of the standard paper sizes that the selected paper source supports and any custom sizes that you have created. When **Print document on:** is selected, **Scale to fit** is automatically selected. Clear this check box if you do not want your document reduced or enlarged to fit on the selected paper.

Scale to fit

The **Scale To Fit** option box specifies whether each formatted document page image is scaled to fit the target paper size. By default, **Scale To Fit** is selected when **Print document on:** is selected. If the setting is turned off, then the document page images will not be scaled and are instead centered at full size on the target paper. If the document size is larger than the target paper size, then the document

image is clipped. If it is smaller, then it is centered within the target paper. The following figure shows the effect that **Scale To Fit** has on a document formatted for Legal-size paper but printed on Letter.

Figure 4-7 Preview images – Legal on Letter; **Scale to Fit** off (left) and on (right)

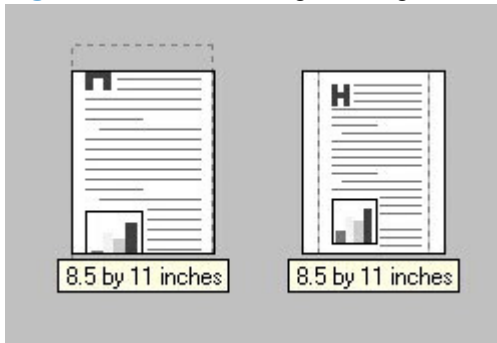

When the size for which the document is formatted (that is, the logical size) differs from the target size, the preview image uses a dashed gray line to show the boundaries of the logical page in relation to the target paper size.

% of normal size

The **% of Normal Size:** option provides a slider bar for scaling the percentage setting. The default setting is 100%. Actual size is defined as the paper size that is selected within the driver or the size that the driver receives from the software program (if the software program does not negotiate the paper size with the driver). The driver scales the page by the appropriate factor and sends it to the product.

The limits of the range are from 25% to 400%, and any values outside the range are adjusted to those limits as soon as the focus is removed from the control (that is, when the Tab key is pressed or another control is selected).

Any change to the scale also changes the page preview, which increases or decreases from the upper-left corner of the preview.

The slider bar controls the scale directly. The value in the edit box changes as the slider bar is dragged, and the document preview image is updated to the new image scale. Each click on the arrows increases or decreases the scale by 1%. Each click on the slider bar affects the scale by 10%.

To achieve an exact scaling value, either use the slider bar to approximate the value that you want and then use the arrows to refine the value, or type the value into the edit box.

The following settings disable **% of Normal Size**:

- **Print document on:** (on the **Effects** tab) is selected
- **Pages per sheet:** (on the **Finishing** tab) is not 1

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:

- **Advanced**
- **Paper/Quality**

- **Effects**
- **Finishing**

Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Watermarks

Use the **Watermarks** feature to select a watermark, create a new watermark (text only), or edit an existing watermark. The following watermarks are preset in the driver:

- **(none)**
- **Confidential**
- **Copy**
- **Draft**
- **SAMPLE**

The drop-down menu shows alphabetically sorted watermarks that are currently available on the system, plus **(none)** which indicates that no watermark is selected. This is the default setting. Any watermark that is selected from this list appears in the preview image.


When the **First page only** check box is selected, the watermark is printed only on the first page of the document. The **First page only** check box is disabled when the current watermark selection is **(none)**.

Watermarks are applied to logical pages. For example, when **Pages per sheet:** is set to **4** and **First page only** is turned off, four watermarks appear on the physical page (one on each logical page).

Watermark Details

Click **Edit**, and the **Watermark Details** dialog box appears.

Figure 4-8 Watermark Details dialog box

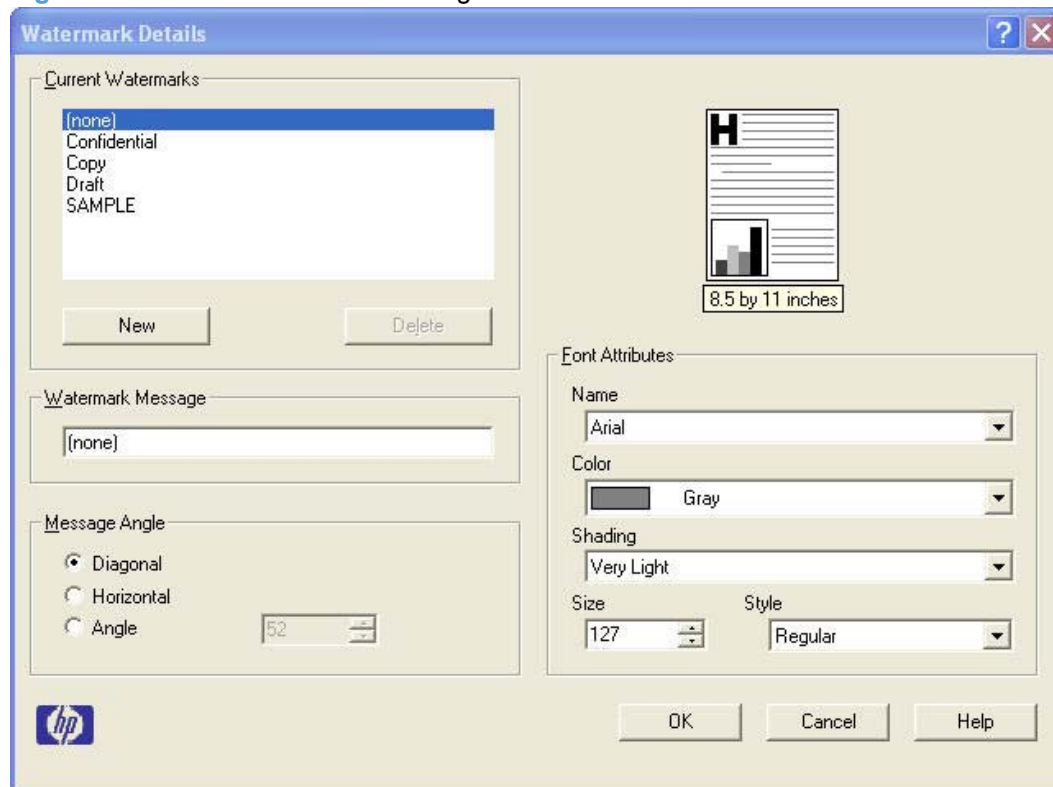

The dialog box shows a preview image and provides options for creating a new watermark and controlling the message angle and font attributes.


Click **OK** to accept all of the changes that are made in the **Watermark Details** dialog box. However, clicking **Cancel** does not cancel all of the changes. If you make changes to a watermark and then select a different watermark or click **New**, all of the changes are saved, and only the current, unsaved changes can be canceled.

Current Watermarks

The **Current Watermarks** group box contains a list of available watermarks, both predefined watermarks that are available in the driver and any new watermarks that you have created.

To create a new watermark, click **New**. The new watermark appears in the **Current Watermarks** list and in the **Watermark Message** edit box as "Untitled" until you type a new name in the **Watermark Message** edit box. The new name then appears in the **Current Watermarks** group box, in the **Watermark Details** dialog box, and in the **Watermarks** group box on the **Effects** tab.

To delete a watermark, select the watermark in the **Current Watermarks** list and click **Delete**. At the warning that appears, click **Cancel** to keep the watermark, or click **OK** to delete it.

 **NOTE:** When you reach the limit of 30 watermarks in the **Current Watermarks** list at one time, the **New** button is disabled.

To edit an existing watermark, select the watermark in the **Current Watermarks** list. If you change the **Watermark Message** for that watermark, you are, in effect, creating a new watermark.

Watermark Message

The **Watermark Message** is also the name that identifies the watermark in the **Current Watermarks** list, except when more than one watermark has the same message. For example, you can have several different watermarks with the message DRAFT, each with a different typeface or font size. When this occurs, the string is appended with a space, a pound sign, and a number (for example, **Draft #2**). When a number is added, the number 2 is used first, but if the resulting name is also in the list, then the number increases until the name is unique (**Draft #3**, **Draft #4**, and so on).

Message Angle

Use the controls in the **Message Angle** group box to print the watermark in different orientations on the page. All settings center the watermark string within the page; the selection of a particular setting affects only the angle of the string placement. The following settings are available:

- **Diagonal.** This is the default setting. Select this setting to place the text along a line that spans the lower-left to upper-right corners of the page.
- **Horizontal.** Select this setting to place the text along a line that spans the mid-left and mid-right edges of the page.
- **Angle.** Select this setting to place the text at the specified angle across the page. Use the numeric spin box to select the angle.

Font Attributes

Use the controls in the **Font Attributes** group box to change the font and the shading, size, and style of the font.

The **Font Attributes** group box contains the following controls:

- **Name**

The **Name:** drop-down menu lists fonts that are currently installed on the system. The default is language dependent.

- **Color**

Sets the color of the watermark. The only watermark color option available on this product is **Gray**.

- **Shading**

The default **Shading:** setting for new and preset watermarks is **Very light**. The following range of shades is available from the **Shading** drop-down menu:

- **Lightest**
- **Very light** (default)
- **Light**
- **Medium light**
- **Medium**
- **Medium dark**
- **Dark**

- **Very dark**
- **Darkest**

These values represent the intensity of the gray that is used. **Light** produces a lightly saturated gray watermark, **Lightest** produces the lightest shade of watermark, and **Darkest** produces a black watermark.

- **Size**

Font sizes from 1 to 999 points are available from the **Size** menu. The default point size is language dependent.

- **Style**

The following settings are available:

- **Regular**
- **Bold**
- **Italic**
- **Bold Italic**
- The default **Style**: setting for new and preset watermarks is **Regular**.

Default watermark settings

The following table shows **Font Attribute** settings for new and preset watermarks.

Table 4-2 Font Attribute settings for new and preset watermarks

Setting	New watermark	Preset watermark
Name	Arial	Varies by language
Shading	Very light	Very light
Size	90	Varies by language
Style	Bold	Regular


Click **OK** to accept all of the changes that have been made in the **Watermark Details** dialog box. Clicking **Cancel** does not cancel all of the changes. If you make changes to a watermark and then select a different watermark or click **New**, all of the changes are saved, and only the current, unsaved changes can be canceled.

Finishing tab features

 **NOTE:** The **Finishing** tab is on the **Printing Preferences** tab set. For information about how to gain access to these tabs, see [Printing Preferences driver tabs on page 118](#).

Use the **Finishing** tab to print booklets and control the paper output. The following figure shows the **Finishing** tab.

Figure 4-9 Finishing tab

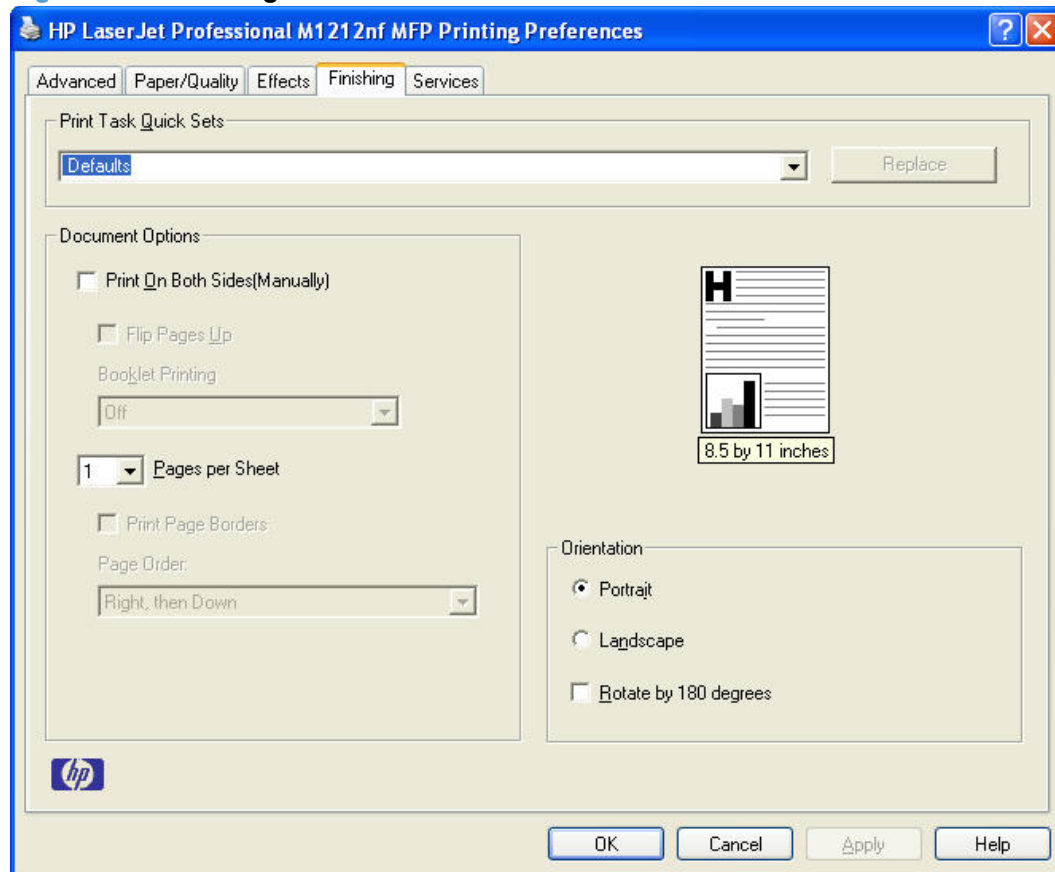

The **Finishing** tab contains the following controls:

- [Print Tasks Quick Sets](#)
- [Document Options](#)
- [Document preview image](#)
- [Orientation](#)

Print Tasks Quick Sets

The **Print Tasks Quick Sets** drop-down list appears on all tabs except the **Services** tab.

Print Tasks Quick Sets allow separate groups of print settings to be saved under specified names for reuse.

Follow these steps to create a Print Task Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- Select the print options for the new quick set.
- Type a name for the quick set, and then click **Save**.

Follow these steps to use a Print Tasks Quick Set.

- Open the printer driver, and then click the **Properties** or **Preferences** button.
- In the **Print Tasks Quick Sets** drop-down list, select one of the quick sets, and then click **OK** to print the job with the predefined settings.

Document Options

The **Document Options** group box contains the following controls:

- [Print on both sides manually](#)
- [Flip pages up](#)
- [Booklet Printing](#)
- [Pages per sheet](#)
- [Print page borders](#)
- [Page order](#)

Print on both sides manually

Select the **Print on Both Sides (Manually)** check box to print on the second side of supported media.

Select the paper type that corresponds to the paper that you are using for the print job. The following paper types have a different print modes when you manually print on the second side:


- Plain
- Preprinted
- Letterhead
- Prepunched
- Bond
- Recycled
- Colored
- Rough

Cardstock paper can be manually printed on the second side, but no change occurs to the print mode. Transparencies and labels should *never* be manually printed on the second side.

To print a multiple-page document, follow these steps:

1. Select the **Print on Both Sides (Manually)** check box.
2. Click **OK**. The even-number pages of the document print.
3. When the control panel shows the MANUALLY FEED message, insert the stack of paper (on which the even-number pages have been printed) as indicated in the following figure.

Figure 4-10 Print on Both Sides Instructions dialog box

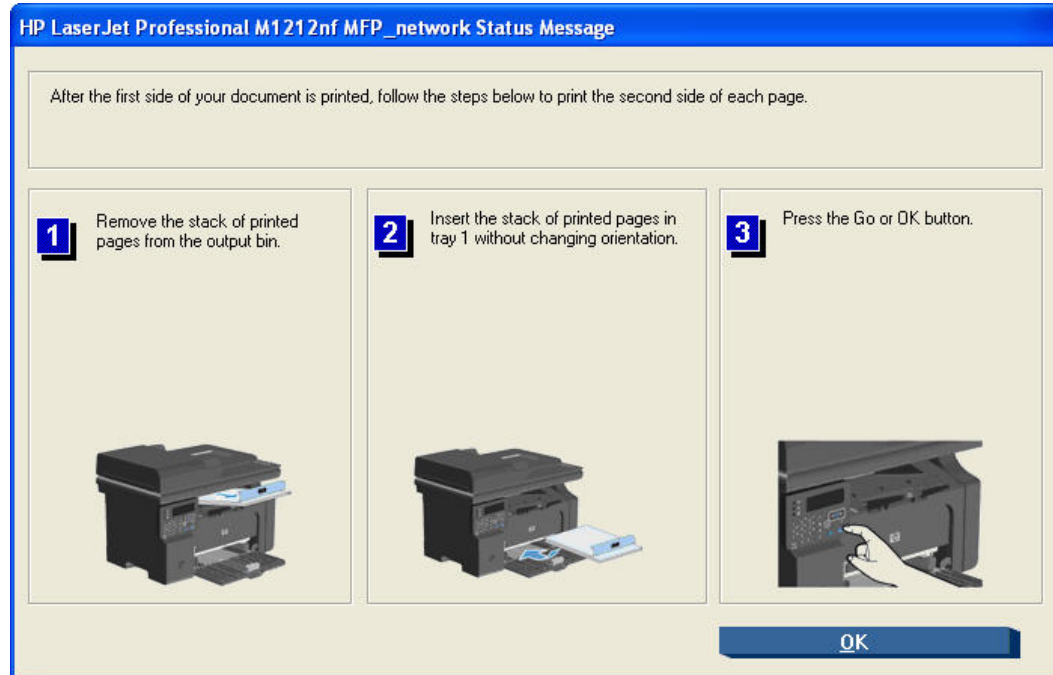

When you have completed the steps that appear in the dialog box, the second half of the print job prints on the back side of the stack of paper. The driver does not require the program to specifically support odd- and even-page printing, because the driver coordinates this function.

Flip pages up

Use the **Flip pages up** check box to specify the duplex-binding option. By default, the **Flip pages up** check box is not available. It is available only when **Print on both sides** is selected. The following table demonstrates the results of selecting this check box, depending on the paper orientation selected on the **Finishing** tab.

Table 4-3 Page orientation

Orientation (Finishing tab)	Flip pages up selected	Flip pages up not selected
Portrait	Short-edge binding	Long-edge binding
Landscape	Long-edge binding	Short-edge binding

When **Print on both sides** is selected, the document preview image changes to show a spiral binding along either the left edge or the top edge of the page. In addition, a folded-over corner appears in the lower-right portion of the preview image, indicating that printing occurs on the back side. An arrow on the folded-over corner points in the direction that the pages would be flipped if they were bound together.

Short-edge binding is for print jobs with pages that read by flipping over like the pages of a calendar. Long-edge binding is for print jobs with pages that read by turning like the pages of a book.

Booklet Printing

The **Booklet Printing:** drop-down menu, visible when **Print on both sides** is selected, offers choices that are based on the current paper size. The default setting for the **Booklet Printing:** drop-down menu is **Off**. The other settings have the following format, where **[paper size]** depends on the paper size that is set on the **Paper/Quality** tab:

- **Left Edge Binding**
- **Right Edge Binding**

When you select **Left Edge Binding** or **Right Edge Binding**, the document preview image changes to show the location of the binding. If the **Pages per sheet:** setting is on the default setting of 1, it automatically changes to **2 pages per sheet**. If you manually change the **Pages per Sheet** setting to 4, 6, 9, or 16 pages per sheet, the **Booklet Printing:** is disabled. See [Pages per sheet on page 141](#) for more information.

Book and booklet printing

The product supports book and booklet printing.

A booklet is a print job that places two pages on each side of a sheet that can then be folded into a booklet that is half the size of the paper. Use the **Booklet Printing:** drop-down menu on the **Finishing** tab to control booklet settings.



NOTE: Booklet folding is a manual process. The product does not fold.

Pages per sheet

Use the **Pages per sheet:** option to select the number of pages that you want to print on a single sheet of paper. If you choose to print more than one page per sheet, the pages appear smaller and are arranged on the sheet in the order that they would otherwise be printed. The **Pages per sheet:** drop-down menu provides the following settings:

- **1 page per sheet** (default)
- **2 pages per sheet**
- **4 pages per sheet**
- **6 pages per sheet**
- **9 pages per sheet**
- **16 pages per sheet**



NOTE: When you select an option other than **2 pages per sheet**, booklet printing is unavailable.

Print page borders

Related controls indented beneath **Pages per sheet:** are **Print page borders** and **Page order:**, which become active when **Pages per sheet:** is greater than 1.

Print page borders sets a line around each page image on a printed sheet to help visually define the borders of each logical page.


Page order

The **Page order**: drop-down menu contains the following options:

- **Right, then Down**
- **Down, then Right**
- **Left, then Down**
- **Down, then Left**

The preview document image reflects changes in these settings, as shown by the examples in the following figure.

Figure 4-11 Page-order preview images

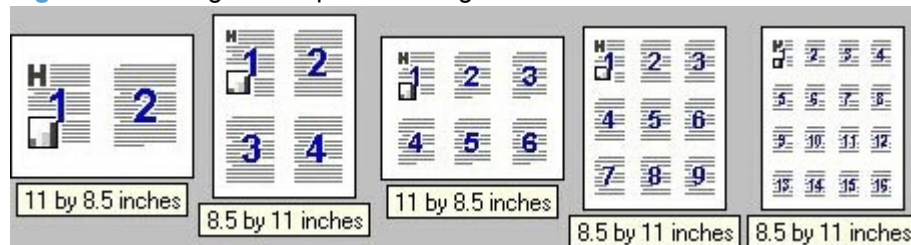

- **2 pages per sheet**
- **4 pages per sheet**
- **6 pages per sheet**
- **9 pages per sheet**
- **16 pages per sheet**

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:

- **Advanced**
- **Paper/Quality**
- **Effects**
- **Finishing**

Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Orientation

Orientation refers to the layout of the image on the page and does not affect the way that paper feeds into the product. The orientations that you can specify are portrait, landscape, and rotated. The default orientation is **Portrait**.



NOTE: Because nearly all software programs establish orientation the page orientation in the driver is useful only for the few software programs that do not set it.

The **Orientation** group box contains the following options:

- **Portrait.** The top edge of the document is the shorter edge of the paper.
- **Landscape.** The top edge of the document is the longer edge of the paper.
- **Rotate by 180 degrees.** This creates a landscape or portrait orientation in which the image is rotated 180°. This setting is useful for printing prepunched paper.


You can toggle orientation between portrait and landscape by clicking the document preview image. If you select the **Rotate by 180 degrees** check box, no change occurs in the document preview image.

Services tab features

 **NOTE:** The **Services** tab is on the **Printing Preferences** tab set. For information about how to gain access to these tabs, see [Printing Preferences driver tabs on page 118](#).

The **Services** tab is shown in the following figure.

Figure 4-12 Services tab

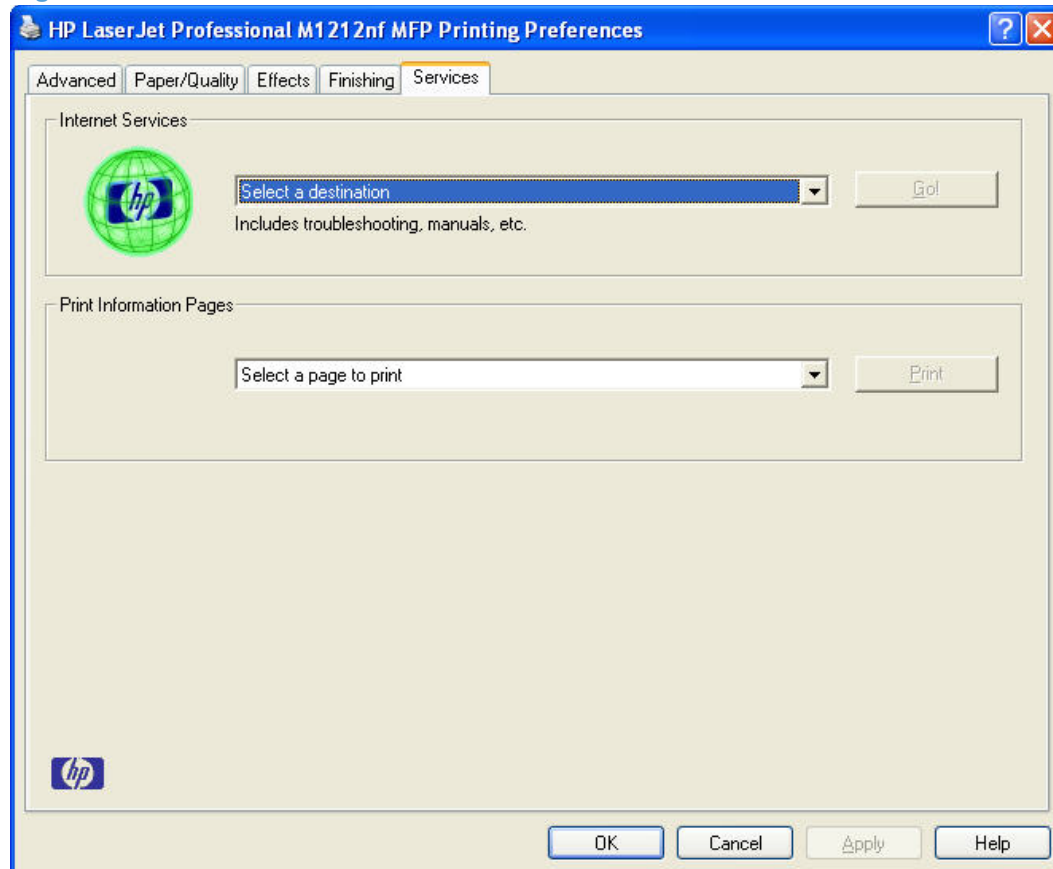

The **Services** tab contains the following group boxes:

- [Internet Services](#)
- [Print Information Pages](#)

Internet Services

The **Internet Services** group box contains the **Select a destination** drop-down menu with the following options:

- **Support and troubleshooting.** This is the main Web site for product support.
- **Product manuals.** View or download product manuals.
- **Check for driver updates.** Automatically check to see whether the correct and most up-to-date print drivers are installed.
- **Shop for supplies.** Shop online for product supplies.

If you have Internet access, select any of these items and then click **Go!** to open the corresponding HP Web page.

Print Information Pages

Use the **Print Information Pages** section of the **Services** tab to print the following information pages.

- **Demo Page**
- **Config Page**
- **Supply Status Page**
- **"Control-Panel Reference Page**

Device Settings

Gain access to the product's Device Settings by following these steps.

1. **Windows Vista and Windows 7:** Click **Start**, click **Control Panel**, and then in the category for **Hardware and Sound** click **Printer**.

-or-


Windows XP, Windows Server 2003, and Windows Server 2008 (using the default Start menu view): Click **Start**, and then click **Printers and Faxes**.

-or-

Windows XP, Windows Server 2003, and Windows Server 2008 (using the Classic Start menu view): Click **Start**, click **Settings**, and then click **Printers**.

2. Right-click the driver icon, and then select **Properties**.
3. Click the **Device Settings** tab.

Figure 4-13 Device Settings tab - M1212nf model shown

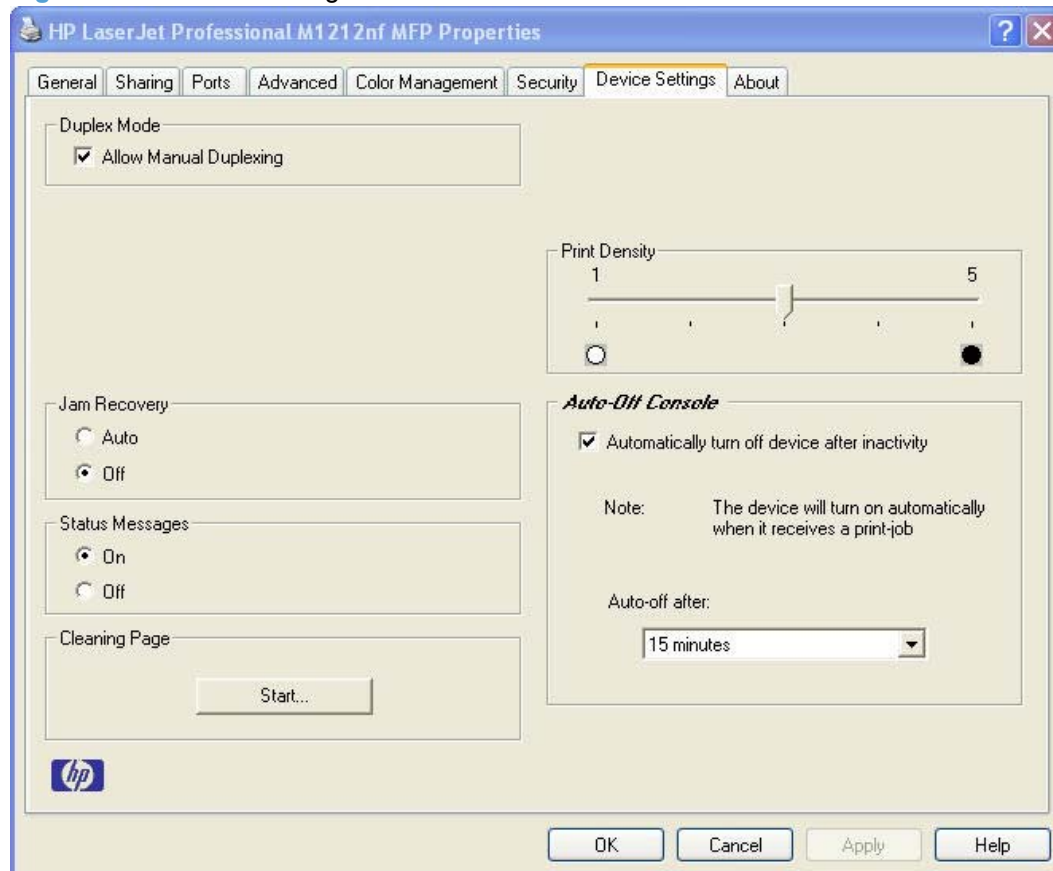

The following settings can be configured on the **Device Settings** tab.

- [Duplex Mode](#)
- [Jam Recovery](#)
- [Status Messages](#)

- [Cleaning Page](#)
- [Print Density](#)
- [Auto-Off Console](#)



NOTE: Click the **Apply** button on the **Device Settings** tab to apply any changed settings.

Duplex Mode

Use the **Duplex Mode** section to set duplex settings.

- M1130/M1210 series products have the option to **Allow Manual Duplexing**. **Allow Manual Duplexing** is selected by default.

Jam Recovery

When the Jam Recovery feature is turned on, the product reprints any pages that are damaged during a jam. The default setting for **Jam Recovery** is **Off**.

Status Messages

When the Status Messages feature is turned on, status messages related to the operation of the product appear. The default, and recommended, setting for **Status Messages** is **On**.

Cleaning Page

Use the Cleaning Page feature to remove excess toner and paper particles that accumulate on the fuser assembly and rollers.

Follow these steps to print a Cleaning Page.

1. On the **Device Settings** tab, press the **Start** button in the **Cleaning Page** section. The **HP LaserJet Cleaning Utility** starts.
2. Make sure the product is idle and the **Ready** LED on the product is on.
3. Load overhead transparency or copier grade paper (18lb - 24lb or 70g/m² - 90g/m²) with a smooth surface.
4. Press the **OK** button. The cleaning process will take about two minutes to finish.


Print Density

Use the Print Density setting to optimize and improve image quality. The default setting for **Print Density** is 3.

Auto-Off Console

Auto-Off is an energy-saving feature of this product. After a user-specified time period, the product automatically reduces its power consumption (Auto-Off). The product returns to the ready state when a button is pressed or a print job is received. When the product is in Auto-Off mode, all of the control-panel LEDs and the power button backlight LED are off.

Auto-Off is enabled by default and the default time interval setting is five minutes. Change Auto-Off settings by selecting a time interval in the **Auto-off after:** drop-down menu. Disable Auto-Off by deselecting **Automatically turn off device after inactivity**.

 **NOTE:** Although the product lights are off in Auto-Off mode, the product will work normally when it receives a print job.

5 Macintosh software and utilities

- [Supported operating systems for Macintosh](#)
- [Macintosh system requirements](#)
- [Macintosh printing-system software](#)
- [Macintosh install and uninstall instructions](#)

Supported operating systems for Macintosh

The product supports the following Macintosh operating systems:

- Mac OS X V10.4, V10.5 and V10.6

 **NOTE:** PPC and Intel Core Processor Macs are supported.

Macintosh system requirements

Hardware requirements

- 256 MB RAM
- 150 MB HD free space
- CD-ROM
- USB

Macintosh printing-system software

The printing-system software for Macintosh is composed of an HP-created postscript (PS) printer definition file (PPD) and a Printer Dialog Extension (PDE) file that work together with the Macintosh OS printing system. These files are used by the Macintosh OS printing system to determine default printer-driver settings and to allow the user to select between the various print options and settings. An HP-supplied Macintosh printer configuration utility is provided, which allows the user to access the HP Embedded Web Server (HP EWS) for additional configuration and product status monitoring. The following are provided on the printing-system CD:

- The HP LaserJet Installer for Macintosh

The following components are installed by the HP LaserJet Installer for Macintosh:

- HP LaserJet Professional M1130/M1210 MFP Series PPD
- HP LaserJet Professional M1130/M1210 MFP Series PDE
- HP USB EWS Gateway
- HP LaserJet Utility

HP LaserJet Professional M1130/M1210 MFP Series PPD

A postscript printer description (PPD) file is a text file that contains keywords and other information to specify printer features, options, and settings. PPD files are created by printer vendors for a specific postscript printer or printer family. PPD files are created by printer vendors to describe the set of printer features available for their postscript printers. On the Macintosh, PPD files provide all the information necessary to describe a postscript printer's features, including options and default settings. They also contain the postscript code used to invoke those features.

HP LaserJet Professional M1130/M1210 MFP Series PDE

A Print Dialog extension file can specify one or more PDEs to load in the Print dialog box to provide HP printer specific features. A printing dialog extension (PDE) is a way to extend the Print dialog box in Mac OS X with custom printer features.

A PPD file and printing dialog extension (PDE) for a printer are bound to a printer queue when the queue is created.

HP USB EWS Gateway

For network connected printers, the EWS can be accessed directly by typing the network IP address or DNS name of the product into the Web browser. HP USB EWS Gateway software, which is automatically installed, allows a Web browser to access the product's EWS if the product is connected using a USB cable. Click the **Utility** button when using a USB connection to access the EWS through the Web browser.

HP LaserJet Utility

Use the HP LaserJet Utility to configure, administer, and set up product features that are not available from the printer driver. You can use the HP LaserJet Utility with HP printers connected via USB, and ethernet.

Supported printer drivers for Macintosh

The HP installer provides Postscript Printer Description (PPD) files, Printer Dialog Extensions (PDEs), and the HP Printer Utility for use with Macintosh computers.

The PPDs, in combination with the Apple postscript printer drivers, provide access to device features. Use the Apple postscript printer driver that comes with the computer.

Priority for print settings for Macintosh

Changes to print settings are prioritized depending on where the changes are made:

 **NOTE:** The names of commands and dialog boxes might vary depending on your software program.

- **Page Setup dialog box:** Click **Page Setup** or a similar command on the **File** menu of the program you are working in to open this dialog box. Settings changed here might override settings changed anywhere else.
- **Print dialog box:** Click **Print**, **Print Setup**, or a similar command on the **File** menu of the program you are working in to open this dialog box. Settings changed in the **Print** dialog box have a lower priority and do *not* override changes made in the **Page Setup** dialog box.
- **Default printer driver settings:** The default printer driver settings determine the settings used in all print jobs, *unless* settings are changed in the **Page Setup**, **Print**, or **Printer Properties** dialog boxes.
- **Printer control-panel settings:** Settings changed at the printer control panel have a lower priority than changes made anywhere else.

Change printer-driver settings for Macintosh

Change the settings for all print jobs until the software program is closed	Change the default settings for all print jobs	Change the product configuration settings
<ol style="list-style-type: none">1. On the File menu, click Print.2. Change the settings that you want on the various menus.	<ol style="list-style-type: none">1. On the File menu, click Print.2. Change the settings that you want on the various menus.3. On the Presets menu, click Save as and type a name for the preset. <p>These settings are saved in the Presets menu. To use the new settings, you must select the saved preset option every time you open a program and print.</p>	<ol style="list-style-type: none">1. From the Apple menu, click System Preferences and then Print & Fax.2. Click Options & Supplies.3. Click the Driver menu.4. Select the driver from the list, and configure the installed options.

Software for Macintosh computers

HP LaserJet Utility

Use the HP LaserJet Utility to set up product features that are not available in the printer driver.

You can use the HP LaserJet Utility when the product uses a universal serial bus (USB) cable or is connected to a TCP/IP-based network.

Open the HP LaserJet Utility

Open the HP Printer Utility in Mac OS X V10.4 and V10.5, and V10.6

1. Open the Finder, click **Applications**, click **Utilities**, and then double-click **Printer Setup Utility**.
 2. Select the product that you want to configure, and then click **Utility**.
-
1. In **System Preferences**, click the **Printer & Fax** icon.
 2. Select the printer and then click the **Open Print Queue...** button..
 3. Click the **Utility** icon.

Embedded Web Server

The product is equipped with the HP Embedded Web Server (HP EWS), which provides access to information about device and network activities. For a complete explanation of the features and functionality of the HP EWS, see the product user guide, which is available on the printing-system software CD.

Availability


This STR provides information about the availability of the printing-system software and related software and firmware. Printing-system software on a CD is available from HP fulfillment centers.

- [Printing-system software on the Web](#)
- [In-box printing-system software CD](#)

Printing-system software on the Web

All software that is contained on the installation CDs is also available on the Web.

Web deployment is the preferred method for obtaining the latest software. The HP Web site offers an option for automatic e-mail notification about new software releases.

 **NOTE:** This STR describes drivers that are shipped on the printing-system software CD that comes with the product. This STR does *not* describe drivers that will become available on the Web.

The printing-system software is available for download at the following Web site:

www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series

In-box printing-system software CD

One CD is included in-box with the product. The printing-system software CD contains the following components:

- Software installer
- Links to the HP Universal Print Drivers on the Web
- User guides
- Support information

The CD is divided into two partitions, one for each of the following operating systems:

- Windows
- Macintosh

The files in each partition of the printing-system software CD include documentation files and files that are required to install and uninstall the printing-system software components. Use the printing-system software CD to install the printing-system software.

- [Macintosh partition](#)

Macintosh partition

The HP Macintosh printing-system software files reside in the Macintosh partition. The HP LaserJet Installer for Macintosh is at the root of the Macintosh CD partition. The user manuals (.PDF) are grouped by language and are in the Documentation directory on the Macintosh partition of the software CDs.

Macintosh install and uninstall instructions

- [Install the Macintosh printing-system software](#)
- [Remove the printing-system software from Macintosh operating systems](#)


Install the Macintosh printing-system software

On a Macintosh computer, the printing-system software installation procedures are the same for a network administrator, a network client, or a single user. Install the printing-system software on any computer that has access rights to the product. The computer user must also have administrative rights on the computer to install the printing-system software.


- [General installation for Macintosh operating systems](#)
- [Detailed Mac OS X installation](#)
- [Setup instructions](#)

General installation for Macintosh operating systems


1. If you are connecting the product to a network, connect the network cable to the network port. If you are connecting the product to a computer by using the USB cable, connect the USB cable.
2. Insert the printing-system software CD into the CD-ROM drive.

 **NOTE:** If the **HP LaserJet** installer browser screen does not open automatically when the CD is inserted into the CD-ROM drive, double-click the product CD image on the desktop to open the installer browser screen.

3. In the **HP LaserJet** installer browser screen, double-click the product .dmg icon, then double-click the .pkg icon. This begins the printing-system installation.

 **NOTE:** In the HP LaserJet installer browser screen, double-click the **Documentation** icon to gain access to the manuals. Select a language folder and locate the available guides which are in .PDF format. The user guide is a .PDF file that is named LJM1130–M1210_use_xxww.pdf, where “xx” is a language abbreviation.


4. The **Introduction** screen appears. Click **Continue** and then follow the onscreen instructions to complete the printing-system software installation.

 **NOTE:** When the printing-system software is installing, be patient. The installer must perform an initial search of the computer, which can take up to 1 minute. During this time, the installer might appear to be stalled.

5. When the printing-system software installation is complete, click **Close**.
6. Continue with the steps for setting up a product.

Detailed Mac OS X installation

This section provides information about the Macintosh printing-system software installation dialog-box sequence.

 **NOTE:** If you are connecting the product to a network, connect the network cable to the network port. If you are connecting the product to a computer by using the USB cable, connect the USB cable.

1. Insert the printing-system software CD into the CD-ROM drive.

If the **HP LaserJet** installer browser screen does not open automatically when the CD is inserted into the CD-ROM drive, double-click the product CD image on the desktop to open the installer browser screen.

2. In the **HP LaserJet** installer browser screen, double-click the product .dmg icon, then double-click the .pkg icon. This begins the printing-system installation.


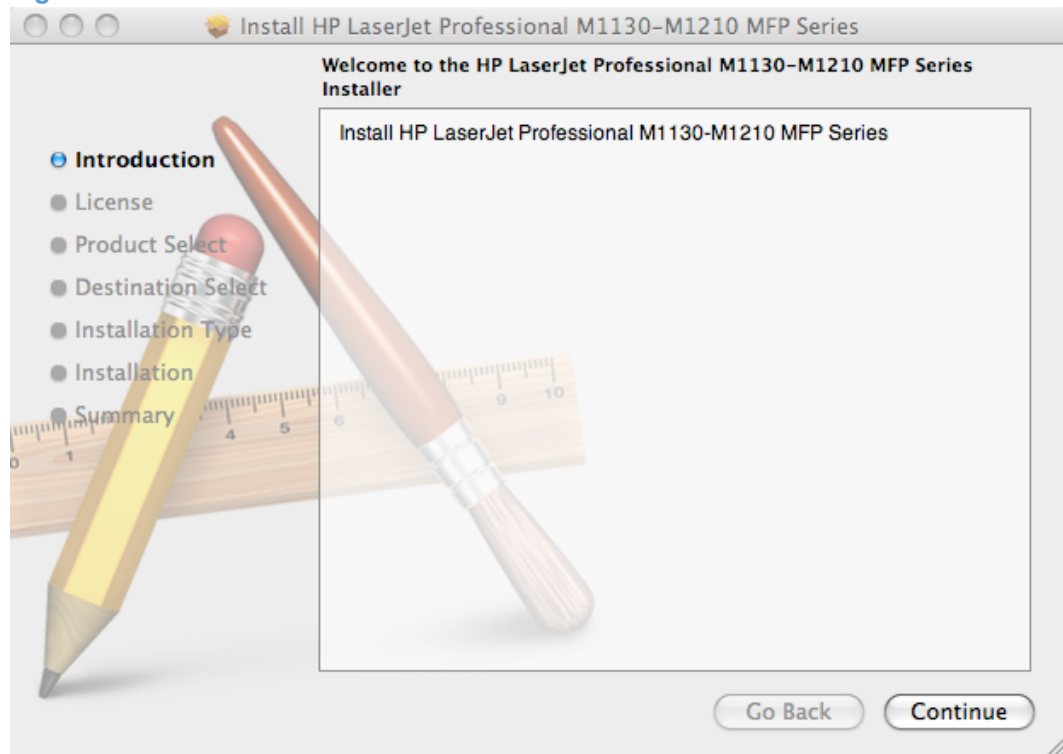
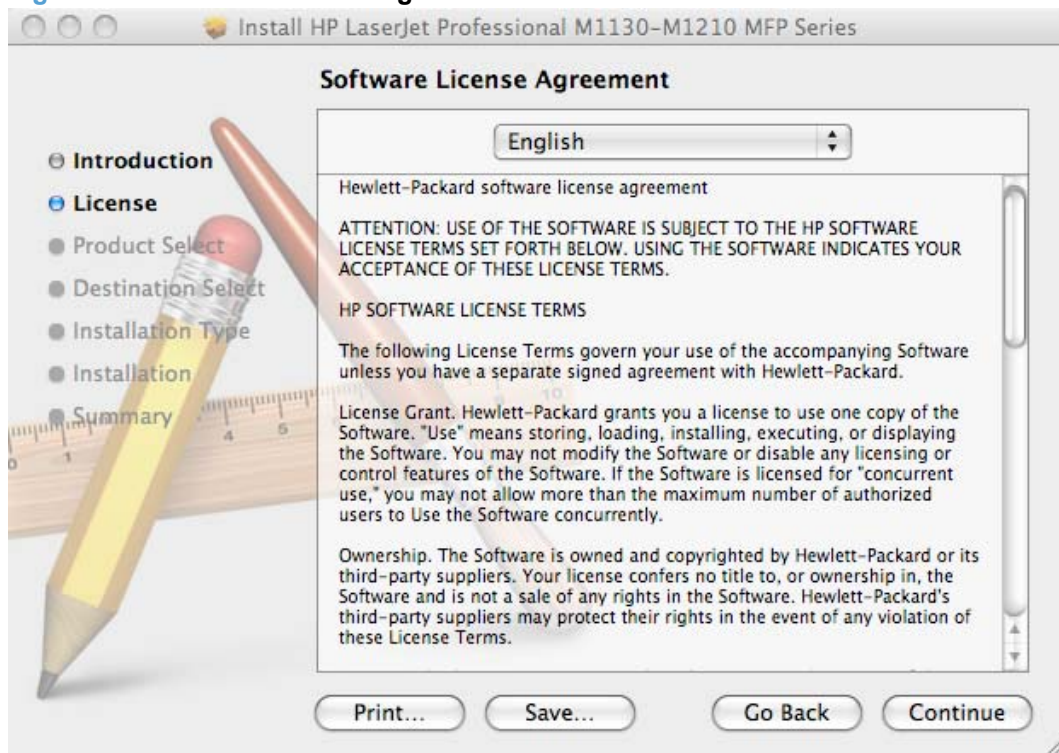
 **NOTE:** In the HP LaserJet installer browser screen, double-click the **Documentation** icon to gain access to the product user guide. The user guide is a .PDF file named LJM1130–M1210_use_xxww.pdf, where “xx” is a language abbreviation.

Figure 5-1 Introduction screen




3. Click **Continue**. The **Software License Agreement** screen appears.

Figure 5-2 Software License Agreement screen



4. Click **Print...** to open the **Page Setup** screen and print a copy of the License Agreement.
Click **Save** to open the system **Save** screen and save the License Agreement to disk.
Click **Go Back** to return to the previous screen.
Read the Software License Agreement and then click **Continue**.
5. The **Agree/Disagree** screen appears.


Figure 5-3 Agree/Disagree screen

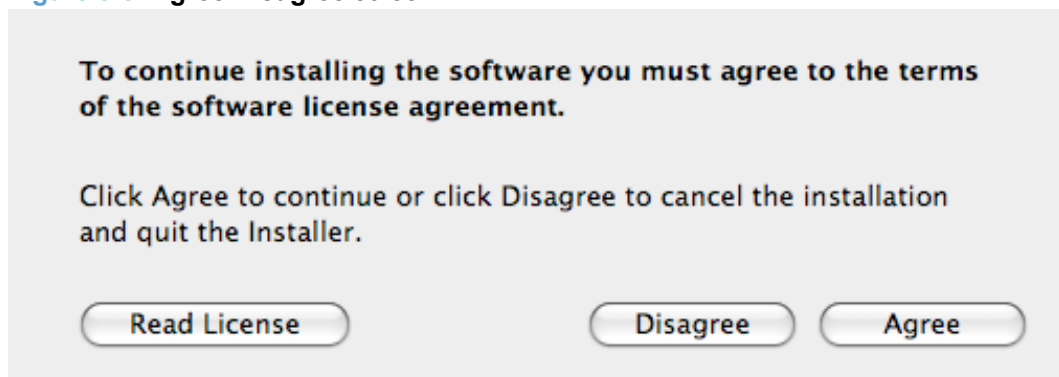

Click **Disagree** to end the installation and close the installer or click **Agree** to continue the installation.


6. The **Product Select** screen appears. Select the product to install and then click the **Continue** button.

Figure 5-4 Product Select screen

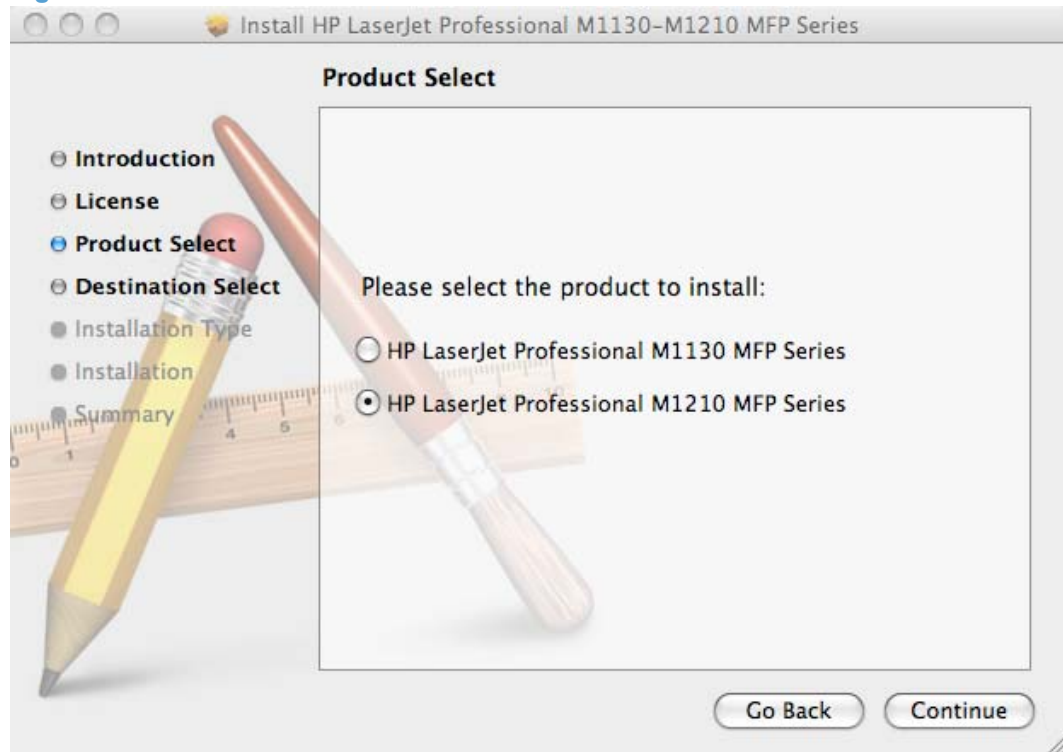

7. The **Select a Destination** screen appears.


Figure 5-5 Select a Destination screen

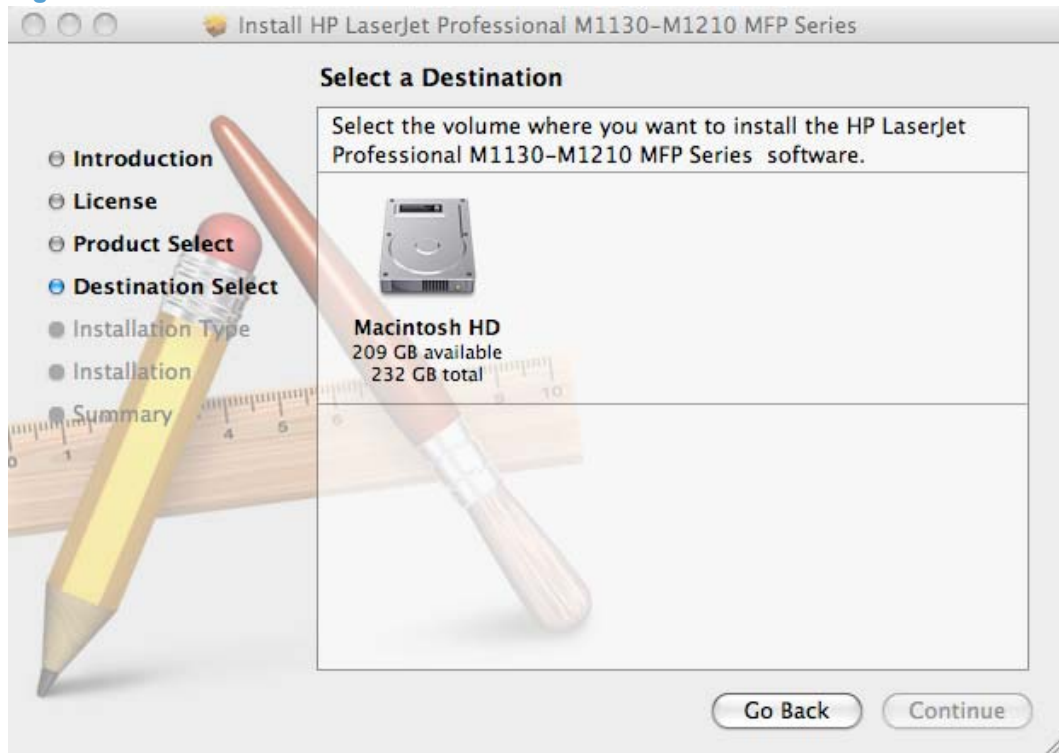

Select the location to install the software and then click the **Continue** button.

8. The **Select a Destination** screen changes with your selected installation destination and lists the space available, and the space required for the installation.

Figure 5-6 Select a Destination screen

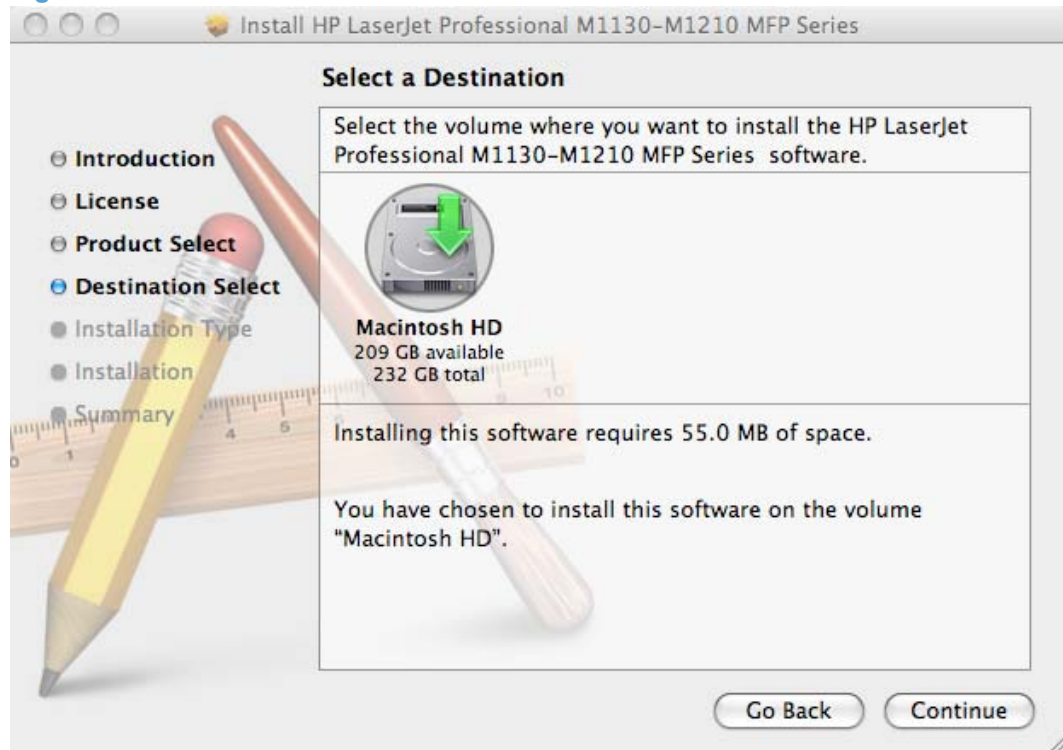


Click **Go Back** to go back to the previous screen.

Click **Continue** to continue the installation.


9. The **Standard Install on “Mac HardDrive”** screen appears. Click the **Install** button to continue installing the software. Click the **Change Install Location...** button to install the software in a different location. Click the **Go Back** button to return to the previous installation screen.

Figure 5-7 Standard Install on “Mac HardDrive” screen

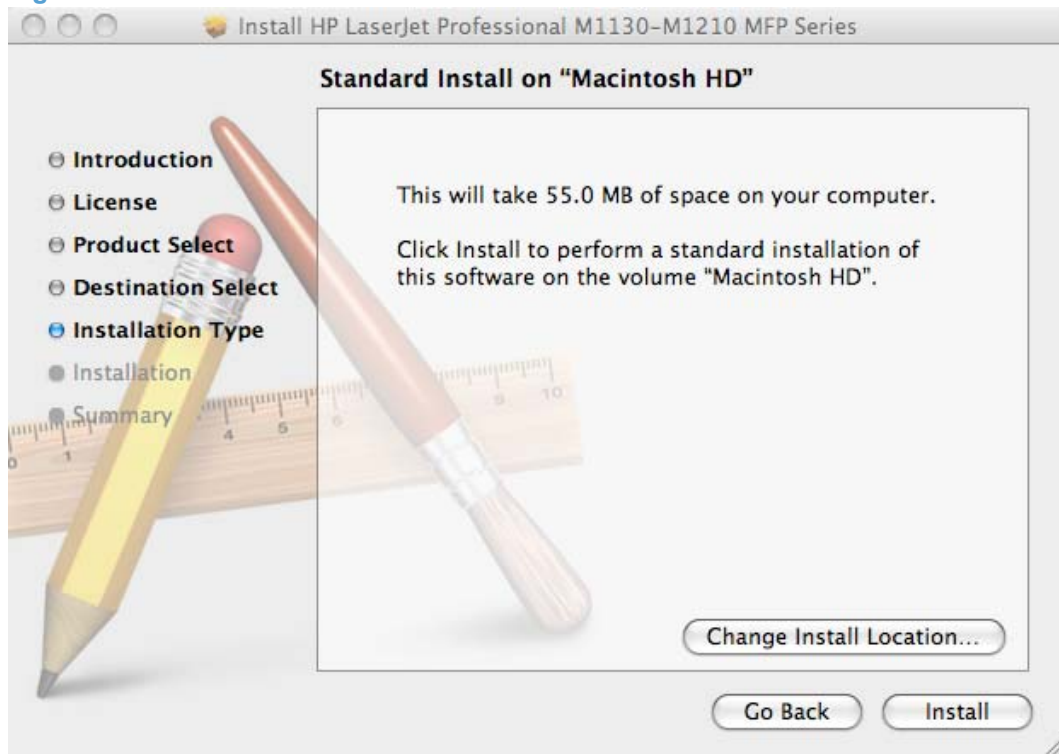


10. The **HP Setup Assistant** screen appears. Click the **Continue** button.

Figure 5-8 HP Setup Assistant screen

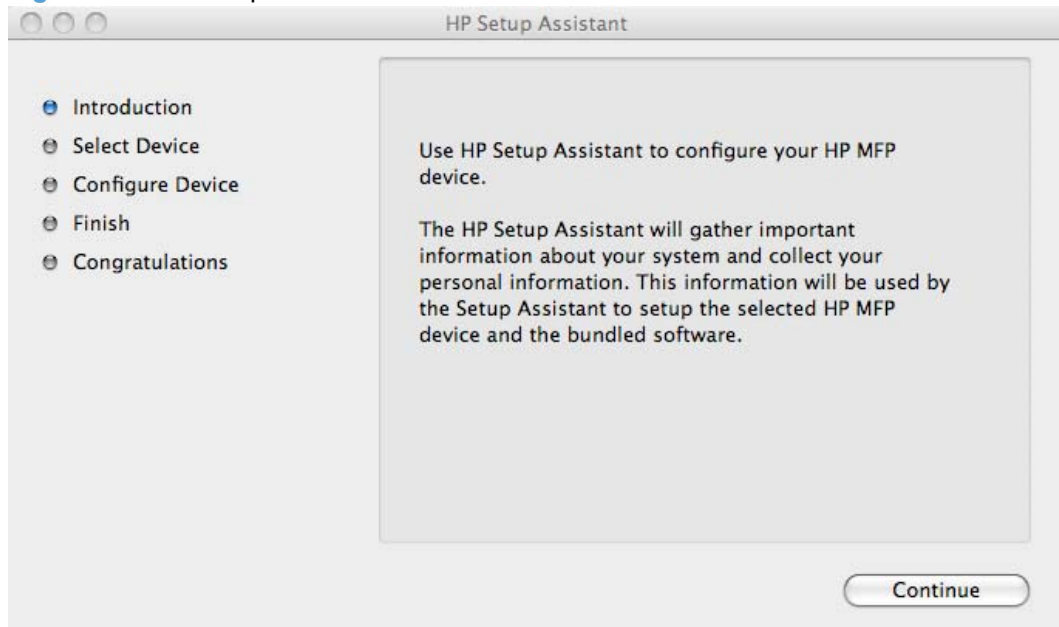


11. The **Select Your Device** screen appears. Select whether your product is connected via USB or a wired network, select your product, and then click the **Continue** button.

Figure 5-9 HP Setup Assistant screen

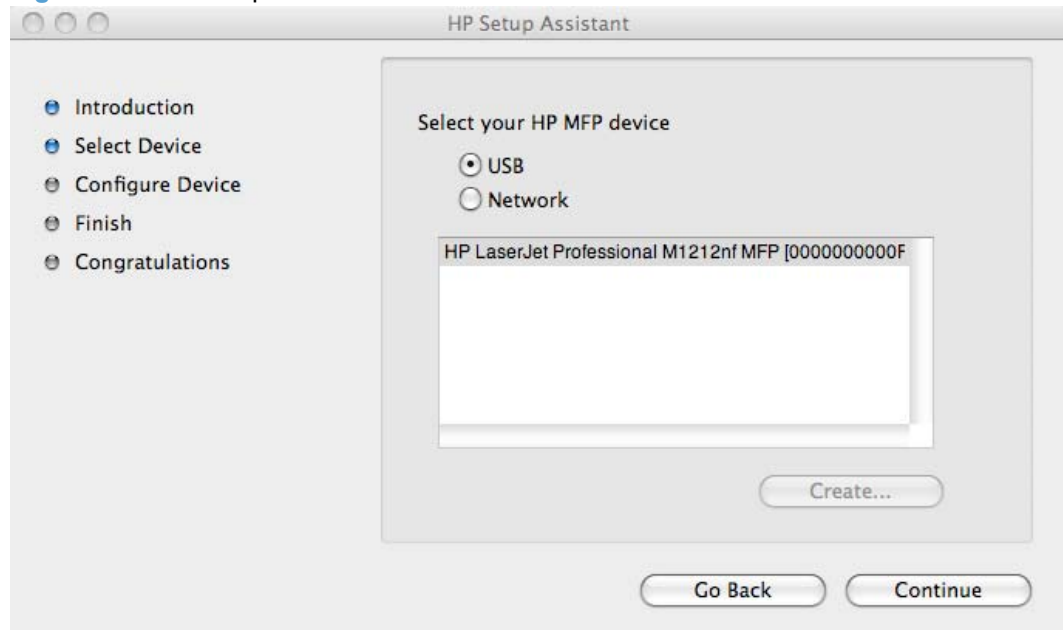

12. For M1212nf MFP products, follow the HP Setup Assistant steps to configure the fax.
13. The **HP Firmware Upgrade Utility** screen appears to guide the firmware upgrade process. Click the **Continue** button.


Figure 5-10 HP Firmware Upgrade Utility — **Introduction** screen

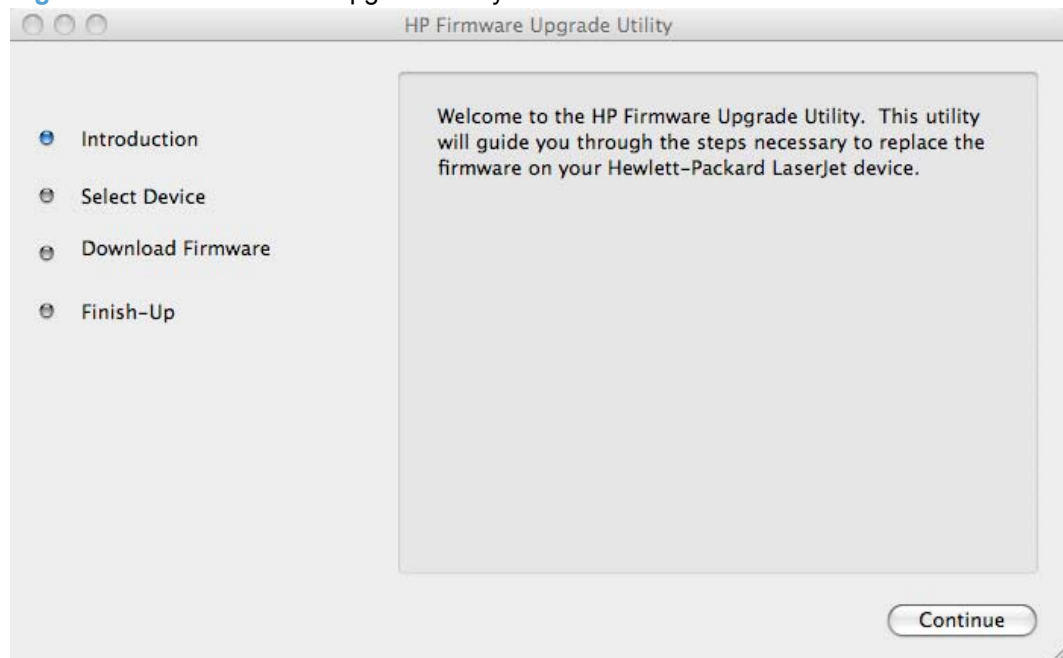

14. Select whether your product is connected via USB or a wired network, select your product, and then click the **Continue** button.

For products installed to print over a network, select your product by its IP address. If the product does not appear in the list, click the **Create** button and enter the IP address manually.


Figure 5-11 HP Firmware Upgrade Utility — **Select Device** screen

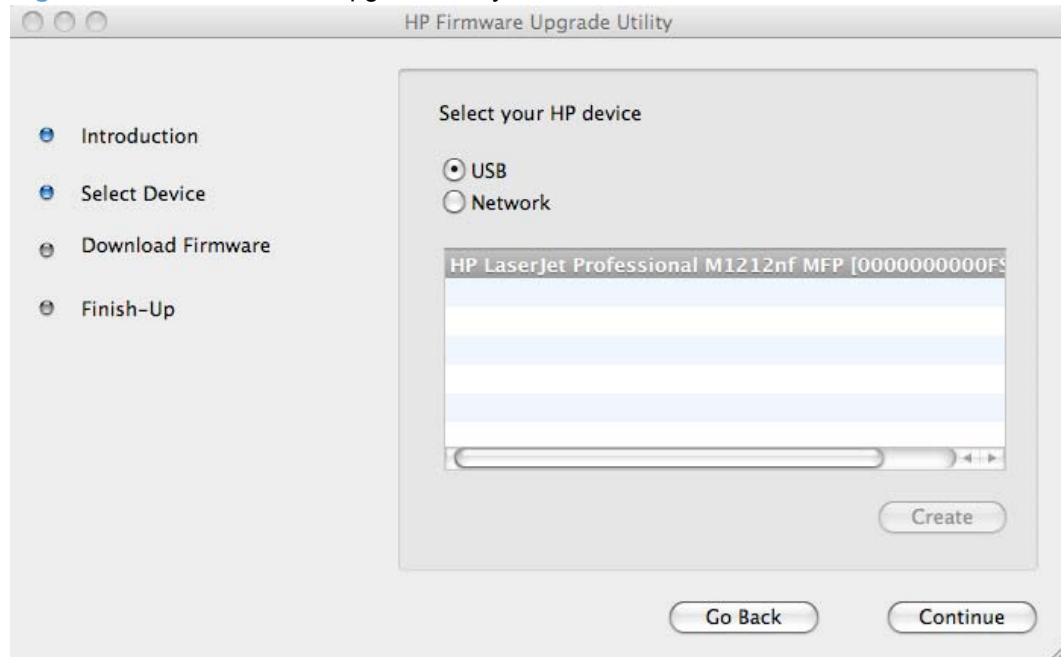

15. The **Download Firmware** screen appears, detailing the current firmware for the product and the firmware version that will be upgraded. Click the **Continue** button.

16. The **Finish-Up** screen appears after the firmware upgrade is complete. If the product didn't restart after the firmware upgrade, wait 5 seconds and turn the power back on to the product. Click the **Finish** button.

Figure 5-12 HP Firmware Upgrade Utility — **Finish-Up** screen

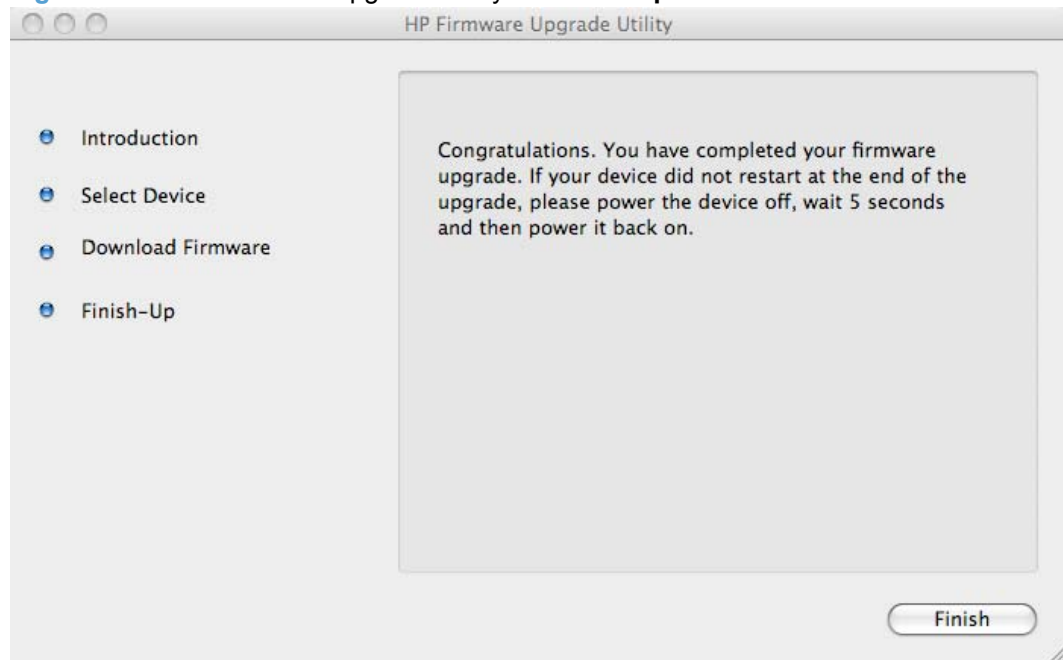

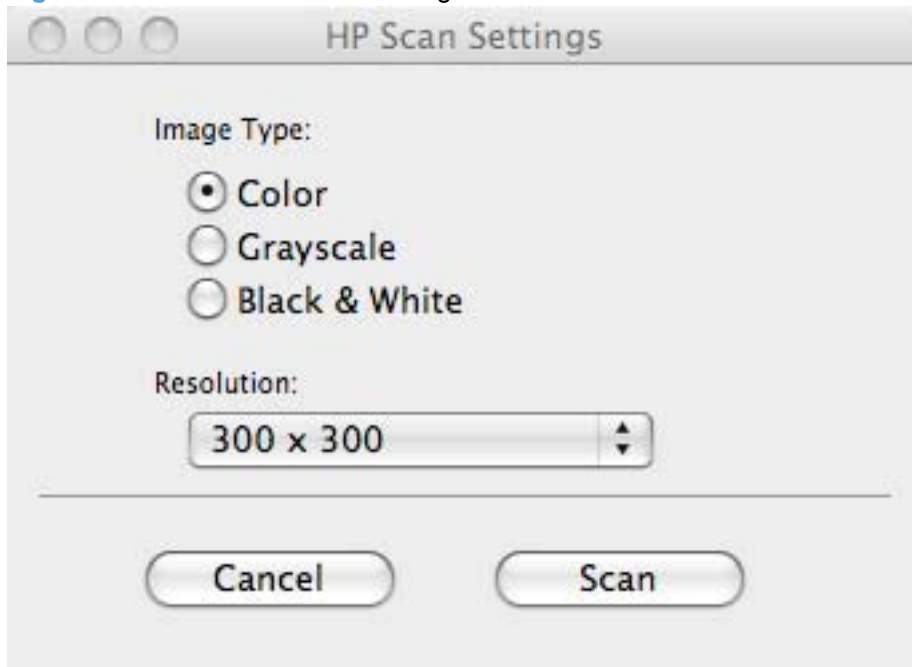
17. The **HP Director** main screen appears. Use HP Director to configure and perform scan, email, and fax functions for the product. Also use HP Director to save and restore NVRAM settings, uninstall the product, and view the product user guide.

Figure 5-13 HP Director main screen





18. Click the **Scan** button to modify scan settings and perform a scan.

Figure 5-14 HP Director scan settings



19. Click the **Email** button to scan a document and send it as email.
20. Click the **Fax** button to scan a document and send it as a fax.
21. Click the **Maintain Device** button to save or restore NVRAM settings.
22. Click the **Remove Device** button to uninstall the product.
23. Click the **User's Guide** button to view the product user guide.
24. Click the **Close** button on the **Install Succeeded** screen to exit from the installer software.

 **NOTE:** HP Director, HP Firmware Upgrade Utility, HP Scan, HP Setup Assistant, and HP Uninstaller can be accessed from a Finder window in the Applications folder within the HP LaserJet M1130/M1210 MFP Series folder.

 **NOTE:** After installing the printing-system software, the product must be set up.

Setup instructions

This section contains information about the following topics:

- [Setting up a printer with Mac OS X V10.4, V10.5, and V10.6](#)
- [Troubleshooting the product setup](#)

Setting up a printer with Mac OS X V10.4, V10.5, and V10.6

Complete these steps *after* completing the printing-system software installation.

1. If you are installing the product using a USB connection, verify the USB cable is connected between the product and the computer. Turn on the product. If you are installing using a network connection, verify that the network cable is connected to the product and that the product is on.
2. In the **Applications** folder (in the **Finder** utility), open the **System Preferences** folder, and then open **Printer & Fax**.
3. If you are installing the product using a USB connection, verify that the product appears in the printer list. The **Name** column in the printer list should display the product name. If this is the case, the USB setup is complete.

If the product does not appear, or if the correct information does not appear in the field, see [Troubleshooting the product setup on page 165](#).

If you are installing the product using a network connection, continue with the following steps.

4. Click the add + icon beneath the **Printer List** to open the **Printer Browser** screen.
5. Select your product model from the list of printers with Bonjour as the Kind. Click the **Add** button.

Troubleshooting the product setup

If the product does not appear in the printer list after an installation:

Complete each one of these solutions in the order given, and restart the setup process after each one to see if the issue has been resolved.

- Verify that the USB or network cable is connected between the product and the computer and that the product is powered on.
- Try disconnecting and reconnecting the cable. If the computer has more than one USB port, try a different USB port.
- Turn the product off and then back on.
- Turn the computer off and then back on.
- If you are using a USB hub on the computer, disconnect any other USB devices from the hub.

If the wrong PPD appears in the Kind column in the printer list after installation:

1. Unplug the USB cable.
2. Delete the print queue with the incorrect type (for example, Generic PostScript Printer).
3. Reinstall the printing-system software.
4. Turn the computer off and then on.
5. Reconnect the USB cable from the computer to the product.

If these steps do not resolve the problem, delete the incorrect print queue, click **Add**, choose the product from the list, and then browse manually for the product PPD.

Remove the printing-system software from Macintosh operating systems

1. Open **Finder**.
2. Navigate to **Applications/HP Laserjet Professional M1130 MFP Series/** or **Applications/HP Laserjet Professional M1210 MFP Series/**.
3. Double-click **HP Uninstaller.app**. The uninstaller will run and remove the software.

6 Engineering Details

Introduction

This chapter presents engineering detail for the following topics:

- [Firmware update](#)
- [Media attributes](#)

Firmware update

The HP LaserJet Professional M1130/M1210 MFP Series products may require periodic updates to their firmware.


The process for updating firmware involves three steps:

1. Determine the current level of firmware that is installed on the product.
2. Obtain the Firmware Update Utility from the HP Web site.
3. Run the Firmware Update Utility to update the new firmware on the product.

Determining the current level of firmware

To determine the current level of firmware, view the configuration page.

Follow these steps to print a product configuration page.

1. On the product control panel, press the Setup  button.
2. Use the arrow buttons to select the **Reports** menu, and then press the **OK** button.
3. Use the arrow buttons to select the **Config report** option, and then press the **OK** button.

On the printed Configuration Page, look in the section marked "Product Information" for the firmware date code. It will look similar to this: Firmware datecode: 20091029.

Download the Firmware Update Utility from the HP Web site


To download the Firmware Update Utility, go to one of the following URLs:

www.hp.com/support/ljm1130series or www.hp.com/support/ljm1210series

Run the Firmware Update Utility


1. Start the Firmware Update Utility. Select the product to update the firmware from the list of available printers, and then click the **Next** button.

Figure 6-1 Firmware Update Utility. List of available printers shown screen.

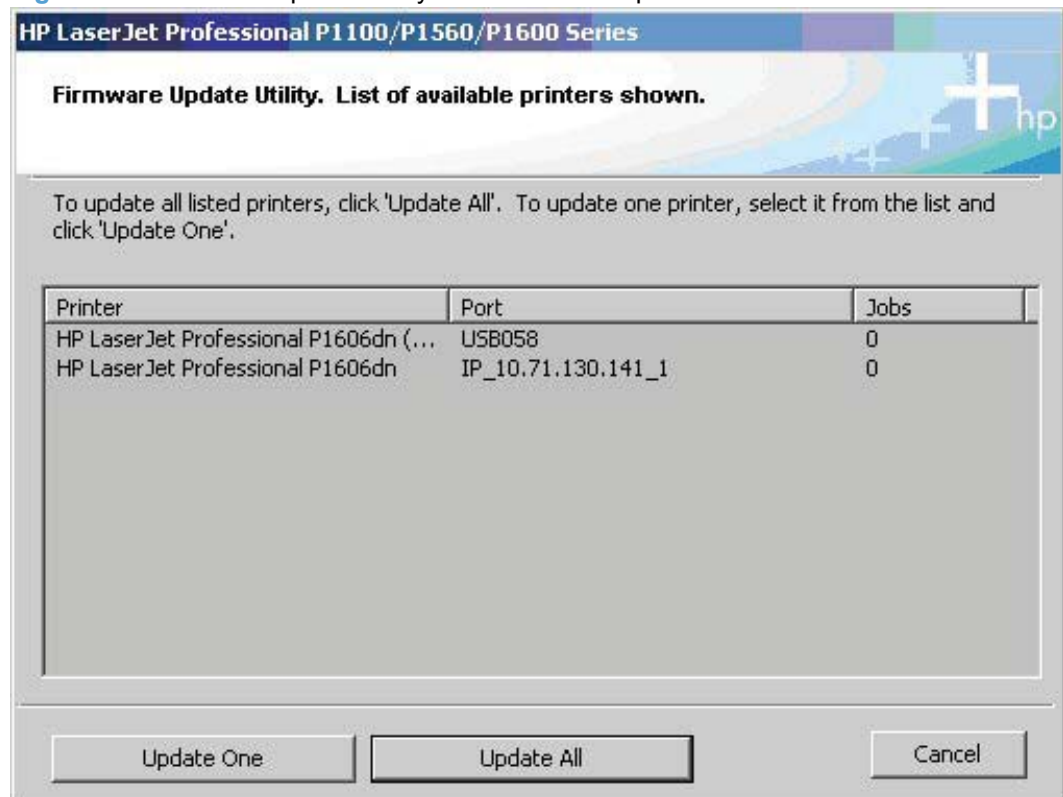

2. Click the **Yes** button to confirm the firmware update on the dialog screen that appears.
3. The following dialog screen appears upon successful updating of the firmware.

Figure 6-2 Firmware update successful screen.

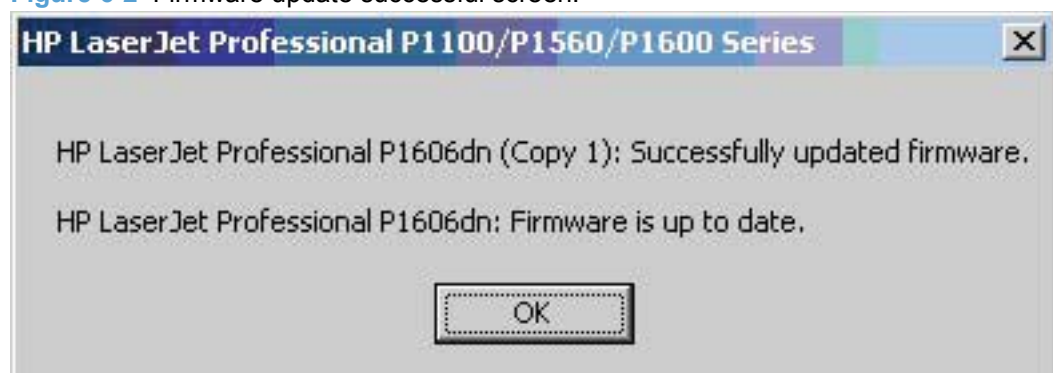

Media attributes

This section includes the following information about paper attributes:

- [Driver-supported paper sizes](#)
- [Driver-supported paper types](#)
- [Custom paper sizes](#)

Driver-supported paper sizes

The following tables list the features and attributes of various paper listed under the **Size Is:** drop-down menu on the **Paper** tab. The list order can vary, depending on the product and operating system. The list contains all of the following sizes, and might contain sizes from other drivers.

Table 6-1 Supported paper and print media sizes

Size	Dimensions	Input tray	Document feeder
Letter	216 x 279 mm (8.5 x 11 in)	✓	✓
Legal	216 x 356 mm (8.5 x 14 in)	✓	✓
A4	210 x 297 mm (8.27 x 11.69 in)	✓	✓
Executive	184 x 267 mm (7.25 x 10.5 in)	✓	✓
A5	148 x 210 mm (5.83 x 8.27 in)	✓	✓
A6	105 x 148 mm (4.13 x 5.83 in)	✓	✓
B5 (JIS)	182 x 257 mm (7.17 x 10.12 in)	✓	✓
16k	184 x 260 mm (7.24 x 10.23 in)		
	195 x 270 mm (7.68 x 10.62 in)	✓	✓
	197 x 273 mm (7.75 x 10.75 in)		
Custom		Minimum: 76 x 127 mm (3 x 5 in)	Minimum: 147 x 211 mm (5.8 x 8.3 in)
		Maximum: 216 x 356 mm (8.5 x 14.0 in)	Maximum: 216 x 356 mm (8.5 x 14.0 in)

Table 6-2 Supported envelopes and postcards

Size	Dimensions	Input tray
Envelope #10	105 x 241 mm (4.13 x 9.49 in)	✓
Envelope DL	110 x 220 mm (4.33 x 8.66 in)	✓
Envelope C5	162 x 229 mm (6.93 x 9.84 in)	✓
Envelope B5	176 x 250 mm (6.7 x 9.8 in)	✓
Envelope Monarch	98 x 191 mm (3.9 x 7.5 in)	✓
Postcard (JIS)	100 x 148 mm (3.94 x 5.83 in)	✓
Double postcard (JIS)	148 x 200 mm (5.83 x 7.87 in)	✓

Driver-supported paper types

The following table shows the paper types that the HP LaserJet Professional M1130/M1210 MFP Series print-drivers support.

Input tray	<p>The input tray supports the following paper types:</p> <ul style="list-style-type: none">• Plain• Light (60-74 g/m²)• Mid-Weight (96-110 g/m²)• Heavy (111-130 g/m²)• Extra Heavy (131-175 g/m²)• Transparency• Labels• Letterhead• Envelope• Preprinted• Prepunched• Color• Bond• Recycled• Rough• Vellum
Document feeder	<p>The document feeder supports paper types that are within the following weight range:</p> <ul style="list-style-type: none">• 60-90 g/m² (16-24 lb bond)



NOTE: For a complete list of specific HP-brand paper that this product supports, go to www.hp.com/sbso/product/supplies.

Custom paper sizes

The following table shows custom paper sizes that are available for the HP LaserJet Professional M1130/M1210 MFP Series product.

Table 6-3 Host-based print driver custom paper sizes

Tray	Dimensions	Minimum	Maximum
Input tray	Width	98.4 mm (3.9 in)	216 mm (8.5 in)
	Length	148 mm (5.8 in)	356 mm (14.0 in)
Document feeder	Width	148 mm (5.83 in)	216 mm (8.5 in)
	Length	210 mm (8.27 in)	297 mm (11.69 in)

Index

A

- accessibility features 5
- accessibility, documentation 33
- Acrobat Reader
 - viewing documentation 23
- ADA (Americans with Disabilities Act) compliance 33
- Add Printer installation 61
- Add Printer Wizard, detailed install
 - existing port for a direct connection, using 63
 - print server connection 62
 - TCP/IP port for direction connection, creating 63
- Adobe Acrobat Reader
 - viewing documentation 23
- Americans with Disabilities Act (ADA) compliance 33
- autorun CD-ROM, Windows 42, 60

B

- Back button, Windows installation dialog boxes 112
- Basic Installation
 - choosing 42
- bin, output
 - capacity 4
 - locating 6
- booklet printing
 - Booklet Printing settings 141
- browsers supported, HP ToolboxFX 47

C

- Cancel button, Windows installation dialog boxes 112
- capacity
 - document feeder 4
 - output bin 4

- cartridge-door release, locating 6
- CD

- CD, about 24
 - Install 60
 - install Windows printing-system software from 60
 - languages, CD 18
 - User CD 17
 - Windows installation from 24
- CD install 81, 88
- CD-ROM

- directory structure, Macintosh 153
 - installer, Windows printing-system software 41
 - installing Macintosh printing-system software 154
- common installer, features 42
- components, software
 - Macintosh 16, 150
 - Windows 16
- configuration page
 - Macintosh 16
- constraint messages
 - print drivers 120
- control panel
 - buttons and lights 11, 12
 - message types 30
 - messages, troubleshooting 30
 - settings 39, 151
 - status-light patterns 28

D

- default printer, setting 113
- Device Status screen, HP ToolboxFX 48
- diagnostics
 - troubleshoot 144
- directory structure
 - Admin CD 17

- directory structure, CD-ROM
 - Macintosh 153

- disk space requirements
 - Macintosh 150
 - Windows 38
 - document feeder
 - capacity 4
 - locating 6
 - documentation
 - User Guide 33
 - viewing 23
 - dots per inch (dpi)
 - specifications 4
 - download
 - firmware 168
 - downloading
 - printing-system software 17
 - dpi (dots per inch)
 - specifications 4
 - drivers
 - Add Printer installation 61
 - quick sets (Windows) 121, 124, 131, 138
 - drivers, install
 - HP Privacy Policy 83, 90
 - license agreement 83, 90
 - recommended software 83, 90

E

- error messages
 - control panel 30

F

- fax ports, locating 9
- features
 - HP ToolboxFX 46
- firmware
 - determine current level 168

- download Firmware Update Utility 168
- update 168

- firmware updates
 - about 168
 - determine current firmware level 168
 - downloading 168
- Full Installation
 - choosing 42

H

- Help
 - print drivers 120
- Help button, Windows installation dialog boxes 112
- Help folder, HP ToolboxFX 48
- Host-based Print Driver
 - features 117
 - settings 117
- HP Driver Diagnostic Printer Check Tool 44
- HP Embedded Web Server 14
- HP EWS
 - about 45
- HP LaserJet Utility, Macintosh
 - about 15, 152
 - Configuration Settings list 15
 - open 15, 152
- HP Toolbox
 - description 14
 - downloading 14
 - supported browsers 14
 - supported operating systems 14
- HP ToolboxFX
 - browsers supported 47
 - Device Status pane 48
 - features 46
 - Help folder 48
 - opening page 47
 - Product Registration screen 55
 - Product Support screen 55
 - sections 46
 - Shop for Supplies screen 55
 - starting 46
 - system requirements 47
 - User Guide 49
- HTML files, viewing 23

I

- Incompatible Print Settings messages. See constraint messages
- input tray
 - locating 6
- installation
 - Add Printer 61
 - CD install 81, 88
 - Macintosh printing-system software 154
 - options 59
 - screenes, Mac OS X 154
 - system requirements for Macintosh 150
 - system requirements for Windows 38, 58
 - troubleshooting Macintosh 165
 - Windows CD-ROM 24
 - Windows printing-system software 58
- installers
 - common, features 42
 - Windows 41, 60
- interface ports
 - locating 8, 9
 - types included 5

L

- languages
 - CD 18
- light patterns
 - control panel 28

M

- Macintosh
 - hardware requirements 150
- Macintosh operating systems
 - directory structure, CD-ROM 153
 - driver settings 152
 - HP LaserJet Utility 15, 152
 - installing printing-system software 154
 - removing software 166
 - screenes, Mac OS X printing-system software
 - installation 154
 - software 152

- software components 150
- support 13
- supported versions 15, 150

Macintosh OS

- troubleshooting setup 165
- manuals. See documentation
- memory
 - included 152
 - installation requirements for Windows operating systems 38
 - Macintosh requirements 150
 - specifications 4
- messages
 - constraint, print drivers 120
 - control panel 30
- Microsoft Windows. See Windows
- operating systems
- model
 - number, locating 10
- models, feature comparison 3

N

- network port
 - locating 9

O

- online help
 - HP ToolboxFX 48
- operating systems
 - availability of software components 16
 - supported 13, 38, 39
 - supported for Macintosh 15
 - supported Macintosh versions 150
- output bin
 - capacity 4
 - locating 6

P

- pages per minute 4
- paper
 - custom sizes 172, ix
 - duplex binding settings, print drivers 140
 - orientation 142
 - settings, print drivers 125
 - types and sizes supported 170

- PDF files
 - viewing 23
- ports
 - locating 8, 9
 - types included 5
- PostScript Printer Description (PPD) files
 - included 152
- PPDs, Macintosh
 - troubleshooting 165
- print cartridges
 - door release, locating 6
- print drivers
 - custom paper sizes 172
 - paper supported 170
- print on both sides
 - manually 139
- printer drivers
 - Advanced tab content 121
 - Advanced tab contents 121
 - Booklet Printing settings, Finishing tab 141
 - change Macintosh settings 152
 - check for most current in use 44
 - Copies settings, Advanced tab 122
 - Document Options settings, Finishing tab 139
 - document preview image 122, 129, 133, 142
 - Effects tab content 131
 - Finishing tab contents 138
 - Flip Pages Up setting, Finishing tab 140
 - gain access to settings 118
 - Help system 120
 - incompatible print settings messages 120
 - Internet Services options, Services tab 144
 - Macintosh 150
 - Macintosh settings 151
 - Orientation settings, Finishing tab 142
 - Page Order settings, Finishing tab 142
 - Pages per Sheet setting, Finishing tab 141

- Paper Options settings, Paper/Quality tab 125
- Paper source setting, Paper/Quality tab 128
- Paper type setting, Paper/Quality tab 129
- Paper/Quality tab
 - contents 124
- print information pages, Services tab 145
- Printer features content 122
- Printing Preferences tab, driver access 118
- Properties tab, driver access 119
- Resizing Options settings, Effects tab 132
- Services tab content 144
- settings 39
- settings for Windows 40
- supported for Windows 14, 39
- version numbers for Windows 42
- Watermarks settings, Effects tab 134
- What's this? Help 120
- printer, setting default 113
- Printing Preferences
 - driver tabs 118
- printing-system software, HP Privacy Policy
 - HP Privacy Policy 83, 90
- printing-system software, install
 - license agreement 83, 90
- printing-system software, recommended
 - recommended software 83, 90
- priority, settings 39, 151
- problem-solving
 - control-panel messages 30
 - status-light patterns 28
- product
 - serial number, locating 10
- product comparison 3
- Product Registration screen, HP ToolboxFX 55
- Product Support screen, HP ToolboxFX 55

- Properties driver tabs
 - gain access to 119

Q

- quick sets 121, 124, 131, 138

R

- registration, product 55
- removing Macintosh software 166
- resolution
 - specifications 4

S

- screen-readable
 - documentation 33
- screenes, printing-system software
 - installation
 - Mac OS X 154
- serial number, locating 10
- settings
 - drivers, Macintosh 152
 - for Windows drivers 40
 - priority 39, 151
- Shop for Supplies screen, HP ToolboxFX 55
- software
 - availability of components 16
 - embedded Web server 14
 - HP Embedded Web Server 45
 - HP LaserJet Utility 15, 152
 - HP Toolbox 14
 - Macintosh 152
 - settings 39, 151
 - supported operating systems 13, 38, 150
 - uninstalling Macintosh 166
 - Windows 13, 38
- specifications
 - features 4
- speed
 - print specifications 4
- status
 - HP Printer Utility, Macintosh 15
- status screen, HP ToolboxFX 48
- status-light patterns 28
- supplies
 - status, viewing with HP LaserJet Utility 15

- supplies, ordering 55
- support, product 55
- supported
 - operating systems 13
 - utilities for Macintosh 15
- system requirements
 - HP ToolboxFX 47
 - Windows 38

T

- TCP/IP port creation 63
- ToolboxFX. *See* HP ToolboxFX
- tray
 - capacity 4
- trays
 - locating 6
- troubleshooting
 - control panel messages 30
 - diagnostics 144
 - HP driver Diagnostic Printer
 - Check Tool 44
 - Macintosh setup 165

U

- uninstall
 - Macintosh software 166
 - products 114
- updating firmware. *See* firmware
- update
- USB port
 - locating 8, 9
 - type included 5
- User Guide 33
- User Guide folder, HP ToolboxFX 49

V

- version numbers, Windows
 - drivers 42
- view HP Privacy Policy 83, 90
- view recommended software 83, 90
- view software license
 - agreement 83, 90

W

- watermarks
 - settings 134
- Web sites
 - downloading software 17
 - Firmware Update Utility 168

- HP Driver Diagnostic Printer
 - Check Tool 44
- Internet Services options,
 - Services tab 144
- Windows operating systems
 - Add Printer installation 61
 - CD for 24
 - CD-ROM, print system 41, 60
 - default printer, setting 113
 - documentation 23
 - driver settings 40
 - driver versions 42
 - drivers supported 14
 - Host-based Print Driver
 - features 117
 - installation options 59
 - installation overview 60
 - installing printing-system 58
 - support 13
 - supported 58
 - supported versions 13, 38
 - system requirements 38, 58

